



# Chapter 1: Product Introduction; Before You Proceed - Asus TUF GAMING H770-PRO WIFI Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

## Bookmarks







# Product Introduction

## 1.1

### Before you proceed

Take note of the following precautions before you install motherboard components or change

any motherboard settings.

- Unplug the power cord from the wall socket before touching any component.
-

Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.

- Hold components by the edges to avoid touching the ICs on them.

- Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.

- Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

- The pin definitions in this chapter are for reference only. The pin names depend on the location of the header/jumper/connector.

- For more information on installing your motherboard, please scan the QR code below:  
**TUF GAMING H770-PRO WIFI**



[Previous Page](#)  
[Next Page](#)

1  
...  
8  
9  
10  
11  
12  
13  
14  
15

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

## Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

## Related Content for Asus TUF GAMING H770-PRO WIFI

[Z790-AYW OC WIFI Chapter 1: Product Introduction](#)

Asus Z790-AYW OC WIFI

[Pro Q670M-CE Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE

[Pro Q670M-CE D4 Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE D4

[PRIME B760M-F D4 Chapter 1: Product Introduction](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Chapter 1: Product Introduction](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Chapter 1: Product Introduction](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Chapter 1: Product Introduction](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Chapter 1: Product Introduction](#)

Asus A620M-AYW WIFI