

Motherboard Overview - Asus TUF GAMING H770-PRO WIFI Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46

--

•

[Table of Contents](#)

•

Bookmarks




1.2

Motherboard overview

Place this side towards the rear of the chassis

Unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage motherboard components.

1-2

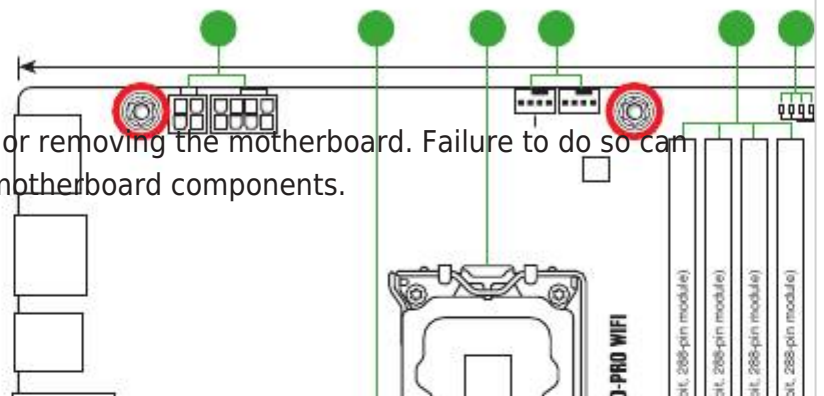

ATX_12V_2
ATX_12V_1
HDMI_DP
U32G2X2_C1
U32G1_E34
U32G1_E12
LAN_U32G2_34
M.2(WIFI)

AUDIO
Intel
Ethernet

PCIEX16(G5)
BATTERY
PCIEX1(G3)_1

PCIEX1(G3)_2
M.2_3(SOCKET3)
Audio
Codec
22110
2280
2260
PCIEX16(G4)
COM_DEBUG
COM
CHA_FAN2
AAFP

24.4cm(9.6in)
AIO_PUMP
CPU_FAN
DIGI+
VRM
LGA1700

2242
2260
2280
M.2_1(SOCKET3)
M.2_2(SOCKET3)
2280
2260
2242
Super
I/O
2242


M.2_4(SOCKET3)
TB_HEADER
USB_1011 USB_1213
SATA6G_3 SATA6G_4
ADD_GEN_2_3
CLRTC
ADD_GEN_2_2
CHA_FAN3

CPU_OPT

1

Intel
H770

2242
2260
2280
128Mb
64Mb
BIOS
BIOS
CHA_FAN4
PANEL

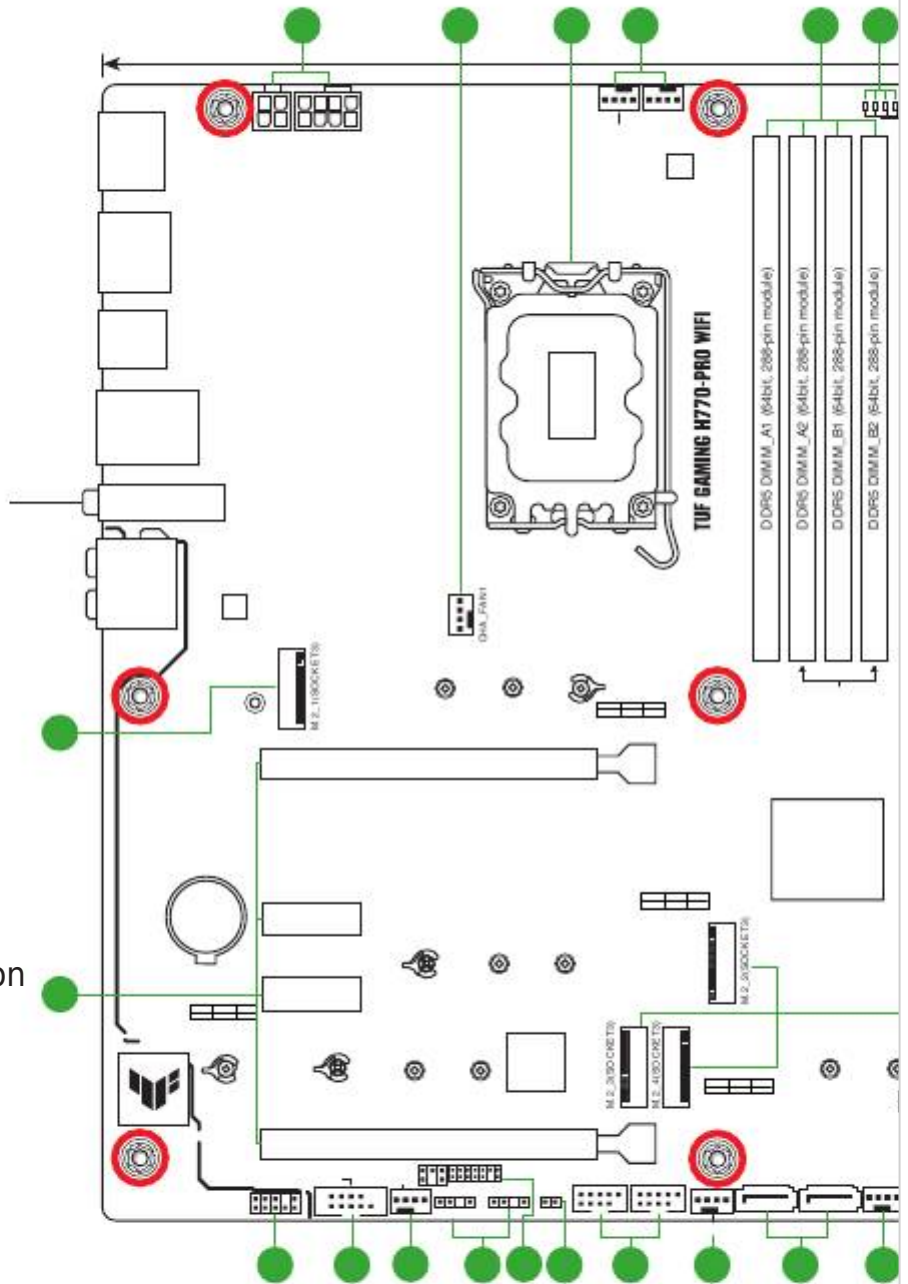

Chapter 1: Product Introduction

[Previous Page](#)
[Next Page](#)

1
...
9
10
11
12
13
14
15
16

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

Related Content for Asus TUF GAMING H770-PRO WIFI

[ROG RAMPAGE V EDITION 10 Motherboard Overview](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Motherboard Overview](#)

Asus Z13PE-D16

[WS X299 SAGE Motherboard Overview](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Motherboard Overview](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Motherboard Overview](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Motherboard Overview](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Motherboard Overview](#)

Asus H110M-P/DVI

[PRIME X570-PRO Motherboard Overview](#)

Asus PRIME X570-PRO