



# Central Processing Unit (Cpu) - Asus TUF GAMING H770-PRO WIFI Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

## Bookmarks







## Audio 2, 4, 5.1 or 7.1-channel configuration

Light Blue  
(Rear panel)  
Lime  
Front Speaker  
(Rear panel)  
Pink  
(Rear panel))  
Black  
(Rear panel)  
Orange  
(Rear panel)

Light Blue (Rear panel)				
Lime				
Front Speaker (Rear panel)				
Pink (Rear panel))				
Black (Rear panel)				
Orange (Rear panel)				

# 1.3

## Central Processing Unit (CPU)

This motherboard comes with a LGA1700 socket designed for 13

Intel  
Core™ & 12  
Gen Intel  
®  
th  
Processors.

Unplug all power cables before installing the CPU.

- Ensure that you install the correct CPU designed for LGA1700 socket only. DO NOT install a CPU designed for LGA1155, LGA1156, LGA1151, and LGA1200 sockets on the LGA1700 socket.

- ASUS will not cover damages resulting from incorrect CPU installation/removal, incorrect CPU orientation/placement, or other damages resulting from negligence by the user.

### Installing the CPU

Take caution when lifting the load lever, ensure to hold onto the load lever when releasing the load lever. Letting go of the load lever immediately after releasing it may cause the load lever to spring back and cause damage to your motherboard.

TUF GAMING H770-PRO WIFI



Front Speaker  
Out  
Out



Rear Speaker

Out

Core™, Pentium

®



1



Front Speaker

Out

-

Rear Speaker

Out

Center/

Subwoofer

Gen

th

Gold and Celeron

®

®

Side Speaker

Out

Front Speaker

Out

-

Rear Speaker

Out

Center/

Subwoofer

1-9



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
16  
17  
18  
19  
20  
21  
22  
23

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

## Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

## Related Content for Asus TUF GAMING H770-PRO WIFI

[WS X299 SAGE Central Processing Unit \(Cpu\)](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Central Processing Unit \(Cpu\)](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Central Processing Unit \(Cpu\)](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Central Processing Unit \(Cpu\)](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Central Processing Unit \(Cpu\)](#)

Asus H110M-P/DVI

[PRIME X570-PRO Central Processing Unit \(Cpu\)](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Central Processing Unit \(Cpu\)](#)

Asus M3N-H/HDMI

[EX-B660M-V5 D4 Central Processing Unit \(Cpu\)](#)

Asus EX-B660M-V5 D4