



# Installation - Asus TUF GAMING H770-PRO WIFI Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

## Bookmarks








 
## 1.5

### M.2 installation

Supported M.2 type varies per motherboard.

If the thermal pad on the M.2 heatsink becomes damaged, we recommend replacing it with a thermal pad with a thickness of 1.25mm.

-  The illustrations only show the installation steps for a single M.2 slot, the steps are the same for the other M.2 slots if you wish to install an M.2 to another M.2 slot.

-  Use a Phillips screwdriver when removing or installing the screws or screw stands mentioned in this section.

- The M.2 is purchased separately.

When installing an M.2 to the M.2 slot, you may need to use the removable screw

stand.

1.

Remove the screws from the heatsink.

2.

Remove the heatsink.

TUF GAMING H770-PRO WIFI



1-13



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
20  
21  
22  
23  
24  
25  
26  
27

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

## Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

## Related Content for Asus TUF GAMING H770-PRO WIFI

[PRIME A620-PLUS WIFI6 Cpu Installation](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Chapter 2: Basic Installation](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Installation Tools And Components](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Cpu Installation](#)

Asus A620M-AYW WIFI

[ROG RAMPAGE V EDITION 10 Installation Tools And Components](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Cpu Heatsink And Fan Assembly Installation](#)

Asus Q170A-IM-A

[WS X299 SAGE Installation Tools And Components](#)

Asus WS X299 SAGE

[PRIME A520M-R Cpu Installation](#)

Asus PRIME A520M-R