



# Bios Setup Program - Asus TUF GAMING H770-PRO WIFI Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

## Bookmarks







## 2.2

### BIOS Setup program

Use the BIOS Setup to update the BIOS or configure its parameters. The BIOS screens include navigation keys and brief onscreen help to guide you in using the BIOS Setup program.

#### Entering BIOS at startup

To enter BIOS Setup at startup, press <Delete> or <F2> during the Power-On Self Test (POST). If you do not press <Delete> or <F2>, POST continues with its routines.

#### Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+<Delete> simultaneously.
  - Press the reset button on the system chassis.
  - Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.
- After doing either of the three options, press <Delete> key to enter BIOS.

- 
- 
- 
- 

## BIOS menu screen

The BIOS Setup program can be used under two modes: EZ Mode and Advanced Mode. You can change modes from Setup Mode in Boot menu or by pressing the <F7> hotkey.

2-2

Ensure that a USB mouse is connected to your motherboard if you want to use the mouse to control the BIOS setup program.

If the system becomes unstable after changing any BIOS setting, load the default settings to ensure system compatibility and stability. Select the Load Optimized Defaults item under the Exit menu or press hotkey <F5>.

If the system fails to boot after changing any BIOS setting, try to clear the CMOS and reset the motherboard to the default value.

The BIOS setup program does not support Bluetooth devices.

## Chapter 2: BIOS and RAID Support

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
29  
30  
31  
32  
33  
34  
35  
36

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

## Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

## Related Content for Asus TUF GAMING H770-PRO WIFI

[PRIME X299-A Series Bios Setup Program](#)

Asus PRIME X299-A Series

[ROG RAMPAGE V EDITION 10 Bios Setup Program](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Bios Setup Program](#)

Asus Q170A-IM-A

[Z13PE-D16 Bios Setup Program](#)

Asus Z13PE-D16

[WS X299 SAGE Bios Setup Program](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Bios Setup Program](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Bios Setup Program](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Bios Setup Program](#)

Asus TUF GAMING B650-E WIFI