

Asus Ez Flash 3 - Asus TUF GAMING H770-PRO WIFI Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46

--

•

[Table of Contents](#)

•

Bookmarks



2.3

ASUS EZ Flash 3

The ASUS EZ Flash 3 feature allows you to update the BIOS without using an OS-based utility.

Ensure to load the BIOS default settings to ensure system compatibility and stability. Select the Load Optimized Defaults item under the Exit menu or press hotkey <F5>.

To update the BIOS:

- This function can support devices such as a USB flash disk with FAT 32/16 format and single partition only.

DO NOT shut down or reset the system while updating the BIOS to prevent system



boot failure!

1.

Insert the USB flash disk that contains the latest BIOS file to the USB port.

Enter the Advanced Mode of the BIOS setup program. Go to the Tool menu to select

2.

ASUS EZ Flash 3 Utility and press <Enter>.

Press the Left/Right arrow keys to switch to the Drive field.

3.

4.



Press the Up/Down arrow keys to find the USB flash disk that contains the latest BIOS, and then press <Enter>.

Press the Left/Right arrow keys to switch to the Folder field.

5.

6.



Press the Up/Down arrow keys to find the BIOS file, and then press <Enter> to perform the BIOS update process. Reboot the system when the update process is done.

TUF GAMING H770-PRO WIFI

2-3

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
30
31
32
33
34
35
36
37

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

Related Content for Asus TUF GAMING H770-PRO WIFI

[Z790 GAMING WIFI7 Asus Ez Flash 3](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Asus Ez Flash 3 Utility](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Asus Ez Flash 3](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Asus Ez Flash 3](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Asus Ez Flash 3 Utility](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Asus Ez Flash Utility](#)

Asus Z13PE-D16

[WS X299 SAGE Asus Ez Flash 3 Utility](#)

Asus WS X299 SAGE

[PRIME A520M-R Asus Ez Flash 3](#)

Asus PRIME A520M-R