

Asus Crashfree Bios 3 - Asus TUF GAMING H770-PRO WIFI Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46


--

•

[Table of Contents](#)

•

Bookmarks

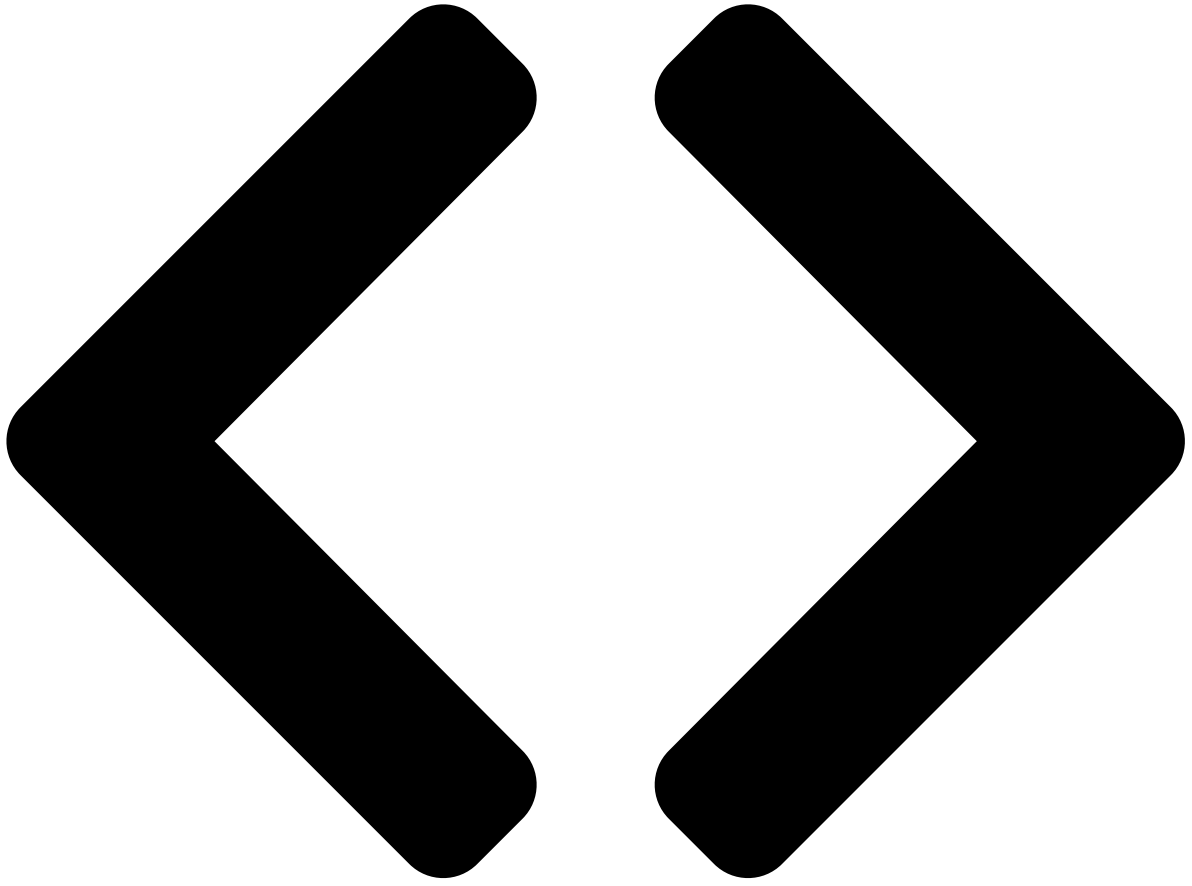

2.4

ASUS CrashFree BIOS 3

The ASUS CrashFree BIOS 3 utility is an auto recovery tool that allows you to restore the BIOS file when it fails or gets corrupted during the updating process. You can restore a corrupted BIOS file using a USB flash drive that contains the BIOS file.

Recovering the BIOS

1.

Download the latest BIOS version for this motherboard from <https://www.asus.com/support/>.

Rename the BIOS file as ASUS.CAP or TGH770PW.CAP and copy the renamed BIOS

2.

file to a USB flash drive.

3.

Turn on the system.

4.

Insert the USB flash drive containing the BIOS file to a USB port.

5.

The utility automatically checks the devices for the BIOS file. When found, the utility reads the BIOS file and enters ASUS EZ Flash 3 automatically.

6.

The system requires you to enter BIOS Setup to recover the BIOS setting. To ensure system compatibility and stability, we recommend that you press <F5> to load default BIOS values.

DO NOT shut down or reset the system while updating the BIOS! Doing so can cause system boot failure!

2-4

Chapter 2: BIOS and RAID Support

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
31
32
33
34
35
36
37
38

Quick Links:

[Motherboard Overview](#)

[System Memory](#)

[Installation](#)

[Bios Setup Program](#)

Related Manuals for Asus TUF GAMING H770-PRO WIFI

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H770-PLUS D4 Manual](#)

(38 pages)

[Motherboard Asus H81M-C User Manual](#)

H81m-c user's manual (74 pages)

[Motherboard ASUS H81T User Manual](#)

(73 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus TUF H310-PLUS GAMING Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus H310I-IM-A R2.0 Manual](#)

Industrial motherboard (59 pages)

[Motherboard Asus PRIME H310M-K Manual](#)

(27 pages)

[Motherboard Asus PRIME H410I-PLUS Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

Related Content for Asus TUF GAMING H770-PRO WIFI

[Z790 GAMING WIFI7 Asus Crashfree Bios 3](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Asus Crashfree Bios 3](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Asus Crashfree Bios 3](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Asus Crashfree Bios 3](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Asus Crashfree Bios 3](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Asus Crashfree Bios 3 Utility](#)

Asus Z13PE-D16

[WS X299 SAGE Asus Crashfree Bios 3](#)

Asus WS X299 SAGE

[PRIME A520M-R Asus Crashfree Bios 3](#)

Asus PRIME A520M-R