



# Asus Z00VD User Guide

## Contents

- 1 Front features
- 2 Side features
- 3 Rear features
- 4 Charging your ASUS Phone
- 5 Installing a micro SIM card
- 6 Installing a microSD card
- 7 Safety information
  - 7.1 ASUS Phone care
  - 7.2 Operator access with a tool
- 8 Documents / Resources
  - 8.1 References
  - 8.2 Download manual

Before you start, ensure that you have read all the safety information and operating instructions in this User Guide to prevent injury or damage to your device.

NOTE: For the latest updates and more detailed information, please visit [www.asus.com](http://www.asus.com).

## Front features

## Side features

NOTE: Pry open the rear cover from the groove.

## Rear features

### NOTES:

- Remove the rear cover to display the dual micro SIM and microSD card slots.
- The micro SIM card slots support WCDMA and GSM/EDGE network bands.
- The microSD card slot supports microSD and microSDHC card formats.

## Charging your ASUS Phone

To charge your ASUS Phone:

1. Connect the USB connector into the power adapter's USB

port.

2. Connect the other end of the micro USB cable to your ASUS Phone.
3. Plug the power adapter into a wall socket.

- When using your ASUS Phone while it is plugged to a power outlet, the grounded power outlet must be near to the unit and easily accessible.
- When charging your ASUS Phone through your computer, ensure that you plug the micro USB cable to your computer's USB 2.0 / USB 3.0 port.
- Avoid charging your ASUS Phone in an environment with ambient temperature of above 35 °C (95 °F).

#### NOTES:

- Use only the power adapter that came with your device. Using a different power adapter may damage your device.
- Using the bundled power adapter and ASUS Phone signal cable to connect your ASUS Phone to a power outlet is the best way to charge your ASUS Phone.
- Use the ASUS 5W power adapter and ASUS USB cable to get the best fast-charge experience when your ASUS Phone is in sleep mode.
- The input voltage range between the wall outlet and this

adapter is AC 100V - 240V. The output voltage of the micro USB cable is +5.2V 1A, 5W.

## Installing a micro SIM card

To install a micro SIM card:

1. Locate the groove on the lower-right corner of your ASUS Phone.
2. Pry the cover loose and then pull the rear cover off.
3. Remove the battery.
4. Insert the micro SIM card into one of the micro SIM card slots.

Use only a micro SIM card on your ASUS Phone. A trimmed SIM card may not properly fit into and may not be detected by your ASUS Phone.

NOTE: Both micro SIM card slots support 3G/2G WCDMA network bands. But only one micro SIM card can connect to 3G WCDMA service at a time.

## Installing a microSD card

To install a microSD card:

1. Locate the groove on the lower-right corner of your ASUS Phone.
2. Pry the cover loose and then pull the rear cover off.
3. Remove the battery.
4. Insert the microSD card into the microSD card slot.

Do not use sharp tools or solvent on your device to avoid scratches on it.

## Safety information

### ASUS Phone care

- Use your ASUS Phone in an environment with ambient temperatures between -10°C (14°F) and 35°C (95°F).

#### The battery

Your ASUS Phone is equipped with a high performance non-detachable Li-Ion battery. Observe the maintenance guidelines for a longer battery life.

- Do not remove the non-detachable Li-on battery as this will void the warranty.
- Avoid charging in extremely high or low temperature. The

battery performs optimally in an ambient temperature of +5°C to +35°C.

- Use only ASUS battery. Using a different battery may cause physical harm/injury and may damage your device.
- Do not remove and soak the battery in water or any other liquid.
- Never try to open the battery as it contains substances that might be harmful if swallowed or allowed to come into contact with unprotected skin.
- Do not remove and short-circuit the battery, as it may overheat and cause a fire. Keep it away from jewelry or metal objects.
- Do not remove and dispose of the battery in fire. It could explode and release harmful substances into the environment.
- Do not remove and dispose of the battery with your regular household waste. Take it to a hazardous material collection point.
- Do not touch the battery terminals.

#### NOTES:

- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used battery according to the instructions.

#### The charger



- Use only the charger supplied with your ASUS Phone.
- Never pull the charger cord to disconnect it from the power socket. Pull the charger itself.

Your ASUS Phone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on the (1) AC Adapter.

- Do not use the ASUS Phone in an extreme environment where high temperature or high humidity exists. The ASUS Phone performs optimally in an ambient temperature between -10°C (14°F) and 35°C (95°F).
- Do not disassemble the ASUS Phone or its accessories. If service or repair is required, return the unit to an authorized service center. If the unit is disassembled, a risk of electric shock or fire may result.
- Do not short-circuit the battery terminals with metal items.

## Operator access with a tool

If a TOOL is necessary to gain access to an OPERATOR ACCESS AREA, either all other compartments within that area containing a hazard shall be inaccessible to the OPERATOR by the use of the same TOOL, or such compartments shall be marked to discourage OPERATOR access.

## Documents / Resources

### References

[ASUS USA](#)

### Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus Z00VD User Guide](#)

### Need Assistance?

Do you have a question about the Z00VD that isn't answered in the manual? Leave your question here.

■ ■

Stay updated with the latest solutions

Submit your question

## Related Manuals for Asus Z00VD

[Cell Phone ASUS Z008D User Manual](#)

(2 pages)

[Cell Phone Asus ZenUI User Manual](#)

(155 pages)

[Cell Phone Asus Z00XS ZX551ML User Manual](#)

(154 pages)

[Cell Phone Asus ZenFone 3 Deluxe User Manual](#)

(21 pages)

[Cell Phone Asus Z016D User Manual](#)

(20 pages)

[Cell Phone Asus Z01GD User Manual](#)

(23 pages)

[Cell Phone Asus Z01FD User Manual](#)

(19 pages)

[Cell Phone Asus ROG Phone User Manual](#)

(19 pages)

[Cell Phone Asus Z01GS User Manual](#)

(21 pages)

[Cell Phone Asus Live G500TG User Manual](#)

(99 pages)

[Cell Phone Asus ZenFone Selfie User Manual](#)

(157 pages)

[Cell Phone Asus ZENFONE GO ZB450KL User Manual](#)

(102 pages)

[Cell Phone Asus X00BD User Manual](#)

(23 pages)

[Cell Phone Asus ROG PHONE ZS600KL User Manual](#)

(90 pages)

[Cell Phone Asus Zenfone 5 User Manual](#)

(90 pages)

[Cell Phone Asus Zenfone7 User Manual](#)

(81 pages)

[Cell Phone Asus ROG Phone 5 User Manual](#)

(83 pages)

[Cell Phone Asus Zenfone 2 Laser User Manual](#)

(154 pages)

[Cell Phone Asus ZENFONE 2 User Manual](#)

(161 pages)

[Cell Phone Asus ZenFone V Live User Manual](#)

(64 pages)

[Save Article as PDF](#)