



ASUS PCE-AX58BT - AX3000 Dual-Band PCIe Wi-Fi Adapter Quick Start

Contents

[1 Setting up a Home Network](#)

[2 Videos](#)

[2.1 How to Install a Wifi Card Video](#)

[3 Documents / Resources](#)

[3.1 Download manual](#)

Setting up a Home Network

1. Turn off your computer, unplug the power cord, and open the system cover. Insert the PCE-AX58BT wireless adapter onto the PCI Express x1 slot, and ensure that it is seated completely.
2. Insert the support CD into the optical drive and follow the onscreen instructions to complete the Wi-Fi installation.
3. When the setup is complete, connect your desktop PC to the Internet wirelessly via PCE-AX58BT.
4. Connect one end of the bundled USB cable to the USB port on PCE-AX58BT and the other end to the F_USB connector on the motherboard.

Insert the support CD into the optical drive and follow the onscreen instructions to complete the Bluetooth installation.

5. Adjust the antenna base to get the best signal with your router.

1. Turn off your computer, unplug the power cord, and open the system cover. Insert the PCE-AX58BT wireless adapter onto the PCI Express x1 slot, and ensure that it is seated completely.

2. Insert the support CD into the optical drive and follow the onscreen instructions to complete the Wi-Fi installation.

3. When the setup is complete, connect your desktop PC to the Internet wirelessly via PCE-AX58BT.

4. Connect one end of the bundled USB cable to the USB port on PCE-AX58BT and the other end to the F_USB connector on the motherboard.

Insert the support CD into the optical drive and follow the onscreen instructions to complete the Bluetooth installation.

5. Adjust the antenna base to get the best signal with your router.

* Enjoy high-speed performance by enabling 160 MHz bandwidth on your router.

Videos

How to Install a Wifi Card Video

Documents / Resources

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download ASUS PCE-AX58BT - AX3000 Dual-Band PCIe Wi-Fi Adapter Quick Start](#)



Need Assistance?

Do you have a question about the PCE-AX58BT that isn't answered in the manual?
Leave your question here.



Stay updated with the latest solutions
Submit your question

Related Manuals for Asus PCE-AX58BT

[Modem Asus DSL-AC68U Quick Start Manual](#)

Dual-band 802.11ac vdsl/adsl modem router (108 pages)

[Modem Asus 4G-N16 Quick Start Manual](#)

Wireless-n300 lte modem router (148 pages)

[Modem Asus 4G-N16 Manual](#)

Wireless-n300 lte modem router (13 pages)

[Modem Asus CMAX6000 User Manual](#)

Wireless ax docsis 3.1 cable modem router (47 pages)

[Modem Asus 4G-AC68U Quick Start Manual](#)

Wireless-ac1900 lte modem router (51 pages)

[Modem Asus PCE-AC88 Quick Start Manual](#)

(2 pages)

[Modem Asus 4G-AC53U Quick Start Manual](#)

Wireless-ac750 lte modem router (44 pages)

[Modem Asus USB SpaceLink Client Quick Start Manual](#)

(6 pages)

[Modem Asus WL-600g Quick Start Manual](#)

All-in-1 wireless adsl2/2+ home gateway (227 pages)

[Modem Asus AAM6000UG User Manual](#)

Usb adsl modem for software version 9.5 (26 pages)

[Modem Asus USB-AC68 Quick Start Manual](#)

Dual-band ac1900 usb 3.0 wi-fi adapter (2 pages)

[Modem Asus DSL-N17U Quick Start Manual](#)

(113 pages)

[Modem Asus PCE-AC68 Quick Start Manual](#)

Wireless local area network card (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[Modem Asus T500 Service Manual](#)

(31 pages)

[Save Article as PDF](#)