



Toshiba DW-15F3(BS)-NZ Instruction Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37

--

-

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Program Setting](#)

[2 Installation](#)

[Download this manual](#)



DISHWASHER

INSTRUCTION MANUAL

Model:

TOSHIBA

DW-15F3(BS)-NZ

Read these instructions carefully before using your
DISHWASHER, and keep it carefully.



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba DW-15F3(BS)-NZ

[Dishwasher Toshiba DW-14F2MESS Instruction Manual](#)

(36 pages)

[Dishwasher Toshiba DWS-22A Series Service Manual](#)

(62 pages)

[Dishwasher Toshiba DW-08T1\(S\)-MY Instruction Manual](#)

(34 pages)

[Dishwasher Toshiba DW-14F1ME\(W\)-IQ Instruction Manual](#)

(36 pages)

[Dishwasher Toshiba DWS-22AHK Instruction Manual](#)

(29 pages)

[Dishwasher Toshiba DW-08T1CIS-UA Instruction Manual](#)

(35 pages)

[Dishwasher Toshiba DW-15F5\(SS\)-NZ Instruction Manual](#)

(37 pages)

[Dishwasher Toshiba DWS-34AHK Instruction Manual](#)

(41 pages)

[Dishwasher Toshiba DW-14F1\(SS\)-NZ Instruction Manual](#)

(34 pages)

Summary of Contents for Toshiba DW-15F3(BS)-NZ

[Page 1](#) DISHWASHER INSTRUCTION MANUAL Model: DW-15F3(BS)-NZ Read these instructions carefully before using your DISHWASHER, and keep it carefully.

[Page 2](#) SAFETY INSTRUCCIONES All instructions described should be carefully read and followed. These instructions are precautions to prevent the risks of serious injury or death of the user, and any damages to property. MARKINGS WARNING indicates high possibility of serious injury (*1) or WARNING death of the user.

[Page 3](#) Before cleaning or maintaining the dishwasher, disconnect the power plug first. Disconnect power plug Do not connect or disconnect the power plug by wet hand. No touch This may cause electric shock or fault and cause injuries. by wet hand Do not use damaged power lines, power plug or loose power socket.

[Page 4](#) Insert the power plug securely to the base and let the cord go downward. If the cord goes upward or if the plug is incompletely inserted, it may cause fire due Insert plug to electric leakage or heat generation. Do not operate by putting easily combustible items such as towels and cloth inside the cabinet of the dishwasher.

[Page 5](#) When disconnecting the plug from the socket, do not pull the power line by force. Pull out by grasping the power plug. It may cause electric shock or fault and cause No pulling injuries. by force Do not use soap, washing powder or other hand sanitizer. Only dishwashing powder suitable for automatic dishwasher.

[Page 6](#) Quantity of tableware advised: 162 pcs (Cup x15 + Saucer x15 + Glass x15 + Dessert dishes x15 + Dinner plate x15 + Soup plate x15 + Soup spoon x15 + Loading Fork x15 + Knife x15 + Teaspoon x15 + Dessert spoon x15) capacity Do not strongly push open door and main body, nor put the downward pressure to the door.

[Page 7](#) Treatments Handle the package of the dishwasher with extreme care. All packages

are recyclables. Plastic parts are marked with abbreviation of international standard; Polyethylene, e.g., tableted package material Polystyrene, e.g., packing material Polymethyl, e.g., plastic clip Polymer, e.g., control panel Polypropylene, e.g., inner wall Warning The packing material may be dangerous to children!

[Page 8: Table Of Contents](#)

Contents Please carefully read the instruction manual before using the dishwasher, and this is helpful for the use and maintenance of the product. Recognize the dishwasher Dishwasher features Control panel Program Setting Washing program Start up Changing the program mid-cycle Put additional dishes in Auto Open End of washing program...

[Page 9](#) Installation Product dimension Power connection Water connection Connection of drain hoses Troubleshooting Before connecting customer service center Error code Specification Product fiche...

[Page 10: Recognize The Dishwasher](#)

Recognize the dishwasher Important: Before using the dishwasher for the first time, read following instructions to ensure the best results. Dishwasher features Top spray arm Lower spray arm Filter Dispenser Upper spray arm Cup rack Cutlery rack Upper basket Lower basket...

[Page 11: Control Panel](#)

Control panel Power Press this button to turn on your dishwasher. Select the appropriate washing program and the corresponding Program indicator will light up. AUTO Light to heavily soiled daily used items, automatic detection of the amount of soils. INTENSIVE For dishes with oil stains and heavy dirty cooking utensils and dishes.

[Page 12](#) Function Select a function and the corresponding indicator will light up. POWER WASH To wash very dirty, hard to clean dishes. It can only be used with Intensive, Hygiene, Eco, Glass, 90min. Reduce the program time. TURBO SPEED+ It can only be used with Intensive, Hygiene, Eco, Glass, 90min.

[Page 13: Program Setting](#)

Program Setting Washing program The table below shows which programs are best for the levels of food residue on them and how much dishwashing powder is needed. It also show various information about the programs. Highest Water Dishwashing Time Power Water Program Temperature...

[Page 14: Start Up](#)

Start up 1. The plug shall be firstly plugged into the socket. Power supply shall be of 220-240V AC 50Hz type, with socket of 10 A 220-240V AC. 2. Make sure that the water supply is turned on to full pressure. 3.

[Page 15: Put Additional Dishes In](#)

additional dishes in Additional dishes can be placed in at any time before dishwasher program start. If you want to reload dishes in the process of washing, please follow instructions below: 1. Open the door a little to stop the dishwasher, after the spray arm stop working, you can open the door completely.

[Page 16: End Of Washing Program](#)

End of washing program After the program finishes, the machine show "End" after the buzzer beeps for 8 seconds. Turn off the machine Press ON/OFF button to turn off the dishwasher. Open the door carefully Hot dishes are more likely to be damaged. The dishes shall be cool for about 15 minutes and then taken out from the dishwasher.

[Page 17: Use The Dishwasher](#)

Use the dishwasher Function of the rinse aid and detergent The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes.

[Page 18: Adding Rinse Aid To The Dispenser](#)

Adding rinse aid to the dispenser Remove the rinse reservoir cap by lifting up the handle . Pour the rinse aid into the dispenser, being careful not to overfill. Close the cap after all. Adjusting the rinse aid reservoir To achieve a better drying performance with limited rinse aid, the dishwasher is designed to adjust the consumption by user.

[Page 19: Adding Rinse Aid To The Dispenser](#)

Adding detergent to the dispenser Three ways to open the cover: Sliding it to the right B B B Press down Add detergent into the larger cavity (A) for main wash. For better cleaning result, especially if you have very dirt items, pour a small Press in amount of detergent onto the door.

[Page 20: Install Dishwasher Bowl Basket](#)

Install dishwasher bowl basket Suggestion Purchase dishes suitable for dishwasher. Use a suitable mild dishwashing powder. If necessary, consult the manufacturer for more information. For special appliances, try to select a washing program that with a lower temperature. Do not take out the glass dishes immediately after the program ends to prevent damage. Use the dishwashing machine rationally Not for: Limited use:...

[Page 21](#) Item Number Cups 2 2 2 1 1 1 3 3 3 Saucers 3 3 3 3 3 Glasses 1 1 1 4 4 4 5 5 4 4 4 Item Number Dinner plates 1 1 1 1 1 1 Soup plates Dessert dishes 6 6 6...

[Page 22](#) Loading the cutlery rack The cutlery rack is best suited for washing flatware and most cooking or serving utensils. The separators on the cutlery racks help keep flatware separated to avoid damage and improve cleaning. Item Number Forks Soup spoons Dessert spoons Teaspoons Knives...

[Page 23: Basket Used Tips](#)

Basket used tips Easy removal of cutlery Using the principle of crank slider mechanism, the cutlery are suspended. Convenient finger goes deep under the knife and fork, and holds several cutlery at a time. Make the most of space It can accommodate dishes such as egg beaters, cups, etc., and does not affect the upper basket.

[Page 24](#) Lift the right basket up, both left and right baskets are flat. Move the right basket from right to left, two basket are overlapping. Remove the right basket from the tray, only has the left basket.

[Page 25](#) Adjusting the upper basket upper basket just lift upper basket, lift the...

[Page 27: Cleaning And Care](#)

Cleaning and care Filter cleaning The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly and clean them if necessary under running water. Follow the steps below to clean the filters in the wash cabinet.

[Page 28: Spray Arms Cleaning](#)

Spray arms cleaning It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings. To clean the spray arms, follow the instructions below: To remove the upper spray arm, To remove the lower spray arm, pull hold the nut in the center still and out the spray arm upward.

[Page 29: Care And Maintenance](#)

Care and maintenance The door and the door seal Clean the door seals regularly with a soft damp cloth to remove food deposits. When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arms.

[Page 30: Installation](#)

Installation Product dimension W W W H H H Height (H) 845mm Width (W) 598mm Depth (D1) 600mm (with the door closed) Depth (D2) 1175mm (with the door opened 90°)

[Page 31: Power Connection](#)

Warning Electric Shock The machine shall be installed after the power is off. If not, electric shock or death can be caused. Please make sure the machine is properly grounded before use.
Power connection Warning Electric Shock Do not use an extension cord or power adapter on this machine. In case, do not cut off or remove the grounding connection of power cord.

[Page 32: Connection Of Drain Hoses](#)

Connection of drain hoses Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The height of drain pipe must be less than 1000mm.

[Page 33: Troubleshooting](#)

Troubleshooting Before connecting customer service center Please check the chart below before connecting customer service center Problem Possible cause Solutions Replace fuse or reset circuit breaker Remove any other appliances that share Fuse burn-out or circuit trip. same circuit with the dishwasher. The machine is Make sure that dishwasher is on and the not working...

[Page 34](#) Problem Possible cause Solutions Noise from Suspend the program and reposition the Dishes are loose. dishwasher dishes. This may be caused by site Beats in water In case of any doubts, please contact installation or cross section pipe Please see "Install dishwasher bowl basket" Dishes are not placed correctly.

[Page 35: Error Code](#)

Error code When failure occurs, error code will appear to remind you: Error code Code name Possible cause Long water Flow-meters, drain valves, or pump failures intake time shall be repaired by qualified serviceman. Heating pipe or thermistor is at abnormal state, which needs to be unplugged the Abnormal heating power plug from the outlet , and needs to...

[Page 36: Specification](#)

Specification Model DW-15F3(BS)-NZ 598 (W) x 845 (H) x 600 (D) Dimension (mm) 220-240V Rated voltage 50Hz Rated frequency 1760-2100W Rated power 12 L Water consumption 0.62 kWh Power consumption Electronic type Control mode IP×1 162 pcs (Cup x15 + Saucer x15 + Glass x15 + Dessert dishes x15 +...

[Page 37: Product Fiche](#)

Product fiche Manufacturer TOSHIBA Type / Description DW-15F3(BS)-NZ Standard place settings Energy efficiency class Water consumption class Standard cleaning cycle Energy consumption of the standard cleaning cycle 0.62 kWh Water consumption of the standard cleaning cycle 12 liter Program duration of the standard cleaning cycle...