



ASUS P306 TUF GAMING M4 - Wireless Optical Gaming Mouse Manual

Contents

1 Package Contents

2 Specifications

3 Mouse features

4 Installing the battery

5 Removing the battery

6 Removing the USB Dongle

7 Replacing the USB Dongle

8 Connecting your gaming mouse

9 Updating the firmware and customization

10 Battery Status

11 Documents / Resources

11.1 References

11.2 Download manual

Package Contents

Specifications

Resolution	DPI 1	DPI 2	DPI 3 (Default)	DPI 4
	Red	Purple	Blue	Green
100 DPI to 12000 DPI	400 DPI	800 DPI	1600 DPI	3200 DPI

* You may customize the DPI settings for DPI 1-4 through Armoury Crate.

Mouse features

1. Left-click button
2. Scroll wheel
3. Right-click button
4. DPI Indicator
5. DPI button
6. Forward button
7. Backward button
8. Mouse feet
9. Optical sensor
10. Connection mode switch

Installing the battery

Removing the battery

Removing the USB Dongle

Replacing the USB Dongle

Connecting your gaming mouse

Setting up your gaming mouse as a Bluetooth wireless mouse

1. Set the connection switch to the Bluetooth mode.

NOTE: Only follow step 2 when pairing your gaming mouse to a different device.

2. Press and hold the Left-click button, Right-click button and DPI button for 3 seconds until the DPI indicator LED blinks blue.
3. The DPI indicator LED will light up blue for 5 seconds then switch back to the original lighting effect after successfully pairing.

NOTE: If you are pairing Bluetooth for the first time and fails after 1 minute, the DPI indicator LED lights up red for 5 seconds then reverts back to the original lighting effect.

Setting up your gaming mouse as a RF wireless mouse

1. Connect the USB dongle to a USB port on your computer.
2. Set the connection switch to the RF 2.4G Wireless mode.

Updating the firmware and customization

1. Connect the USB dongle to a USB port, and set your gaming mouse to the RF 2.4G Wireless mode.
2. Download and install the Armoury Crate from https://www.asus.com/supportonly/Armoury%20Crate/HelpDesk_Download/
3. Follow the software instructions to update your gaming mouse and dongle's firmware.
4. Customize your gaming mouse using Armoury Crate.

Battery Status

The DPI indicator LED will blink red when the battery power is

below 20%, and continue until the battery power is depleted.

Documents / Resources

References

[Armoury Crate - Support](#)

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download ASUS P306 TUF GAMING M4 - Wireless Optical Gaming Mouse Manual](#)

Need Assistance?

Do you have a question about the P306 TUF GAMING M4 that isn't answered in the manual? Leave your question here.

■ ■

Stay updated with the latest solutions
Submit your question

Related Manuals for Asus P306 TUF GAMING M4

[Asus ROG KERIS WIRELESS P513 - Wireless Gaming Mouse Manual](#)

(article)

[Asus MW202, MW202-D - Silent Wireless Mouse Quick Start Guide](#)

(article)

[Asus MW203, MW203-D - Mouse Manual](#)

(article)

[Asus ROG GLADIUS III WIRELESS - Wireless Gaming Mouse Manual](#)

(article)

[Asus ROG KERIS P509 - Optical Gaming Mouse Manual](#)

(article)

[ASUS ROG CHAKRAM X - Gaming Mouse Manual And Review Video](#)

(article)

[Asus ROG CLADIUS III P514 - Optical Gaming Mouse Quick Start Guide](#)

(article)

[Mouse Asus ROG Gladius II Manual](#)

(58 pages)

[Mouse Asus SPATHA L701 Quick Start Manual](#)

Wired/wireless gaming mouse (59 pages)

[Mouse Asus ROG STRIX CARRY Quick Start Guide](#)

(60 pages)

[Mouse Asus ROG Spatha Manual](#)

(5 pages)

[Mouse Asus ROG Spartha Manual](#)

(78 pages)

[Mouse Asus ROG Pugio Quick Start Manual](#)

(32 pages)

[Mouse Asus ROG Gladius II Quick Start Manual](#)

(55 pages)

[Mouse Asus ROG STRIX CARRY Quick Start Manual](#)

(38 pages)

[Mouse Asus WT425 Quick Start Manual](#)

Wireless optical mouse (2 pages)

[Save Article as PDF](#)