

 


# Toshiba 32AV800E Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29



•

- 

Troubleshooting


•

## Bookmarks

[Download this manual](#)

## Quick Links



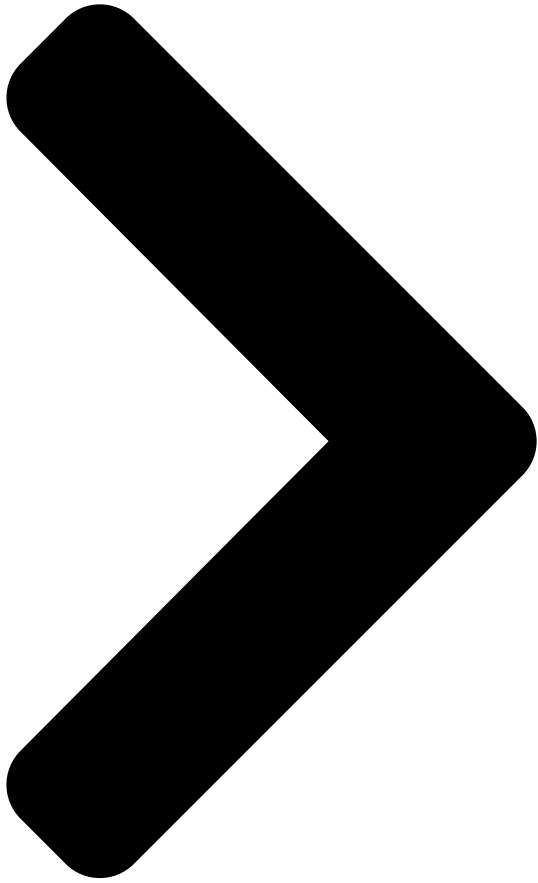

**O**

**OWNER'S**

**LCD COLOUR TV**  
**TOSHIBA**

**32AV800E** Leading Innovation >>>

**32AV800T**

© 2011 TOSHIBA CORPORATION  
All Rights Reserved

# M

# ANUAL

32AV800V

# TOSHIBA

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 32AV800E

[LCD TV Toshiba 26EL833G Owner's Manual](#)

Digital series (60 pages)

[LCD TV Toshiba 32AV800AZ Owner's Manual](#)

Integrated digital lcd tv (50 pages)

[LCD TV Toshiba 26AV502U Owner's Manual](#)

Integrated high definition lcd television (62 pages)

[LCD TV Toshiba 26AV52U Owner's Manual](#)

Integrated high definition lcd television (66 pages)

[LCD TV Toshiba 32AV500 Owner's Manual](#)

(32 pages)

[LCD TV Toshiba 26AV500U Owner's Manual](#)

Integrated high definition lcd television (57 pages)

[LCD TV Toshiba 32AV500U Service Manual](#)

(28 pages)

[LCD TV Toshiba 26AV502RY Owner's Manual](#)

Integrated high definition lcd television (64 pages)

[LCD TV Toshiba 26AV52R Service Material And Reference Tips](#)

(11 pages)

[LCD TV Toshiba 26AV713B Owner's Manual](#)

Digital series (57 pages)

[LCD TV Toshiba 19AV703 Owner's Manual](#)

Analogue series (34 pages)

[LCD TV Toshiba Regza 26AV550E Owner's Manual](#)

Toshiba regza 26av550e: user guide (36 pages)

[LCD TV Toshiba 22AV700A Owner's Manual](#)

Integrated digital lcd tv (48 pages)

[LCD TV Toshiba 22AV600A Owner's Manual](#)

Integrated digital lcd tv (40 pages)

[LCD TV Toshiba 32AV555D Service Manual](#)

(157 pages)

[LCD TV Toshiba 32AV934G Service Manual](#)

Lcd color television (47 pages)

## Summary of Contents for Toshiba 32AV800E

[Page 1](#) WNER'S ANUAL LCD COLOUR TV 32AV800E 32AV800V 32AV800T © 2011 TOSHIBA CORPORATION All Rights Reserved...

### [Page 2: Table Of Contents](#)

Contents Introduction .....3 Welcome to Toshiba .....3 Important Safety Instructions .....3 Important information .....7 Getting started .....8 TV front and side panel controls .....9 TV back panel connections .....10 Learning about the remote control .....11 Turning the TV on .....12 Learning about the menu system .....12...

### [Page 3: Introduction](#)

Welcome to Toshiba In a three pin earthing-type, the fuse fitted in this • Thank you for purchasing this Toshiba LCD plug is approved by ASTA or BSI to BS1362. It Colour TV. This manual will help you use the should be only be replaced by a correctly rated exciting features of your new TV.

[Page 4](#) Introduction 4) Never block or cover the slots and open- 8) Locate the television away from direct ings in the cabinet. sunlight or other strong lights. Soft, indirect • Never place the TV so that it is facing lighting is recommended for comfortable upward or on its side.

[Page 5](#) Introduction □□ 9CNN OQWPVKPI VJG VGNGXKUKQP • Purchase a VESA compatible wall bracket: 1) 0GXGT RNCEG JQV QDLGEVU QT QRGF COG VESA 200x200/ M6 screws/ 8mm/ 20kg. sources, such as lighted candles or night- • Locate your ideal TV position on the wall. lights, on or close to the TV.

[Page 6](#) Introduction 5) When the TV will not be used for a long Service period of time, such as during vacation or travel, remove the power plug from the 1) Never repair, modify or disassemble the TV wall outlet for safety. by yourself.

### [Page 7: Important Information](#)

This dust may cause a fire due to reduced insulation on the plug. Exemptions Clean here • Toshiba is not liable for any damage caused by fires, natural disaster (such as thunder, earthquake, etc.), acts by third parties, ac- cidents, owner's misuse, or uses in other improper conditions.

### [Page 8: Getting Started](#)

-/+ polarities of the battery to the -/+ marks depend upon your particular area. inside the battery compartment. Your Toshiba dealer or service personnel can best advise you on which aerial to use in your area. Before connecting the aerial cable, turn off all main power switches.

### [Page 9: Tv Front And Side Panel Controls](#)

Getting started TV front and side panel controls • You can operate your TV using the buttons on the side panel or the remote control. The back and side of the panel provide the terminal connections to connect other equipment to your TV ( "Connecting your TV" ...

### [Page 10: Tv Back Panel Connections](#)

Getting started TV back panel connections 32AV800E/32AV800T/32AV800V AV AUDIO IN AV VIDEO IN...

### [Page 11: Learning About The Remote Control](#)

Getting started Learning about the remote control Location of controls In TV and AV1/2 mode: Display current channel information normal picture...

### [Page 12: Turning The Tv On](#)

Getting started Turning the TV on Learning about the menu system Switching on the TV We suggest you familiarize yourself with the display charts before using the menu system: Connect the power cord to a wall outlet, the power indicator lights in red (standby mode). •...

### [Page 13: Watching Tv Programmes](#)

Getting started Note: Changing the position In the video input mode, Auto Tuning and • Manual Tuning are not available. Enter the desired position number using • If you do not make a selection for a while, the the Number buttons on the remote control. menu display disappears automatically.

### [Page 14: Programming Channels Into The Tv's Channel Memory](#)

Getting started Programming channels into the TV's Manual tuning channel memory From the menu, press CH ANNEL to select Manual Tuning . Auto tuning to enter Press Manual Tuning CHANNEL menu, press From the menu , then press button to search select Auto Tuning .

## [Page 15: Using The Tv's Features \(General\)](#)

Using the TV's features (General) Picture adjustment Available Picture Size and Position Control  
Selecting the picture size Press MENU button on the remote control, button to select PICTURE then press Screen Mode Size menu.

## [Page 16: Sound Adjustment](#)

Using the TV's features (General) Adjusting the Picture Mode Activating the picture preferences This TV offers the choice of personalising the You can customise current picture mode picture style. settings while selecting User. Standard, Dynamic, Mild User From the PICTURE menu press preset options and affect may features/settings , Contrast ,...

## [Page 17: Other Features Settings](#)

Using the TV's features (General) Adjusting Equalizer Other features settings Press button to select Equalizer and press button to enter sub menu , Setting the Set Up menu press button to select a certain frequency, and use button to adjust...

[Page 18](#) Using the TV's features (General) Setting the manual setting menu Setting the TIMER menu Press MENU , then press to display Press then press button to MENU menu. CHANNEL select menu . TIMER CHANNEL Channel Color System Auto Sound System Auto...

## [Page 19: Selecting The Video Input Source To View](#)

Using the TV's features (General) menu, press From the CHANNEL Teletext Languages select Swap, and press button to enter submenu. To select a language for teletext: Current Channel, Target Channel and Press MENU, then press to display Exchange are used to swap two programs' the SET UP menu.

[Page 20](#) Using the TV's features (General) Using Subtitles Press on the remote control to display the current Subtitle status. While this status is displayed, press again to change the setting. Note: If Subtitle is On, the TV will always display subtitles whenever such information is available for the channel you are viewing.

## [Page 21: Connecting Your Tv](#)

Connecting your TV Side and back connections Please always refer to the owner's manual of the equipment to be connected for full details. Connection examples: / Video Games • Before connecting any external equipment, Connecting an HDMI device turn off all main power switches. •...

[Page 22](#) Connecting your TV The HDMI input is designed for best Connecting an HDMI device performance with 1080i (50/60 Hz) and 1080p (50/60 Hz) high-definition video signals, but will One HDMI cable (type A connector) also accept and display 576i/p, 720p (50Hz); 480i/p, 720p (60 Hz: except for E-EDID) signals.

## [Page 23: Connecting A Computer](#)

Connecting your TV Signal names for mini D-sub 15 pin Connecting a computer connector Pin assignment for RGB/PC terminal To connect a PC to the RGB/PC terminal on the TV: An analogue RGB (15 pin) computer cable can be connected. Pin No.

## [Page 24: Acceptable Video Signals Through Hdmi Terminals](#)

Connecting your TV Acceptable Video signals through HDMI terminals Format Resolution V. Frequency H. Frequency Pixel Clock Frequency 480i 720 x 480i 60Hz 15.734KHz 27MHz 480p 720 x 480p 60Hz 31.5KHz 27MHz / 27.027MHz 576i 720 x 576i 50Hz 15.625KHz 27MHz 576p 720 x 576p...

## [Page 25: Using The Pc Setting](#)

Connecting your TV Adjusting the clock phase of the picture Using the PC Setting If the clock phase, which synchronize the PC • This function may not be available for some signal and LCD display, is not optimized, the signal or if no signal is received. picture will blur.

## [Page 26: Reference Section](#)

Reference section The brightness of the screen comes down, Troubleshooting or flickers of the screen are caused, or some parts of the screen do not light up. Before calling a service

technician, please check the following table for a possible cause of the •...

### [Page 27: Broadcast System](#)

Reference section Broadcast system Broadcast transmission systems of each country or region  
Asia M.E. Country or region Colour Sound Bahrain, Kuwait, Israel, Oman, Qatar, United Arab  
Emirates, Yemen, etc. Indonesia, Malaysia, Singapore, Thailand, etc China, Vietnam China Hong  
Kong Iraq, Islamic Republic of Iran, Lebanon, Saudi Arabia, etc. SECAM Russian Federation, etc.

### [Page 28: 5Rgek Ecvkqpu](#)

Reference section Aspect ratio 5RGEK ECVKQPU 16:9 Visible size LCD COLOUR TV  
32AV800\*-80.0cm Model 32AV800E 32AV800T Number of pixels 32AV800V 1,366 (H) dots x 768  
(V) dots Audio power Power source 5W + 5W 32AV800\*- 110-240V, 50/60Hz Power consumption  
Input/Output terminals...

This manual is also suitable for:

[32av800t32av800v](#)