



Asus TS100-E8-PI4 User Manual

Pedestal server

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20



•

Bookmarks



[Download this manual](#)

Quick Links



TS100-E8-

ASUS[®]

PI4

Pedestal Server

The ASUS logo is positioned behind the text 'Pedestal Server'. It features the word 'ASUS' in a bold, black, sans-serif font with a registered trademark symbol (®) to its upper right.

User Guide

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus TS100-E8-PI4

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (142 pages)

[Server ASUS E9331 Configuration Manual](#)

(16 pages)

[Server Asus Pedestal Server TS100-E4/PI2 User Manual](#)

Asus ts100-e4/pi2 pedestal server user manual (158 pages)

[Server Asus TS100-E6 PI4 User Manual](#)

Manual de propietario (148 pages)

[Server Asus TS100-E7/PI4 User Manual](#)

(136 pages)

[Server Asus TS100-E5/PI4 - 0 MB RAM Configuration Manual](#)

Configuration guide (16 pages)

[Server Asus TS150-E2 User Manual](#)

Pedestal server (134 pages)

[Server Asus TS110-E8-PI4 User Manual](#)

Pedestal server (146 pages)

[Server Asus TS100-E9-PI4 User Manual](#)

Pedestal server (140 pages)

[Server Asus TS100-E10-PI4 User Manual](#)

Pedestal server (138 pages)

[Server Asus TS100-E3 Manual](#)

Intel® pentium® 4/pentium® d lga775 pedestal pedestal server (152 pages)

[Server Asus TS300-E7 PS4 User Manual](#)

Pedestal/5u rackmount server (160 pages)

[Server Asus TS300-E6 PS4 User Manual](#)

Pedestal/5u rackmount server (168 pages)

[Server Asus TS700-X7/PS4 User Manual](#)

Pedestal/5u rackmount server (200 pages)

[Server ASUS TS mini User Manual](#)

Home server (114 pages)

[Server Asus TS700-E9 Series User Manual](#)

(178 pages)

Summary of Contents for Asus TS100-E8-PI4

[Page 1](#) TS100-E8-PI4 Pedestal Server User Guide...

[Page 2](#) ASUSTeK COMPUTER INC. ("ASUS"). ASUS provides this manual "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no...

[Page 3](#) Contents Contentsiii Noticesvii Safety informationviii Australia statement noticeix About this guidex Chapter 1: Product introduction System package contents 1-2 Serial number label1-2 1.3 System specifications1-3 Front panel features..... 1-5

Rear panel features

[Page 4](#) Motherboard Info Motherboard layout.....3-2 Jumpers 3-4
Internal connectors3-7 Managing and updating your BIOS4-2 4.1.1 ASUS
CrashFree BIOS 3 utility..... 4-2 4.1.2 ASUS EzFlash Utility.....4-4 4.1.3 BUPDATER utility
..... 4-5 BIOS setup program 4-7 4.2.1...

[Page 5](#) Contents 4.4.11 Intel Server Platform Services 4-24 4.4.12 Onboard LAN
Configuration4-25 4.4.13 MIO Card Configuration4-25 4.4.14 Serial Port Console
Redirection4-26 4.4.15 Runtime Error Logging Support4-29 4.4.16 APM
.....4-29 4.4.17 Network Stack4-30 4.4.18 Intel RC Drivers Version
Detail.....

[Page 6](#) Running the Support DVD 6-6 Installing the LAN driver.....6-14
Installing the VGA driver 6-19 Installing the Intel ® C22x MEI NULL HECI driver
.....6-22 Installing the Intel ® I210 Gigabit Adapter driver6-24 ASUS contact information
.....A-1...

[Page 7](#) Notices Federal Communications Commission Statement This device complies with
Part 15 of the FCC Rules. Operation is subject to the following two conditions: • This device may
not cause harmful interference, and • This device must accept any interference received
including interference that may cause undesired operation.

[Page 8](#) Safety information Electrical Safety • Before installing or removing signal cables,
ensure that the power cables for the system unit and all attached devices are unplugged. • To
prevent electrical shock hazard, disconnect the power cable from the electrical outlet before
relocating the system.

[Page 9](#) If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us
at <http://support.asus.com>...

[Page 10](#) About this guide Audience This user guide is intended for system integrators, and
experienced users with at least basic knowledge of configuring a server. Contents This guide
contains the following parts: Chapter 1: Product Introduction This chapter describes the general
features of the server, including sections on front panel and rear panel specifications.

[Page 11](#) Refer to the following sources for additional information, and for product and
software updates. ASUS Server Web-based Management (ASWM) user guide This manual tells
how to set up and use the proprietary ASUS server management utility. ASUS websites The
ASUS websites worldwide provide updated information for all ASUS hardware and...

[Page 13](#) Chapter 1 This chapter describes the general features of the server, including
sections on front panel and rear panel specifications. ASUS TS100-E8-PI4...

[Page 14](#) If any of the above items is damaged or missing, contact your retailer. Serial number
label Before requesting support from the ASUS Technical Support team, you must take note of
the product's serial number containing 14 characters such as xxS0xxxxxxx shown as the
figure below.

[Page 15](#) 1.3 System specifications The ASUS TS100-E8-PI4 is a pedestal barebone server
system featuring the ASUS P9D-X/ ® ® MR server board. The server supports Intel LGA1150
Xeon E3-1200 v3 processors with the latest technologies through the chipsets onboard. Model
Name TS100-E8-PI4...

[Page 16](#) CentOS 5.6/6.2/6.3 64-bit Ubuntu 12.04 64-bit Anti-virus Software Optional Anti-Virus
CD Pack Management Software ASUS ASWM Enterprise Solution Dimension (HH x WW x DD)
436.8 mm x 200 mm x 478.8 mm Net Weight Kg (CPU, DRAM & 15 Kg...

[Page 17](#) For future installation of 5.25-inch devices, two drive bays are available. Optical
drive Empty 5.25-inch bays HDD access LED Power button Reset button Power LED USB 2.0
ports Refer to section 1.7.1 Front panel LEDs for the LED descriptions. ASUS TS100-E8-PI4...

[Page 18](#) Rear panel features The rear panel includes a slot for the motherboard rear I/O
ports, expansion slots, a chassis lock, a vent for the system fan, and power supply module.

300W Bronze Single power supply Power connector PS/2 keyboard / mouse port USB 2.0 ports
USB 3.0 ports...

[Page 19](#) Internal features The barebone server includes the basic components as shown.
Power supply unit 120mm x 25mm system fan ASUS P9D-X/MR Server Board Expansion card
locks Optical drive 2 x 5.25-inch drive bays Front I/O board (hidden) Internal HDD bays Turn off
the system power and detach the power supply before removing or replacing any system
component.

[Page 20](#) LED information 1.7.1 Front panel LEDs HDD Access LED Power LED Icon Display
status Description Power LED System power ON No activity HDD Access LED Read/write data
into the HDD Blinking 1.7.2 Rear panel LEDs ACT/LINK LED SPEED LED ACT/LINK LED SPEED LED
ACT/LINK LED SPEED LED...