

Installation - Asus PRIME H770-PLUS D4 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

•

Bookmarks




1.5 M.2 installation

- Ensure to install the bundled M.2 rubber pad before installing your single sided M.2 storage device.

- DO NOT install the bundled M.2 rubber pads when installing a double-sided M.2 storage device. The rubber pad installed by default is compatible with double sided M.2 storage devices.


- The diagrams in this section is for reference only.

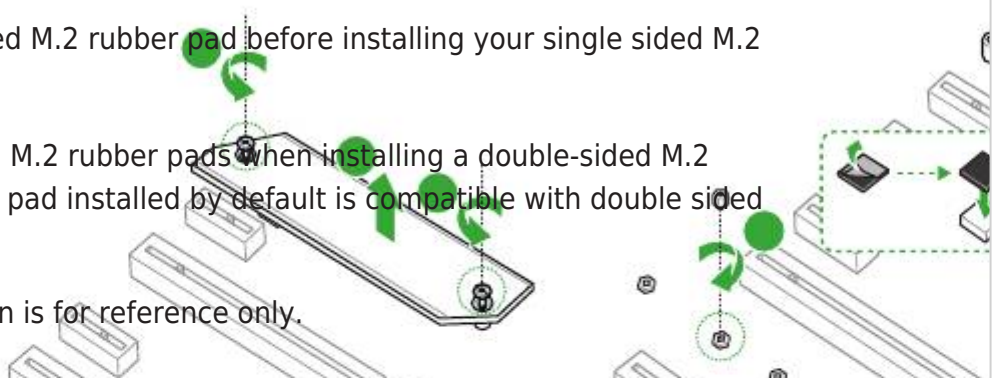

The M.2 storage devices are purchased separately.
PRIME H770-PLUS D4

OPTIONAL

1-13

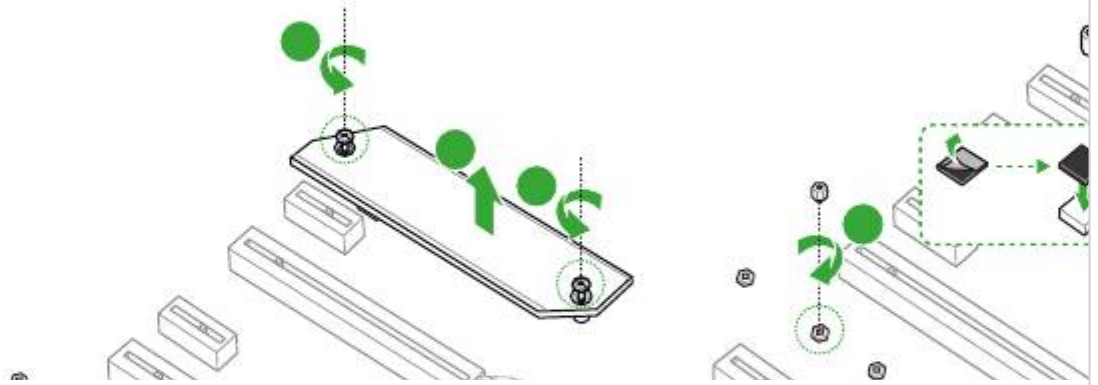

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
20
21
22
23
24
25
26
27

Quick Links:

[Prime H770-Plus D4 Specifications Summary](#)

[Motherboard Overview](#)

[Installation](#)

Related Manuals for Asus PRIME H770-PLUS D4

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Manual](#)

(46 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard ASUS H97-PRO GAMER User Manual](#)

(86 pages)

[Motherboard Asus H97M-PLUS Manual](#)

(20 pages)

[Motherboard Asus h170-pro Manual](#)

(92 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-E D3 Instruction Manual](#)

(55 pages)

[Motherboard Asus H81M-CT Manual](#)

(63 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K Manual](#)

(28 pages)

[Motherboard Asus H110M-E/M.2 Manual](#)

(26 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

Related Content for Asus PRIME H770-PLUS D4

[PRIME A620-PLUS WIFI6 Cpu Installation](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Chapter 2: Basic Installation](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Installation Tools And Components](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Cpu Installation](#)

Asus A620M-AYW WIFI

[ROG RAMPAGE V EDITION 10 Installation Tools And Components](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Cpu Heatsink And Fan Assembly Installation](#)

Asus Q170A-IM-A

[WS X299 SAGE Installation Tools And Components](#)

Asus WS X299 SAGE

[PRIME A520M-R Cpu Installation](#)

Asus PRIME A520M-R