

Chapter 2: Bios And Raid Support; Knowing Bios - Asus PRIME H770- PLUS D4 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

•

Bookmarks



BIOS and RAID Support

2.1

Knowing BIOS

The new ASUS UEFI BIOS is a Unified Extensible Interface that complies with UEFI architecture, offering a user-friendly interface that goes beyond the traditional keyboard-only BIOS controls to enable a more flexible and convenient mouse input. You can easily navigate the new UEFI BIOS with the same smoothness as your operating system. The term "BIOS" in this user manual refers to "UEFI BIOS" unless otherwise specified.

BIOS (Basic Input and Output System) stores system hardware settings such as storage



device configuration, overclocking settings, advanced power management, and boot

device configuration that are needed for system startup in the motherboard CMOS. In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. DO NOT change the default BIOS settings except in the following

circumstances:

An error message appears on the screen during the system bootup and requests you to run the BIOS Setup.

You have installed a new system component that requires further BIOS settings or update.

Inappropriate BIOS settings may result to instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.

BIOS settings and options may vary due to different BIOS release versions. Please refer to the latest BIOS version for settings and options.

For more information on BIOS configurations, please refer to <https://www.asus.com/support>, or download the BIOS manual by scanning the QR code.

PRIME H770-PLUS D4

2

2-1



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
22
23
24
25
26
27
28
29

Quick Links:

[Prime H770-Plus D4 Specifications Summary](#)

[Motherboard Overview](#)

[Installation](#)

Related Manuals for Asus PRIME H770-PLUS D4

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Manual](#)

(46 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard ASUS H97-PRO GAMER User Manual](#)

(86 pages)

[Motherboard Asus H97M-PLUS Manual](#)

(20 pages)

[Motherboard Asus h170-pro Manual](#)

(92 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-E D3 Instruction Manual](#)

(55 pages)

[Motherboard Asus H81M-CT Manual](#)

(63 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K Manual](#)

(28 pages)

[Motherboard Asus H110M-E/M.2 Manual](#)

(26 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

Related Content for Asus PRIME H770-PLUS D4

[PRIME B650M-A WIFI II Chapter 2: Bios And Raid Support](#)

Asus PRIME B650M-A WIFI II

[PRIME Z590-V Chapter 3: Bios And Raid Support](#)

Asus PRIME Z590-V

[TUF GAMING B450M-PLUS II Chapter 2 Bios And Raid Support](#)

Asus TUF GAMING B450M-PLUS II

[ROG MAXIMUS XII EXTREME Chapter 3: Bios And Raid Support](#)

Asus ROG MAXIMUS XII EXTREME

[PRIME B550M-K ARGB Chapter 2: Bios And Raid Support](#)

Asus PRIME B550M-K ARGB

[Pro WS W680-ACE Chapter 3: Bios And Raid Support](#)

Asus Pro WS W680-ACE

[ROG MAXIMUS XII Z490 APEX Chapter 3: Bios And Raid Support](#)

Asus ROG MAXIMUS XII Z490 APEX

[PRIME B760M-AJ D4 Chapter 2: Bios And Raid Support](#)

Asus PRIME B760M-AJ D4