



# Asus Crashfree Bios 3 - Asus PRIME H770-PLUS D4 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38

--

---

•

[Table of Contents](#)

•

## Bookmarks







## 2.4

### ASUS CrashFree BIOS 3

The ASUS CrashFree BIOS 3 utility is an auto recovery tool that allows you to restore the BIOS file when it fails or gets corrupted during the updating process. You can restore a corrupted BIOS file using a USB flash drive that contains the BIOS file.

#### Recovering the BIOS

1.

Download the latest BIOS version for this motherboard from <https://www.asus.com/support/>.

---

2.

Rename the BIOS file as ASUS.CAP or PH770PD4.CAP and copy the renamed BIOS file to a USB flash drive.

3.

Turn on the system.

4.

Insert the USB flash drive containing the BIOS file to a USB port.

5.

The utility automatically checks the devices for the BIOS file. When found, the utility reads the BIOS file and enters ASUS EZ Flash 3 automatically.

6.

The system requires you to enter BIOS Setup to recover the BIOS setting. To ensure system compatibility and stability, we recommend that you press <F5> to load default BIOS values.

DO NOT shut down or reset the system while updating the BIOS! Doing so can cause system boot failure!

2-4

Chapter 2: BIOS and RAID Support

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
25  
26  
27  
28  
29  
30  
31  
32

Quick Links:

[Prime H770-Plus D4 Specifications Summary](#)

[Motherboard Overview](#)

[Installation](#)

## Related Manuals for Asus PRIME H770-PLUS D4

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Manual](#)

(46 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard ASUS H97-PRO GAMER User Manual](#)

(86 pages)

[Motherboard Asus H97M-PLUS Manual](#)

(20 pages)

[Motherboard Asus h170-pro Manual](#)

(92 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-E D3 Instruction Manual](#)

(55 pages)

[Motherboard Asus H81M-CT Manual](#)

(63 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K Manual](#)

(28 pages)

[Motherboard Asus H110M-E/M.2 Manual](#)

(26 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

## Related Content for Asus PRIME H770-PLUS D4

[Z790 GAMING WIFI7 Asus Crashfree Bios 3](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Asus Crashfree Bios 3](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Asus Crashfree Bios 3](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Asus Crashfree Bios 3](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Asus Crashfree Bios 3](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Asus Crashfree Bios 3 Utility](#)

Asus Z13PE-D16

[WS X299 SAGE Asus Crashfree Bios 3](#)

Asus WS X299 SAGE

[PRIME A520M-R Asus Crashfree Bios 3](#)

Asus PRIME A520M-R