

About This Guide - Asus PRIME H770-PLUS D4 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

•

Bookmarks



About this guide

This user guide contains the information you need when installing and configuring the motherboard.

How this guide is organized

This guide contains the following parts:

-

Chapter 1: Product Introduction

This chapter describes the features of the motherboard and the new technology it supports. It includes descriptions of the switches, jumpers, and connectors on the

motherboard.

•

Chapter 2: BIOS and RAID Support

This chapter tells how to boot into the BIOS, upgrade BIOS using the EZ Flash Utility and support on RAID.

Where to find more information

Refer to the following sources for additional information and for product and software updates.

1.

ASUS website

The ASUS website (www.asus.com) provides updated information on ASUS hardware and software products.

2.

Optional documentation

Your product package may include optional documentation, such as warranty flyers, that may have been added by your dealer. These documents are not part of the standard package.

Conventions used in this guide

To ensure that you perform certain tasks properly, take note of the following symbols used throughout this user guide.

CAUTION: Information to prevent damage to the components and injuries to yourself when trying to complete a task.

IMPORTANT: Instructions that you **MUST** follow to complete a task.

NOTE: Tips and additional information to help you complete a task.

v

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Quick Links:

[Prime H770-Plus D4 Specifications Summary](#)

[Motherboard Overview](#)

[Installation](#)

Related Manuals for Asus PRIME H770-PLUS D4

[Motherboard Asus PRIME H770-PLUS D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Manual](#)

(46 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus TUF GAMING H770-PRO WIFI Quick Start Manual](#)

(2 pages)

[Motherboard ASUS H97-PRO GAMER User Manual](#)

(86 pages)

[Motherboard Asus H97M-PLUS Manual](#)

(20 pages)

[Motherboard Asus h170-pro Manual](#)

(92 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-E D3 Instruction Manual](#)

(55 pages)

[Motherboard Asus H81M-CT Manual](#)

(63 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H410M-K Manual](#)

(28 pages)

[Motherboard Asus H110M-E/M.2 Manual](#)

(26 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

Related Content for Asus PRIME H770-PLUS D4

[PRIME B760M-F D4 About This Guide](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 About This Guide](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 About This Guide](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series About This Guide](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI About This Guide](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 About This Guide](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 About This Guide](#)

Asus ROG RAMPAGE V EDITION 10

[WS X299 SAGE About This Guide](#)

Asus WS X299 SAGE