

Selecting The Installation Site; Indoor Unit - Sanyo Mini ECO-i SPW-ASR74GXH56(A/B) Installation Instructions Manual

System air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17


18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49

•

[Table of Contents](#)

•

Bookmarks

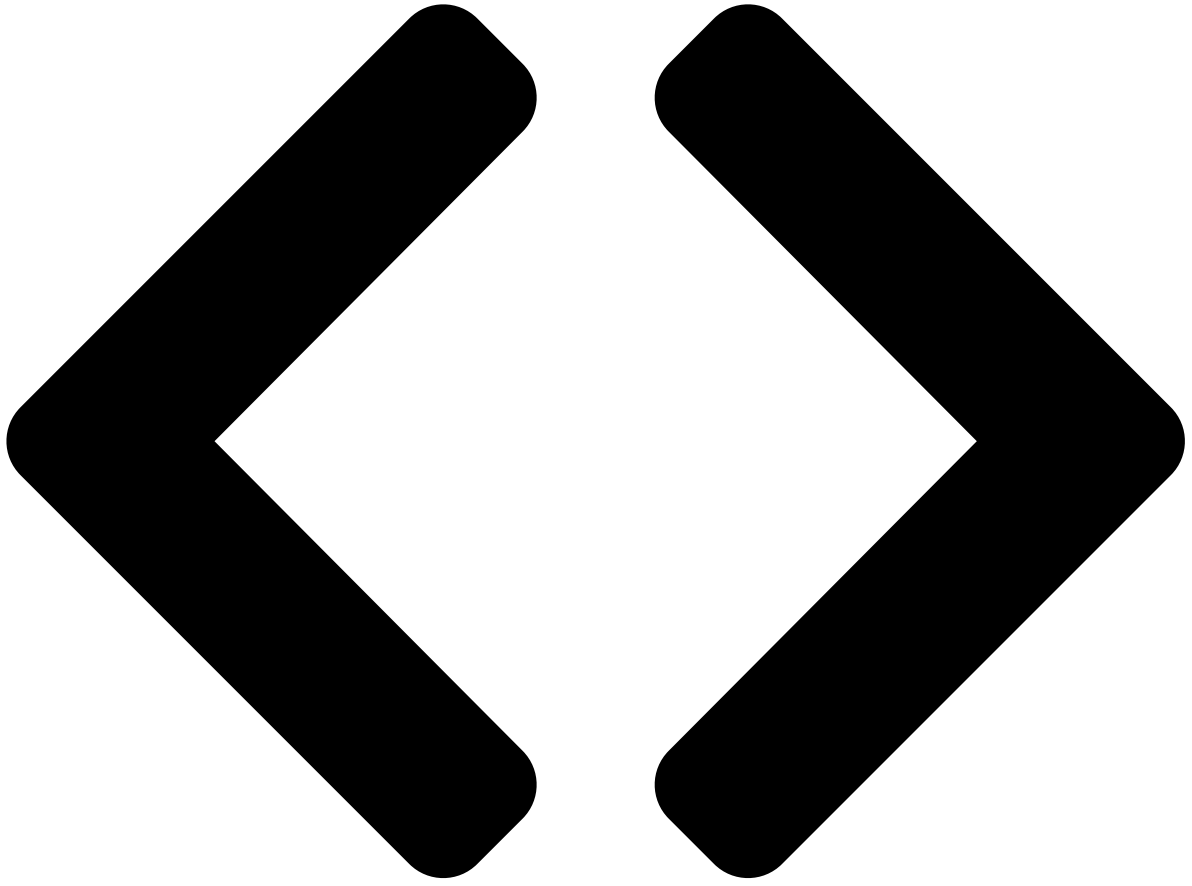


05-194
5/27/05
5:06 PM

2. SELECTING THE INSTALLATION SITE

2-1. Indoor Unit

AVOID:

- areas where leakage of flammable gas may be expected.
- places where large amounts of oil mist exist.
- direct sunlight.
- locations near heat sources which may affect the performance of the unit.
- locations where external air may enter the room directly. This may cause "sweating" on the air discharge ports, causing them to spray or drip.
- locations where the remote controller will be splashed

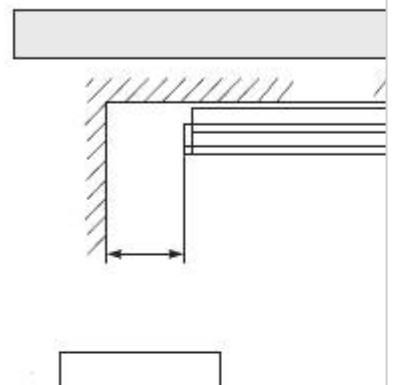

with water or affected by dampness or humidity.
installing the remote controller behind curtains or furniture.

locations where high-frequency emissions are generated.

DO:

select an appropriate position from which every corner of the room can be uniformly cooled.

select a location where the ceiling is strong enough to support the weight of the unit.

select a location where tubing and drain pipe have the shortest run to the outdoor unit.

allow room for operation and maintenance as well as unrestricted air flow around the unit.

install the unit within the maximum elevation difference above or below the outdoor unit and within a total tubing length (L) from the outdoor unit as detailed in Table 1-10.

allow room for mounting the remote controller about 1m off the floor, in an area that is not in direct sunlight nor in the flow of cool air from the indoor unit.

Air delivery will be degraded if the distance from the floor to the ceiling is greater than 3 m (for SL type, greater than 3.5 m).

Floor-Standing, Concealed Floor-Standing Type

min.
10 cm
min. 100 cm

Horizontal view

Page 17
min.
10 cm
min. 100 cm

Vertical view

Fig. 2-4

Ceiling-Mounted Type

Ceiling
min. 25 cm

Front view

NOTE

The rear of the indoor unit can be installed flush against the wall.

Air
discharge
min. 50 cm

Side view

Fig. 2-1

Concealed-Duct Type

2-Way,




4-Way Semi-Concealed Type

Fig. 2-2

1-Way Semi-Concealed & Slim Type

Semi-Concealed Type

Ceiling
min. 5 cm
Obstacle
Air
discharge
Air
Wall

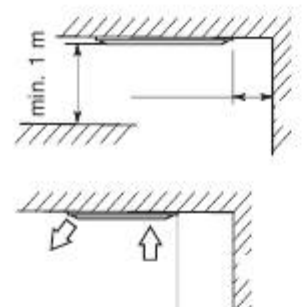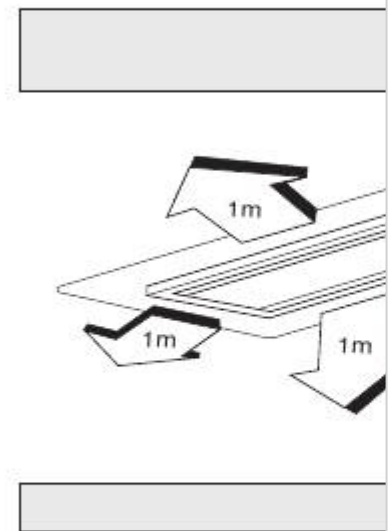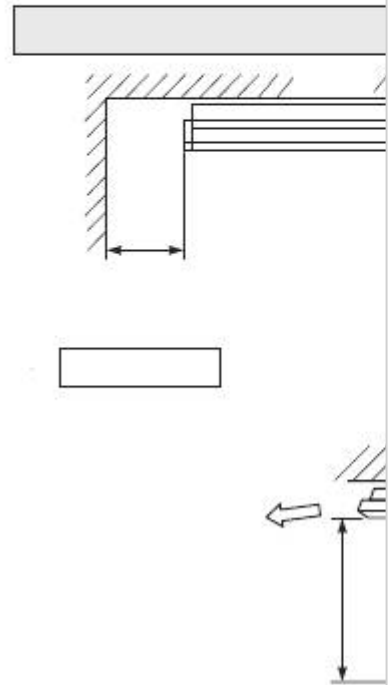

intake
min. 5 cm

Side view

Fig. 2-3

Wall-Mounted Type

min.
15 cm

Front View

Fig. 2-5

17

Wall
min. 25 cm
Air intake
Max. 25 cm
Obstacle

Semi-Concealed Slim Type

Wall

20
100
cm

 

20
cm

20
cm

100
cm

min.15 cm

min.
15 cm

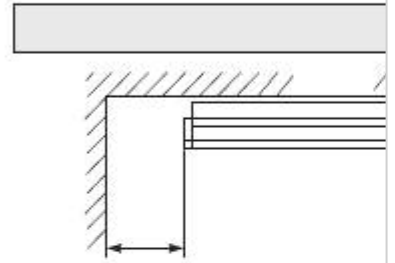

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
14
15
16
17
18
19
20
21

Quick Links:

[Important](#)

[Table of Contents](#)

[General](#)

[Indoor Unit](#)

[Outdoor Unit](#)

[Meaning of Alarm Messages](#)

Related Manuals for Sanyo Mini ECO-i SPW-ASR74GXH56(A/B)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-X483GH56 Installation Instruction](#)

Eco multi system air conditioner (91 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation](#)

[Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo ECO G SGP-EGW190M2G2W Brochure & Specs](#)

Gas driven vrf m series (9 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)
(252 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

Related Content for Sanyo Mini ECO-i SPW-ASR74GXH56(A/B)

[CH2442 Selecting The Installation Site](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Selecting The Installation Site](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Selecting The Installation Site](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Selecting The Installation Site](#)

Sanyo PNR-XS2432

[ECO R410A Selecting The Installation Site](#)

Sanyo ECO R410A

[C4272R Selecting The Installation Site](#)

Sanyo C4272R

[C4272R S/C Selecting The Installation Site](#)

Sanyo C4272R S/C

[85464359982001 Selecting The Installation Site](#)

Sanyo 85464359982001

This manual is also suitable for:

[Mini eco-i spw-asr94gXH56\(a/b\)](#)[Mini eco-i spw-asr124gXH56\(a/b\)](#)[Mini eco-i spw-ldr94gXH56\(a/b\)](#)[Mini eco-i spw-ldr124gXH56\(a/b\)](#)[Mini eco-i spw-ldr184gXH56\(a/b\)](#)[Mini eco-i spw-ldr254gXH56\(a/b\)](#) ... [Show all](#)