


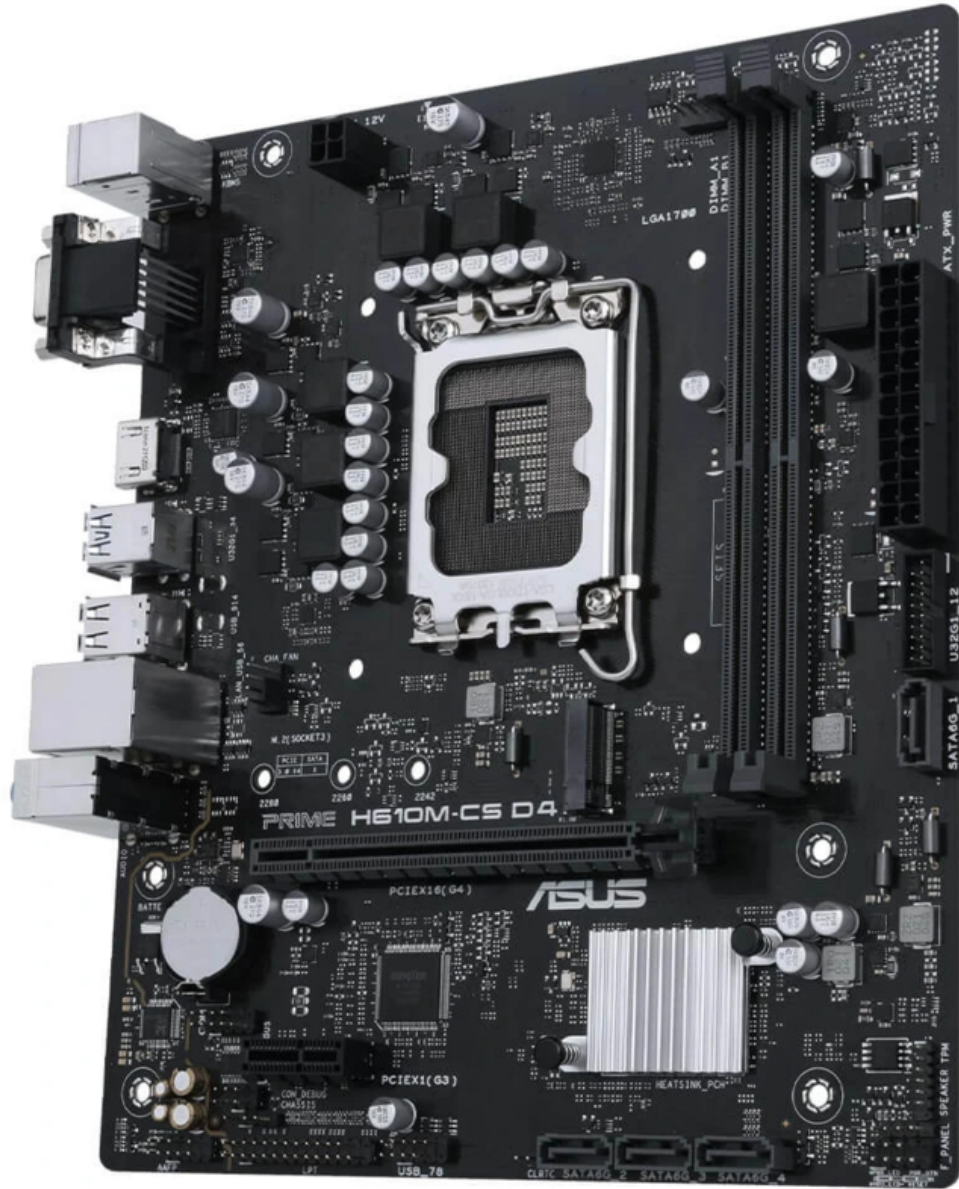

Asus PRIME H610M-CS D4 - Motherboard Quick Start Guide

Contents

- 1 Motherboard Layout
- 2 Step 1 - Install the CPU
- 3 Step 2 - Install the CPU fan
- 4 Step 3 - Install memory modules
- 5 Step 4 - Install storage devices
- 6 Step 5 - Install expansion card(s)
- 7 Step 6 - Install the system panel connector
- 8 Step 7 - Install ATX power connectors
- 9 Step 8 - Connect input/output devices
- 10 Step 9 - Power on the system and install operating system and drivers
- 11 Documents / Resources
 - 11.1 Download manual

Motherboard Layout

Step 1 - Install the CPU

Step 2 - Install the CPU fan

Step 3 - Install memory modules

Step 4 - Install storage devices

Step 5 - Install expansion card(s)

Step 6 - Install the system panel connector

Step 7 - Install ATX power connectors

Step 8 - Connect input/output devices

Step 9 - Power on the system and install operating system and drivers

Documents / Resources

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus PRIME H610M-CS D4 - Motherboard Quick Start Guide](#)

Need Assistance?

Do you have a question about the PRIME H610M-CS D4 that isn't answered in the manual? Leave your question here.

■ ■

Stay updated with the latest solutions
Submit your question

Related Manuals for Asus PRIME H610M-CS D4

[Asus Pro WS W480-ACE - LGA 1200 ATX Intel Motherboard Quick Start](#)

(article)

[Asus EX-H610M-V3 D4 - Motherboard Quick Start Guide](#)

(article)

[Asus A320M-C - Motherboard Manual](#)

(article)

[Asus A55BM-E - Motherboard Manual](#)

(article)

[Asus A58M-E - Motherboard Manual](#)

(article)

[Asus A55BM-K - Motherboard Manual](#)

(article)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

[Motherboard Asus PRIME H610M-CS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

[Save Article as PDF](#)