



Asus EX-H610M-V3 D4 - Motherboard Quick Start Guide

Contents

- 1 Motherboard Layout
- 2 Step 1 - Install the CPU
- 3 Step 2 - Install the CPU fan
- 4 Step 3 - Install memory modules
- 5 Step 4 - Install storage devices
- 6 Step 5 - Install expansion card(s)
- 7 Step 6 - Install the system panel connector
- 8 Step 7 - Install ATX power connectors
- 9 Step 8 - Connect input/output devices
- 10 Step 9 - Power on the system and install operating system and drivers
- 11 Documents / Resources
 - 11.1 References
 - 11.2 Download manual

Motherboard Layout

Step 1 - Install the CPU

Step 2 - Install the CPU fan

Step 3 - Install memory modules

Step 4 - Install storage devices

Step 5 - Install expansion card(s)

Step 6 - Install the system panel connector

Step 7 - Install ATX power connectors

Step 8 - Connect input/output devices

Step 9 - Power on the system and install operating system and drivers

<http://www.asus.com/support/>

Documents / Resources

References

[Official Support | ASUS Global](#)

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus EX-H610M-V3 D4 - Motherboard Quick Start Guide](#)

Need Assistance?

Do you have a question about the EX-H610M-V3 D4 that isn't answered in the manual?
Leave your question here.

■ ■

Stay updated with the latest solutions
Submit your question

Related Manuals for Asus EX-H610M-V3 D4

[Asus Pro WS W480-ACE - LGA 1200 ATX Intel Motherboard Quick Start](#)

(article)

[Asus PRIME H610M-CS D4 - Motherboard Quick Start Guide](#)

(article)

[Asus A320M-C - Motherboard Manual](#)

(article)

[Asus A55BM-E - Motherboard Manual](#)

(article)

[Asus A58M-E - Motherboard Manual](#)

(article)

[Asus A55BM-K - Motherboard Manual](#)

(article)

[Motherboard Asus EX-H610M-V3 D4 Manual](#)

(34 pages)

[Motherboard Asus EX-H410M-V3 Manual](#)

(30 pages)

[Motherboard Asus EX-H310M-V3 R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus EX-H110M-V3 Quick Start Manual](#)

(2 pages)

[Motherboard Asus EX-H310M-V3 Quick Start Manual](#)

(2 pages)

[Motherboard Asus EX-H110M-V Manual](#)

(32 pages)

[Motherboard Asus EX-H310M-X Manual](#)

(30 pages)

[Motherboard Asus EX-B250M-V3 Manual](#)

(28 pages)

[Motherboard Asus EX-B250-V7 Manual](#)

(30 pages)

[Motherboard Asus EX-B85M-V Manual](#)

(27 pages)

[Motherboard Asus EX-B460M-V5 Manual](#)

(30 pages)

[Motherboard Asus EX-B760M-V5 D4 Manual](#)

(36 pages)

[Motherboard Asus EX-B150M-V5 Manual](#)

(26 pages)

[Motherboard Asus EX-B760M-V5 Manual](#)

(36 pages)

[Save Article as PDF](#)