



Toshiba CAMILEO B10 User Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



User's Manual

CAMILEO B10

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba CAMILEO B10

[Camcorder Toshiba PA3961U-1CAM Camileo B10 User Manual](#)

Pa3961u-1cam camileo b10 user's guide (145 pages)

[Camcorder Toshiba Camileo B10 Quick Start Manual](#)

Toshiba camileo b10: quick start (33 pages)

[Camcorder Toshiba PA3961U-1CAM Camileo B10 Specifications](#)

Toshiba the camileo full-hd camcorder (1 page)

[Camcorder Toshiba PA3897U-1CAS Camileo BW10 - S User Manual](#)

Pa3897u-1cas camileo bw10 - s user's guide (119 pages)

[Camcorder Toshiba CAMILEO BW20 User Manual](#)

User guide (113 pages)

[Camcorder Toshiba Camileo BW10 Specifications](#)

Hd waterproof camcorder (2 pages)

[Camcorder Toshiba PA3897U-1CAS Camileo BW10 - S Specifications](#)

Toshiba the camileo full-hd camcorder (1 page)

[Camcorder Toshiba Camileo BW10 User Manual](#)

Camileo (66 pages)

[Camcorder Toshiba CAMILEO BW10 SPORTSCAM Specification](#)

Digital h.264 full hd video camcorder (2 pages)

[Camcorder Toshiba Camileo BW10 Quick Start Manual](#)

Toshiba camileo bw10 camcorder quick start guide (45 pages)

[Camcorder Toshiba CAMILEO BW10 Quick Start Manual](#)

(19 pages)

[Camcorder Toshiba PA3792U-1CAM Camileo S20 User Manual](#)

Pa3792u-1cam camileo s20 user's guide (138 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Camcorder Toshiba PA3973U-1C0K Camileo X200 User Manual](#)

Pa3973u-1c0k camileo x200 user's guide (149 pages)

[Camcorder Toshiba Camileo P100 Quick Start Manual](#)

Toshiba camileo p100: quick start (33 pages)

[Camcorder Toshiba CAMILEO P20 User Manual](#)

Toshiba camcorder user manual (47 pages)

Summary of Contents for Toshiba CAMILEO B10

[Page 1](#) User's Manual CAMILEO B10...

[Page 2](#) Introduction Welcome and thank you for choosing a TOSHIBA product. For your convenience, your TOSHIBA product is furnished with two guides: a) a Quick Start Guide, and b) this comprehensive PDF User's Manual.

[Page 3: Table Of Contents](#)

Contents Section 1 Getting to Know Your Camcorder6 Overview6 Check the Components6 Safety Instructions7 System Requirements7 Front View8 Side View9 Bottom View9 Section 2 Getting Started

.....10 Loading the Battery

[Page 4](#) Contents Section 4 Playback Mode.....30 Button Function30 LCD Monitor Information 31 Operations for Playback Mode 32 Video Playback33 Photo Playback33 Delete File in Playback Mode34 Section 5 Setting Your Camcorder 35 Setup Menu

[Page 5](#) Contents Section 10 Specifications45 Section 11 Troubleshooting46 Section 12 Other Information 47 TOSHIBA Support 47 Operating Environment Conditions47 Regulatory Information47 Additional Information48 About the battery pack48...

[Page 6: Section 1 Getting To Know Your Camcorder](#)

Section 1 Getting to Know Your Camcorder Overview The camcorder equipped a 5 Mega Pixel sensor that can take H.264 format videos. The H.264 technology allows for extended video recording with less memory. High quality images up to 16 mega-pixels can also be delivered smoothly.

[Page 7: Safety Instructions](#)

Safety Instructions Do not drop, puncture or disassemble the camcorder; otherwise the warranty will be voided. Avoid all contact with water, and dry hands before using. Do not expose the camcorder to high temperature or leave it in direct sunlight. Doing so may damage the camcorder.

[Page 8: Front View](#)

Front View LCD Screen [Photo] Button [Video] Button [Tele(Up)] Button [Thumbnail] Button [Menu/OK] Button MENU [Right] Button [Left] Button [Playback] Button [Return/Exit] Button [Wide(Down)] Button [Delete] Button...

[Page 9: Side View](#)

Side View Power Button Speaker Light Lens [Light] Button [Internet] Button Microphone Indicator light Battery Cover SD card Cover Bottom View HDMI Port Strap Hook Tripod Socket Mini USB 2.0 Port...

[Page 10: Section 2 Getting Started](#)

Section 2 Getting Started Loading the Battery Before using the camera, you must load the supplied Lithium-ion rechargeable battery. Insert the battery according to the correct polarity marks (+ or -). Close the battery cover firmly. Note REMOVE Please remove the insulator on battery connection before use. Charge your battery You must use the supplied AC charger or the USB cable.

[Page 11: Inserting And Removing An Sd Card \(Optional\)](#)

Inserting and Removing an SD Card (Optional) The camcorder comes with an internal memory which allows you to store photos and videos. You can expand the memory capacity by using an optional SD/SDHC/SDXC memory card. Insert the memory card into the slot. Please refer to the figure on the right side.

[Page 12: Turning The Camcorder On And Getting Started](#)

Turning the Camcorder On and Getting Started • To turn on the camcorder: Press [Power Button] for one second to turn it on. • To record video: In Record Mode, press [Video Button] to record videos. To stop recording, press it again.

[Page 13: Section 3 Record Mode](#)

Section 3 Record Mode Button Function [Video] Button: Press to take video. To stop recording, press it again. [Photo] Button: Press to take photo. [Playback] Button: Switch between the Record /Playback Mode. [Return/Exit] Button: Return to the previous screen. Exit. [Tele(Up)] Button: Zoom In.

[Page 14: Lcd Monitor Information](#)

LCD Monitor Information The indicators shown below may display on LCD when videos and photos are recorded: Battery: full power Battery: medium power Battery: low power Battery:

empty power DC power mode Video Resolution FULL HD 1080/30 HD 720/60 HD 720/30 VGA 480/30 Slow Motion (When Slow Motion function is activated, the video resolution is QVGA.)

[Page 15](#) Video Record Mode Stabilization On/ Off Photo Record Mode Self-timer On/ Off 00:03:12 Remaining recordable time 00:03:12 Recording time The amount of photos that can still be taken at current resolution Number of current photo Motion Detection (Video Record Mode Only) Zoom meter: 1X~16X (16X Digital zoom) Note...

[Page 16: Video Recording](#)

Video Recording • In Video Record Mode, press [Video] Button to start recording. When a video is being recorded, a time indicator will display on the LCD monitor. To stop recording, press the [Video] Button again. • Press the [Playback] Button to view the recorded videos.

[Page 17: Options For Menu](#)

Options for Menu Video Setting Photo Setting Effects Setup* Delete • Light • Light • Scene • Menu Sound • Delete Video • Resolution • Resolution • Filter • • Delete Photo • Stabilization • Self-Timer • White Balance • Language • ...

[Page 18: Video Setting](#)

Video Setting Operation Display Screen Press [Menu/OK] Button in the Record Mode. The main menu will show on the screen. Use the Direction Button to select the [Video Setting] icon and then press the [OK] Button to enter its submenu. The Video Setting menu contains 8 options-- Light, Resolution, Stabilization, Motion Detect, Slow Motion, Pre-Record, Time Lapse, and...

[Page 19](#) Resolution Four resolution settings are available. FULL HD 1080/30 Record videos at 1920x1080p 30 resolution. HD 720/60 Record videos at 1280x720p 60 resolution. HD 720/30 Record videos at 1280x720p 30 resolution. VGA 480/30 Record videos at 640x480p 30 resolution. Operation Display Screen In the Video Setting menu, select the [Resolution] icon and then press the [OK] Button to enter its...

[Page 20](#) Slow Motion Record video with slow motion effect. When the video is played, the playback time will be longer than the actual recording time. Operation Display Screen In the Video Setting menu, select the [Slow Motion] icon and then press the [OK] Button to enter its setting menu.

[Page 21](#) Time Lapse Record still images at specific intervals you can set and play them as one video file. Disable Time Lapse. 1 Second Record one frame per second. 3 Seconds Record one frame every 3 seconds. 5 Seconds Record one frame every 5 seconds. Operation Display Screen In the Video Setting menu, select the [Time]...

[Page 22: Photo Setting](#)

Photo Setting Operation Display Screen Press [Menu/OK] Button in the Record Mode. The main menu will show on the screen. Use the Direction Button to select the [Photo Setting] icon and then press the [OK] Button to enter its submenu. The Photo Setting menu contains 7 options-- Light, Resolution, Self-Timer, Face Tracking, Date Printing, ISO, and Slideshow--for you to...

[Page 23](#) Resolution Three resolution settings are available. High-16M Shoot photo at 4608 x 3456, 16 Mega Pixels quality. Standard-5M Shoot photo at 2592 x 1944, 5 Mega Pixels quality. Low-3M Shoot photo at 2048 x 1536, 3 Mega Pixels quality. Operation Display Screen In the Photo Setting menu, select the [Resolution] icon and then press the [OK] Button to enter its...

[Page 24](#) Face Tracking The camcorder can detect human face(s) and focus on the face(s) automatically. This function works in photo mode for capturing portraits in backlight scenes. Operation Display Screen In the Photo Setting menu, select the [Face Tracking] icon and then press the [OK] Button to enter its setting menu.

[Page 25](#) The camcorder adjusts the ISO sensitivity of its images automatically. Two manual ISO sensitivity settings are available. (800/1600). The larger the number is, the higher the ISO sensitivity is set to. Select a small number to shoot a smoother image. Select a large number to shoot an image in a dark location or to shoot a subject moving at high speed.

[Page 26: Effects](#)

Effects Operation Display Screen Press [Menu/OK] Button in the Record Mode. The main menu will show on the screen. Use the Direction Button to select the [Effects] icon and then press the [OK] Button to enter its submenu. The Effects menu contains 3 options-- Scene, Filter, and White Balance --for you to adjust the camcorder settings.

[Page 27](#) Filter You can select the special filter effects on the videos or photos. Auto Shoot without any special effect on the image. Black & White The image is converted to black-and-white. Classic The image is converted to a sepia look. Negative The image is converted as the negative of the normal.

[Page 28: Delete](#)

Delete Operation Display Screen Press [Menu/OK] Button in the Record Mode. The main menu will show on the screen. Use the Direction Button to select the [Delete] icon and then press the [OK] Button to enter its submenu. The Delete menu contains 4 options-- Delete Video, Delete Photo, Select &...

[Page 29](#) Select & Delete Operation Display Screen In the Delete menu, select the [Select & Delete] icon and then press the [OK] Button to enter the video/photo thumbnail screen. Select the desired files and press the [OK] Button. (The check marks will be shown on the selected files.) Select and press the [OK] Button to delete...

[Page 30: Section 4 Playback Mode](#)

Section 4 Playback Mode Button Function The Buttons have the following functions in Playback Mode. [Video] Button: In Playback Mode, press to switch to the Video Playback Mode. [Photo] Button: In Playback Mode, press to switch to the Photo Playback Mode. [Playback] Button: Switch between the Record /Playback Mode.

[Page 31: Lcd Monitor Information](#)

LCD Monitor Information Indicators on the LCD screen while in Playback Mode: Video Playback Mode Photo Playback Mode Battery: full power Battery: medium power Battery: low power Battery: empty power DC power mode Video Resolution FULL HD 1080/30 HD 720/60 HD 720/30 VGA 480/30 Slow Motion (The video resolution is QVGA.)

[Page 32: Operations For Playback Mode](#)

00:03:12 Playback time counter Number of current photo Total number of photos Volume 2 2 / Current number/ Total number of videos Operations for Playback Mode The Playback Mode is for viewing and managing videos and photos on the built-in memory or on an SD Card.

[Page 33: Video Playback](#)

Video Playback Operation Display Screen In the Video Playback Mode, press the [OK] Button to play or pause the video. When the video is paused, press the [Down] Button to go to its delete screen. Use the [Right/Left] Button to go to the next/ previous video.

[Page 34: Delete File In Playback Mode](#)

Delete File in Playback Mode Operation Display Screen In the Playback Mode, press the [Down] Button to go to the delete screen. Select to delete the current file and then select to delete it. Select to cancel and exit. Select to delete all files and select delete them.

[Page 35: Section 5 Setting Your Camcorder](#)

Section 5 Setting Your Camcorder Setup Menu Operation Display Screen Press [Menu/OK] Button in the Record Mode. The main menu will show on the screen. Use the Direction Button to select the [Setup] icon and then press the [OK] Button to enter its submenu.

[Page 36](#) Language Use this option to select the language of the user interface. Operation Display Screen In the Setup menu, select the [Language] icon and then press the [OK] Button to enter its setting menu. Select the desired option and then press the [OK] Button to validate the setting.

[Page 37](#) Default Setting Use this option to restore the default factory setting. Restore the default factory setting. Do not restore the default factory setting. Operation Display Screen In

the Setup menu, select the [Default Setting] icon and then press the [OK] Button to enter its setting menu.

[Page 38: Section 6 Viewing Photos And Videos On Tv](#)

Section 6 Viewing Photos and Videos on TV Connecting to a High-Definition 16:9(Wide) TV Connect the HDMI cable to your camcorder's HDMI Out port. Connect the other end of the cable to a television. Set the video input source of your TV to "HDMI." The steps for viewing stored videos and photos on an HDTV are exactly the same as for viewing them on the LCD monitor.

[Page 39: Section 7 Viewing Photos And Videos On Pc](#)

Section 7 Viewing Photos and Videos on PC Installing Bundled Software The CD-ROM supplied with this camcorder contains 2 pieces of software. • ArcSoft MediaImpression is a user-friendly application that helps you managing your media and uploading your files to the web sites easily. •...

[Page 40: Section 8 Uploading Files To Internet](#)

Section 8 Uploading Files to Internet The built-in CAMILEO UPLOADER application offers you an easy way to upload your files to the social websites instantly. It helps you share them with your family and friends on the web sites. Also, the bundled software, ArcSoft MediaImpression, can be used to upload your files to the web sites.

[Page 41](#) Choose the website you want to upload. Press [Internet Button] on the camcorder again. The files marked with (also in the blue frame) will be uploaded to the website automatically. (You have to fill in the information and check [Remember Password] on the [SETTINGS] page firstly.

[Page 42](#) To upload files selected manually to Internet: Follow the step 2 and 3 on the previous page. Choose the website you want to upload. Click on [VIDEOS]/[PHOTOS] to go to the videos/ photos thumbnail page. Scroll the bar to change the pages.

[Page 43](#) To setup your account information for the website: Choose the website. Click on [SETTINGS] to go to the setup page. Fill in your account information in the blanks. Then click on "Save". You can check [Remember Password] to save your account information and password in CAMILEO UPLOADER.

[Page 44: Section 9 Pc Camera Mode](#)

Section 9 PC Camera Mode PC Camera Mode-Webcam Connect the computer and camcorder with the supplied mini USB2.0 cable. Press the [Playback] Button to switch to the PC Camera Mode. The Indicator Light turns BLUE. In this mode, you can implement live video conference meetings and multimedia communications.

[Page 45: Section 10 Specifications](#)

Section 10 Specifications Specification Image sensor 5 Mega pixel CMOS sensor Operation modes Video record, Photo record Lens Fixed Focus (F 2.5) Focus range HD 720/60 & HD 720/30: 75 cm ~ infinity (29.5 inches) Photo & FULL HD 1080/30:110 cm ~ infinity (43.3 inches) Zoom...

[Page 46: Section 11 Troubleshooting](#)

Section 11 Troubleshooting Troubleshooting The files on the memory card do not display smoothly when the LCD shows the "!" marking. The "!" symbol means the SD card is too low of a speed or contains corrupted files. The way to solve this condition is to format SD card by the camcorder instead of a PC (Please refer to the detailed Format instruction in Section 5).

[Page 47: Section 12 Other Information](#)

Section 12 Other Information TOSHIBA Support Need help? WE ARE HERE FOR YOU We believe in our customers and we are here for you. We understand that you may have questions regarding your new TCL Product. Should you require any assistance, from technical questions to more general information, our Technical Support and Customer Service staff is available to you.

[Page 48: Additional Information](#)

About the battery pack • Use only batteries recommended by TOSHIBA as replacements. The

battery pack is lithium ion batteries, which can explode if not replaced, used, handled or disposed of properly. Dispose of the battery as required by local ordinances or regulations.

[Page 49](#) 0970AA213L-A04S B10_UM_V01_0617 For more information, please visit:
www.toshiba.ca...