



Asus RT-AC52U B1 - AC750 Dual Band 802.11ac Router Quick Start Guide

Contents

- 1 ASUS Recycling/Takeback Services
- 2 Package Contents
- 3 A quick look
- 4 Setting up a Home Network - Router Mode
- 5 Using AiCloud
- 6 Frequently Asked Questions (FAQs)
 - 6.1 Authentication
 - 6.2 Cannot find the router
 - 6.3 Cannot access the Internet via wireless LAN adapter
 - 6.4 Network name or encryption keys are forgotten
- 7 Documents / Resources
 - 7.1 References
 - 7.2 Download manual

ASUS Recycling/Takeback Services

NOTE: For more details on the features of the wireless router, please refer to the user manual included in the Utility CD. ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our

environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components, as well as the packaging materials. Please go to <http://csr.asus.com/english/Takeback.htm> for the detailed recycling information in different regions.

Package Contents

RT-AC52U B1 Wireless

Router Network cable (RJ-45)

Support CD (User Manual/utilities)

AC adapter

Quick Start Guide

Warranty card

NOTE: If any of the items is damaged or missing, please contact your retailer.

A quick look

1. LAN 1~4 LED
2. WAN (Internet) LED
3. USB LED
4. 2.4GHz / 5GHz LED

5. Power LED
6. Reset button
7. Power switch
8. Power (DC-IN) port

9. USB port
10. WPS button
11. Gigabit WAN (Internet) port
12. Gigabit LAN 1~4 ports

DO NOT throw this product in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Setting up a Home Network - Router Mode

1. Connect your devices.

1. Insert your wireless router's AC adapter to the DC-IN port

and plug it to a power outlet.

2. Using the bundled network cable, connect your computer to your wireless router's LAN port.

Ensure that the WAN and LAN LEDs are blinking. for Automatic IP (DHCP)

3. Using another network cable, connect your modem to your wireless router's WAN port.
4. Insert your modem's AC adapter to the the DC-IN port and plug it to a power outlet.

NOTE: Before you proceed, disconnect the wires/cables from your existing modem setup. After two minutes, reconnect the wires/cables.

2. Launch the web browser and follow the Quick Internet Setup (QIS) steps.

NOTES:

1. If the QIS web page does not appear after launching the web browser, disable the proxy settings on the web browser.
2. If QIS does not launch automatically, follow these steps to manually launch QIS:

- On your web browser, key in <http://router.asus.com>. Use

the default username admin and password admin to log into the user interface.

- Click Quick Internet Setup on the left panel on the Network Map page.
- The auto-detection of your ISP connection type takes place when you configure the wireless router for the first time or when your wireless router is reset to its default settings.

Obtain the necessary information from your ISP about the Internet connection type.

3. Setup complete.

Using AiCloud

1. From Google Play Store or Apple Store, download and install the ASUS AiCloud app to your smart device.

Obtain the necessary information from your ISP about the Internet connection type.

2. Connect your smart device to your network. Follow the instructions to complete the AiCloud setup process.

Frequently Asked Questions (FAQs)

The client cannot establish a wireless connection with the router.
Out of Range:

- Put the router closer to the wireless client.
- Try to change the channel settings.

Authentication

- Use wired connection to connect to the router.
- Check the wireless security settings.
- Press the Reset button at the rear panel for more than five seconds.

Cannot find the router

- Press the Reset button at the rear panel for more than five seconds.
- Check the setting in the wireless adapter such as SSID and

encryption settings.

Cannot access the Internet via wireless LAN adapter

- Move the router closer to the wireless client.
- Check whether the wireless adapter is connected to the correct wireless router.
- Check whether the wireless channel in use conforms to the channels available in your country/area.
- Check the encryption settings.
- Check if the ADSL or Cable connection is correct.
- Retry using another Ethernet cable.

If the ADSL "LINK" light blinks continuously or stays off, Internet access is not possible - the Router is unable to establish a connection with the ADSL network.

- Ensure that all your cables are all properly connected.
- Disconnect the power cord from the ADSL or cable modem, wait a few minutes, then reconnect the cord.
- If the ADSL light continues to blink or stays OFF, contact your ADSL service provider.

Network name or encryption keys are forgotten

- Try setting up the wired connection and configuring the wireless encryption again.
- Press the Reset button of the wireless router for more than five seconds.
- Factory default settings:

User name / Password:	IP address:	SSID:
admin / admin	http://router.asus.com	ASUS

Where can I find more information about the wireless router?

- User Manual in the support CD
- Online FAQ site: <http://support.asus.com/faq>
- Technical Support site: <http://support.asus.com>
- Customer Hotline: Refer to the Support Hotline in this Quick Start Guide

Documents / Resources

References

[Global Take Back Service | Resource Regeneration | Circular Economy | ASUS ESG website, ASUS ESG goal](#)

[Google Play](#)

[App Store - Apple](#)

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus RT-AC52U B1 - AC750 Dual Band 802.11ac Router Quick Start Guide](#)

Need Assistance?

Do you have a question about the RT-AC52U B1 that isn't answered in the manual?
Leave your question here.

■ ■

Stay updated with the latest solutions
Submit your question

Related Manuals for Asus RT-AC52U B1

[ASUS RT-AC51U - Dual-band Wireless-AC750 Router Quick Start Guide](#)

(article)

[Asus ZenWiFi XD5 - AX3000 Dual Band WiFi Router Quick Setup Guide](#)

(article)

[Network Router ASUS RT-AC52U User Manual](#)

802.11ac dual band router (130 pages)

[Network Router Asus RT-AC52U Setup](#)

Hack the world (16 pages)

[Network Router Asus RT-AC66U User Manual](#)

Dual band 3x3 802.11ac gigabit router (131 pages)

[Network Router Asus RT-AC51U Configuration Manual](#)

Snt recommended (8 pages)

[Network Router Asus RT-AC56U User Manual](#)

Dual band wireless-ac1200 gigabit router (30 pages)

[Network Router Asus RT-AC56U User Manual](#)

Dual band 2x2 802.11ac (30 pages)

[Network Router Asus RT-AC55U Quick Start Manual](#)

Dual band wireless-ac1200 gigabit router (81 pages)

[Network Router Asus RT-AC55U Quick Start Manual](#)

Dual band wireless-ac1200 gigabit router (81 pages)

[Network Router Asus RT-AC5300 Quick Start Manual](#)

(76 pages)

[Network Router Asus RT-AC55UHP Quick Start Manual](#)

Dual band wireless gigabit router (34 pages)

[Network Router Asus RT-AC58U User Manual](#)

Wireless-ac1300 dual band gigabit router (124 pages)

[Network Router Asus RT-AC58U Quick Start Manual](#)

Dual band gigabit wifi router (80 pages)

[Network Router Asus RT-AC53 Quick Start Manual](#)

Wireless-ac750 dual-band gigabit router (88 pages)

[Network Router Asus RT-AC57U Quick Start Manual](#)

Wireless-ac1200 dual-band gigabit router (68 pages)

[Network Router Asus RT-AC57U Quick Start Manual](#)

Wireless-ac1200 dual band gigabit router (78 pages)

[Network Router Asus RT-AC57U V3 Quick Start Manual](#)

Wireless-ac1200 dual band gigabit router (136 pages)

[Network Router Asus RT-AC59U Quick Start Manual](#)

Wireless-ac1500 dual band gigabit router (60 pages)

[Network Router Asus RT-AC54U User Manual](#)

Wireless-ac1200 dual band usb router (130 pages)

[Save Article as PDF](#)