

TOSHIBA

Toshiba RAS-10 NAH Series Owner's Manual

1
2
3
4
5

--

-

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Precautions for Safety

2 Indoor Unit Display


3 Preparation before Use

4 Maintenance

5 Operation and Performance

6 Troubleshooting (Check Point)

[Download this manual](#)

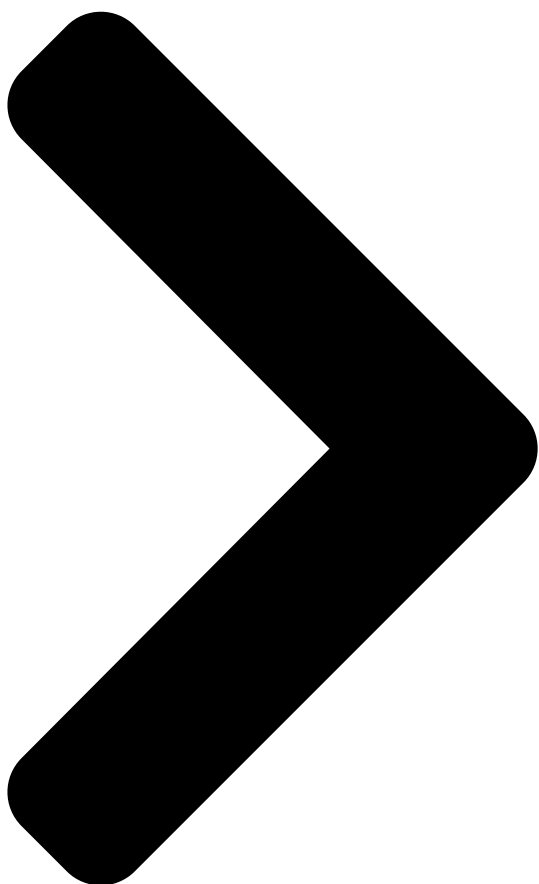

OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)

For general public use

ENGLISH

nl
d
o
ro
u
n
ti
O
u
dt
o
ro
u

TOSHIBA

n
ti
(Heating models)
RAS-07, 10, 13, 18, 24 UKHP Series
/ 07, 10, 13, 18, 24 UAH Series
RAS-10, 13, 18, 24 NKHP Series
/ 10, 13, 18, 24 NAH Series
RAS-10, 13, 16 NKV Series
/ 10, 13, 16 NAV Series
RAS-M10, M13, M16 NKV Series
1075005001



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-10 NAH Series

[Air Conditioner Toshiba 16N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-05, RAS-07 Installation Manual](#)

Inverter (274 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10 Installation Manual](#)

(32 pages)

[Air Conditioner Toshiba RAS-18 SKP Series Owner's Manual](#)

(21 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

Split type; r32 or r410a inverter (20 pages)

[Air Conditioner Toshiba RAS-13BKV-E Installation Manual](#)

(15 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-10UKHP series Installation Manual](#)

(9 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-07 Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10 Series Owner's Manual](#)

Indoor and outdoor unit (5 pages)

[Air Conditioner Toshiba RAS-07 Owner's Manual](#)

(4 pages)

[Air Conditioner Toshiba 16SKV2 Series Owner's Manual](#)

(4 pages)

Summary of Contents for Toshiba RAS-10 NAH Series

[Page 1](#) OWNER'S MANUAL AIR CONDITIONER (SPLIT TYPE) For general public use ENGLISH (Heating models) RAS-07, 10, 13, 18, 24 UKHP Series / 07, 10, 13, 18, 24 UAH Series RAS-10, 13, 18, 24 NKHP Series / 10, 13, 18, 24 NAH Series RAS-10, 13, 16 NKV Series / 10, 13, 16 NAV Series RAS-M10, M13, M16 NKV Series...

[Page 2: Precautions For Safety](#)

ENGLISH PRECAUTIONS FOR SAFETY DANGER • Do not install, repair, open or remove the cover. It may expose you to dangerous voltages. Ask the dealer or the specialist to do this. • Turning off the power supply will not prevent potential electric shock. •...

[Page 3](#) REMOTE CONTROL FUNCTION Infrared signal emitter Start/Stop button (Mode select button (MODE) Temperature button (TEMP.) Fan speed button (FAN) Auto louver button (SWING) Set louver button (FIX) On timer button (ON) Off timer button (OFF) Sleep timer button (SLEEP) "...

[Page 4: Maintenance](#)

TIMER OPERATION Setting the ON Timer Setting the OFF Timer 1. Press : Set the desired ON timer. 1. Press : Set the desired OFF timer. 2. Press : Set the timer. 2. Press : Set the timer. 3. Press : Cancel the timer.

[Page 5: Operation And Performance](#)

Note: • To cancel this function, press and hold the TEMPORARY/RESET button about 20 seconds. The self cleaning function will be cancelled. • This function cannot use with Inverter model. OPERATION AND PERFORMANCE 1. Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON.

This manual is also suitable for:

Ras-10 ukhp seriesRas-13 ukhp seriesRas-18 ukhp seriesRas-24 ukhp seriesRas-07 uah seriesRas-10 uah series ...
[Show all](#)