



Toshiba EC042A5C-SS Instructions Manual

Microwave convection oven

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Table of Contents](#)

[2 Setting up Your Oven](#)

[3 Operation](#)

[4 Maintenance](#)

[Download this manual](#)



Microwave Convection Oven

Instruction

EC042A5C-SS

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba EC042A5C-SS

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

[Microwave Oven Toshiba EC9P032SV-SV Instruction Manual](#)

(27 pages)

[Microwave Oven Toshiba EC034A2XC-S1 Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EC0P042SV-SSHA Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EC0P042SV-S Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM131A5C-SS Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba ER-669ET Owner's Manualbook](#)

Microwave oven with turn table (7 pages)

Summary of Contents for Toshiba EC042A5C-SS

[Page 1](#) Microwave Convection Oven Instruction EC042A5C-SS...

[Page 3: Table Of Contents](#)

Welcome to the world of TOSHIBA BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE CONTENTS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY IMPORTANT SAFETY INSTRUCTIONS GROUNDING INSTRUCTIONS...

[Page 4: Precautions To Avoid Possible Exposure To Excessive Microwave Energy](#)

HINGES AND LATCHES (broken or loosened) c. DOOR SEALS AND SEALING SURFACE The oven should not be adjusted or repaired by anyone except properly qualified service personnel. Specifications Model: EC042A5C-SS Rated Voltage: 120V~ 60Hz 1500 W Rated Input Power(Microwave): Rated Output Power(Microwave):...

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS WARNING To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following: 1. Read all instructions before using the appliance. 2.

[Page 6](#) IMPORTANT SAFETY INSTRUCTIONS WARNING 16. To reduce the risk of fire in the oven cavity: 1). Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking. 2). Remove wire twist-ties from paper or plastic bag before placing bag in oven. 3).

[Page 7](#) IMPORTANT SAFETY INSTRUCTIONS WARNING 18. Oversized food or oversized metal utensils should not be inserted in a microwave/ toaster oven as they may create a fire or risk of electric shock. 19. Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.

[Page 8: Grounding Instructions](#)

GROUNDING INSTRUCTIONS DANGER Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance. This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3 prong grounding-type plug for insertion into a proper grounding-type receptacle.

[Page 9](#) GROUNDING INSTRUCTIONS Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

[Page 10](#) GROUNDING INSTRUCTIONS RADIO INTERFERENCE Operation of the microwave oven may cause interference to your radio, TV or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures: Clean door and sealing surface of the oven. Reorient the receiving antenna of radio or television.

[Page 11: Utensils](#)

GROUNDING INSTRUCTIONS UTENSILS CAUTION Electric Shock Hazard Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."...

[Page 12](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's instructions. The bottom of browning dish Browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. Microwave-safe only. Follow manufacturer's instructions. Do not Dinnerware use cracked or chipped dishes.

[Page 13](#) MATERIALS TO BE AVOIDED IN MICROWAVE OVEN UTENSILS REMARKS Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with May cause arcing. Transfer food into microwave-safe dish. metal handle May cause arcing and could cause a fire in the oven. Metal twist ties May cause a fire in the oven.

[Page 14: Setting Up Your Oven](#)

SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: Glass tray Turntable ring Instruction Manual Control panel Turntable shaft Turntable ring Glass

tray...

[Page 15](#) SETTING UP YOUR OVEN TURNTABLE INSTALLATION Hub (underside) Glass tray
Turntable shaft Turntable ring a. Never place the glass tray upside down. The glass tray should never be restricted. b. Both glass tray and turntable ring must always be used during cooking. c.

[Page 16](#) SETTING UP YOUR OVEN COUNTERTOP INSTALLATION Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

[Page 17](#) SETTING UP YOUR OVEN INSTALLATION 2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label. WARNING Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

[Page 18: Operation](#)

OPERATION CONTROL PANEL AND FEATURES (17) (10) (11) (12) (13) (14) (15) (16) Microwave (10) Combination Auto Menu (Auto Bake, Auto Roast, Popcorn) (11) Favorite Sensor Menu (Sensor Cook, Sensor Reheat) (12) Warm Hold Auto Defrost (13) Time Defrost More (14) Less Number Pads...

[Page 19](#) OPERATION 1. POWER LEVELS Ten power levels are available. Prior to cooking, press Power Level and "PL10" will display. Then press number pads to select a different power level. Please refer to page 18 "MICROWAVE COOK" for detailed power level setting. Level Power 100%...

[Page 20](#) OPERATION 3. KITCHEN TIMER Press Timer/Clock once, "00:00" and "Timer" will appear in the display. Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds. Press to confirm setting, the timer indicator will flash, and the timer will start to count down.

[Page 21](#) OPERATION NOTE: In the process of setting, if the pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock. 5. CONVECTION COOK Press Conv. once, "350" will flash. "Conv.", "F" and corresponding temperature icons will display.

[Page 22](#) OPERATION 6. COMBINATION FUNCTION (CONVECTION + MICROWAVE) Press Combi, "350" will flash. "Cook", "Conv.", "F" and corresponding temperature icons will display. Press Combi more times or press More or Less to choose the cooking temperature. Temperature selections (° F): 170, 250, 275, 300, 325, 350, 375. Press to confirm.

[Page 23](#) OPERATION 8. ONE TOUCH START Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6. Press to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds. Instant cooking at 100% power level and 30 seconds cooking time can be started by pressing .

[Page 24](#) OPERATION 10. Auto Defrost Function Press Auto Defrost, "dEF1", "Cook" and "DEF." will appear in the display. Press Auto Defrost more times or press More / Less pad to choose the defrost food type, "dEF1" through "dEF4". See table below. dEF3 dEF4 LED display...

[Page 25](#) OPERATION 11. AUTO BAKE FUNCTION Press Auto Bake, "Ab-1", "Cook", "Conv." and "Auto" will display. Press Auto Bake more times to choose the menu, "Ab-1" through "Ab-4". See Auto Bake Chart below. For Ab-1, Ab-2 and Ab-3, press number pad 1 to choose the default weight or portion.

[Page 26](#) OPERATION 13. Sensor Cook Press Sensor Cook, "SC-1", "SEN." and "Auto" will display. Press Sensor Cook more times or press number pads to choose the type of food. Press to start cooking. "SC-", "SEN." and "Auto" will flash. Once the item has been sensed, the remaining cooking time will display.

[Page 27](#) OPERATION 14. SENSOR REHEAT Press Sensor Reheat , "Sr-1", "SEN." and "Auto" will display. Press Sensor Reheat more times or press number pads 1 through 3 to choose the type of food. Press to start cooking. "Sr-", "SEN." and "Auto" will flash. Once the item has been sensed, the remaining cooking time will flash.

[Page 28](#) OPERATION 16. FAVORITE FUNCTION Press Favorite to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display. Press Favorite until your desired procedure number appears in the display. Press to begin it. A maximum of two cooking stages can be set for each procedure.

[Page 29](#) OPERATION 17. Muti-Stage Cooking At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage. NOTE: Auto Menu and Preheat cannot be set in Multi-stage Cooking. EXAMPLE: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes;...

[Page 30](#) OPERATION 19. TURN ON/OFF THE BUZZER SOUND It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound. When the sounds turn off, long pressing on 8 for 3 seconds, it sounds a long beep and the sound turn off.

[Page 31](#) OPERATION 22. Cooking End Reminder Function The oven will beep five times to alert the user that cooking time has ended. "End" will display. The time of day will display by opening the door or pressing pad. 23. Other Specifications must be pressed to continue cooking if the door is opened during cooking. A single beep sounds to indicate that a pad is correctly pressed;...

[Page 32: Maintenance](#)

MAINTENANCE TROUBLESHOOTING Check your problem by using the chart below and try the solutions for each problem. TROUBLE Possible Cause Possible Remedy Electrical cord for oven is not Plug into the outlet. plugged in. Close the door and try again. Oven will not start Door is open.

[Page 33](#) If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: customerservice@us.toshiba-lifestyle.com 855-204-5313 Midea America Corp 5 Sylvan Way,...

[Page 36](#) Customer Assistance: 855- -53 13 Midea America Corp 5 Sylvan Way, Parsippany, NJ 07054...