



Toshiba MIRAI RAS-05BKV-E Owner's Manual

1
2
3
4

--



•

Bookmarks

[Download this manual](#)

Quick Links



OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)
For general public use

TOSHIBA

Indoor unit

RAS-05, 07, 10, 13, 16BKV-E

Outdoor unit

RAS-05, 07, 10, 13, 16BAV-E

111835029

TOSHIBA

[Next Page](#)

1
2
3
4

Related Manuals for Toshiba MIRAI RAS-05BKV-E

[Air Conditioner Toshiba RAS-13BKV-E Service Manual](#)

Split type (106 pages)

[Split air conditioner Toshiba RAS-05 Installation Manual](#)

(16 pages)

[Air Conditioner Toshiba RAS-07BKV-E Installation Manual](#)

(315 pages)

[Air Conditioner Toshiba RAS-13BAV-E Owner's Manual](#)

(84 pages)

[Air Conditioner Toshiba RAS-13BKV-E Installation Manual](#)

(15 pages)

[Air Conditioner Toshiba RAS-07 Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-07 Owner's Manual](#)

(4 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-05BKVG-E Owner's Manual](#)

R32 inverter, for general public use (16 pages)

[Air Conditioner Toshiba RAS-16BAVG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-TR Owner's Manual](#)

(18 pages)

[Air Conditioner Toshiba RAS-07TKVG-EE Service Manual](#)

Split type (136 pages)

[Air Conditioner Toshiba RAS-18J2AVG-E Owner's Manual](#)

R32 or r410a inverter, air conditioner split type, for general public use, indoor/outdoor units (6 pages)

[Air Conditioner Toshiba RAS-18E2KVG-E Installation Manual](#)

(21 pages)

[Air Conditioner Toshiba RAS-24E2KVG-E Owner's Manual](#)

Inverter r32 or r410a, for general public use, indoor/outdoor unit (7 pages)

[Air Conditioner Toshiba RAS-05E2KVG-TR Installation Manual](#)

(40 pages)

Summary of Contents for Toshiba MIRAI RAS-05BKV-E

[Page 1](#) OWNER'S MANUAL ENGLISH ENGLISH AIR CONDITIONER (SPLIT TYPE) For general public use Indoor unit RAS-05, 07, 10, 13, 16BKV-E Outdoor unit RAS-05, 07, 10, 13, 16BAV-E 1118350297...

[Page 2](#) PRECAUTIONS FOR SAFETY AIRFLOW DIRECTION ● Do not install, repair, open or remove the cover. It may expose you to dangerous voltages. Ask the dealer or the specialist to do this. Press : Move the louver in ● Turning off the power supply will not prevent potential the desired vertical direction.

[Page 3](#) ECO OPERATION MAINTENANCE To automatically control room to save energy (except in DRY and FAN ONLY Firstly, turn off the circuit breaker. mode) Indoor Unit and Remote Control Press : Start and stop the operation. ● Clean the indoor unit and the remote control with a wet cloth when Note: Cooling operation;...

[Page 4](#) Information according to EMC Directive 2004/108/EC (Name of the manufacturer) TOSHIBA CARRIER (THAILAND) CO., LTD. (Address, city, country) 144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI, AMPHUR MUANG, PATHUMTHANI 12000, THAILAND. (Name of the Importer/Distributor in EU) TOSHIBA CARRIER UK LTD.

This manual is also suitable for:

[Mirai ras-07bkv-e](#)[Mirai ras-10bkv-e](#)[Mirai ras-13bkv-e](#)[Mirai ras-16bkv-e](#)[Mirai ras-05bav-e](#)[Mirai ras-07bav-e](#) ... [Show all](#)