
TOSHIBA

Toshiba TWP-N1890UK(W) Instruction Manual


19
20
21
22
23
24
25
26
27
28
29
30


•

Download this manual	Quick Links

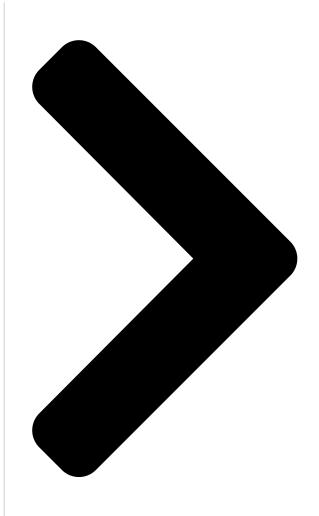

  TOSHIBA เค





Related Manuals for Toshiba TWP-N1890UK(W)

Water Filtration Systems Toshiba TWP-N1861UUFKW Instruction Manual

(22 pages)

Water Filtration Systems Toshiba TWP-TSR76THK Instruction Manual

Ro tabletop water purifier (28 pages)

Water Filtration Systems Toshiba TWP-TSR75SHKW Instruction Manual

Ro tabletop water purifier (14 pages)

Summary of Contents for Toshiba TWP-N1890UK(W)

<u>Page 16</u> Instruction Manual Water Puri er TWP-N1890UK(W) Please read the manual carefully before operating the water purifier. Retain it for future reference.

<u>Page 17</u> 1. Safety Instruction	
I 1-1 Salety Histi uctions	.T T-Z
Packing List5 2. Produ	
Introduction5 2-1 Name of	
parts5 2-2 Operation p	anel
5 2-3 Water treatment pro	cess
diagram6 2-4 Electric schematic diagram-	
6 2-5 How to use	
7 3. Cleaning and maintenance	
10 3-1 Trouble shooting	
10 3-2 Maintenance steps	
11 4.Filter introduction	
12 4-1 Filter introduction	
12	

Page 18 1-1 Safety Instructions...

Page 22: Product Introduction

1-2 Packing List Water Puri er Instruction 1/4 PE pipe Power adapter Inlet ball valve (1set) Manual(1 copy) (3m) (1PC) (1PC) Packing box Inlet ball Water storage Snap ring(8PC) Adapter (1PC) valve(1PC) cup(1PC) 2. Product Introduction 2-1 Name of parts Top cover Filter Water storage cup...

<u>Page 23</u> Water storage cup details Cup lid placing indicator Flip lid of water connection Water connection Liquid level sensor inside Cup lid placing groove Cup locating groove Indicator Cup base Cup body Touch key 2-3 Water treatment process diagram Tap water connection Concentrated water outlet Electromagnetic valve of Waste water...

Page 24: Installation

2-5 How to use Notes: The installation shall be conducted by professional in local sell on commission and service site. Installation 1. Take out the product from packaging box and 2. Take the three-way ball valve out and install put it under water groove in the kitchen. it on tap pipe.

<u>Page 25</u> Diagrammatic drawing of water installation Notes: There are some di erences between drawings in manual and real object. The practice is subjected to real object. Main materials and equipment to be installed 1. Main engine 2. Ball valve of water inlet 3.

<u>Page 26</u> Notes: When using the machine for the rst time, in order to ensure the sanity and safety of water, the tap needs turning on one hour and then turning o , standing for two hours,

Page 27: Cleaning And Maintenance

Water intake Press the key to enable the water intake function (Indicator light will light). Put water storage cup on cup base. Water puri er begins to work, and storage water cup begins to take water. It is a normal phenomenon that, after rstly using or changing the new Iter element, a spot of black water produced at rst.

<u>Page 28</u> Issues Reason Trouble shooing The Iter is blocked. The Iter need washing or exchanging \square Water yeild decreases The Iter is not be exchanged in time, \square The Iter need exchanging abnormally \square then out of services Not opening the ball valve completely \square ...

<u>Page 29</u> 5. Change the Iter. Judge whether Iter needs to 6. Connect to water source to make product be changed according to the used time of Iter out ow water normally. Check whether there and indication for of Iter lifespan (according to are water leak in each connections with dry product functions), If Iter needs to be changed, tissue.

Page 30: Technical Parameters

1. The ash of the indicator light of Iter lifespan, 2. First close three-way ball valve, then indicates expiration of the lifetime of Iter . disconnect the power. Contact with Toshiba service. Indicator light for cup base which is special for water Disconnect power...