

Motherboard Overview - Asus PRIME H310M-CS R2.0 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

 
14

15

16

17

18
19
20
21
22
23
24
25



•


•

Bookmarks



Product introduction

Motherboard overview

- Unplug the power cord from the wall socket before touching any component.
- Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.
-  Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so

may cause severe damage to the motherboard, peripherals, or components.

Unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage to motherboard components.

Place this side towards the rear of the chassis

Scan the QR code to get the detailed pin definitions.


ASUS PRIME H310M-CS R2.0



17.8cm(7.0in)

KBMS
TPM
ATX12V
VGA
U31G1_34
USB910_B
Realtek
8111H
LAN_USB56
CHA_FAN
LPT
AUDIO
Super
I/O
ALC
887
PCIEX1

CPU_FAN
DIGI
+VRM
LGA1151
PCIEX16
Intel
®
H310
4400
800
SPEAKER
USB78
SATA6G_1
SATA6G_2
F_PANEL

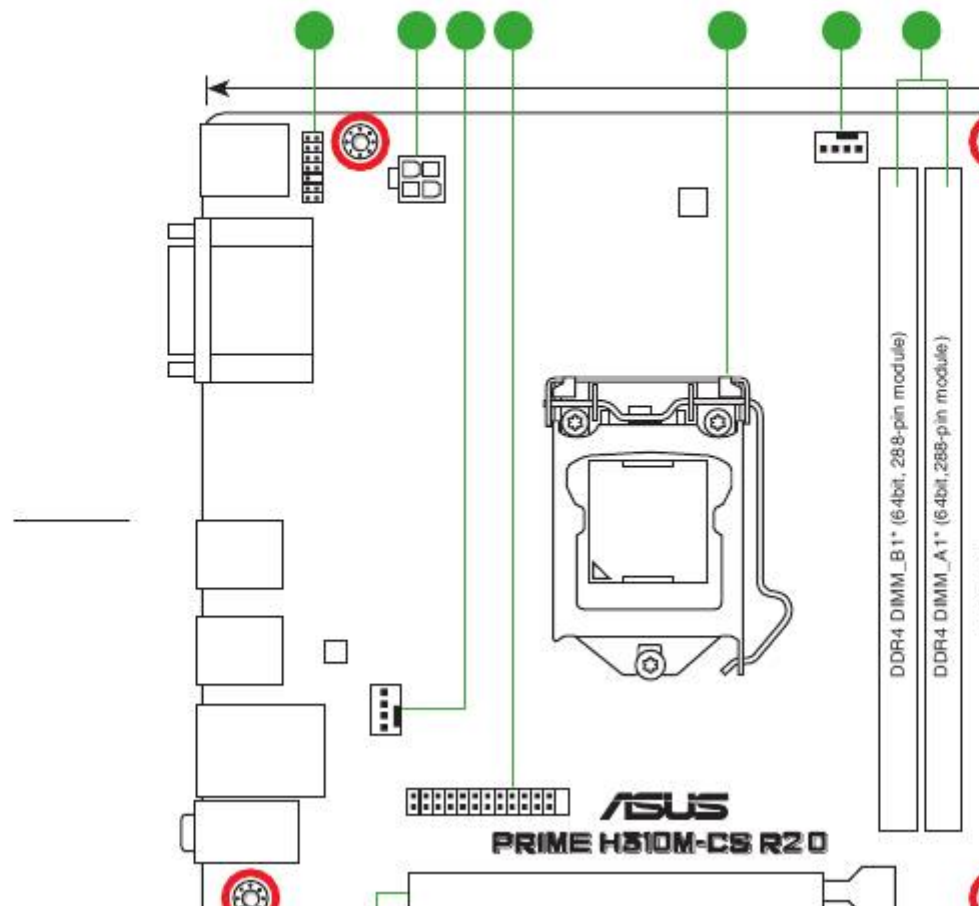

1



1-1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
6
7
8
9
10
11
12
13

Related Manuals for Asus PRIME H310M-CS R2.0

[Motherboard Asus PRIME H310M-CS R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H310M-C Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-C R2.0/CSM Quick Start Manual](#)

(2 pages)

[Motherboard Asus H310M-C/HDMI R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus H310M-C/HDMI Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H310M-C/PS R2.0 Manual](#)

(54 pages)

[Motherboard Asus PRIME H310M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A User Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-F R2.0 Manual](#)

(25 pages)

[Motherboard Asus TUF H310M-PLUS GAMING R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-D Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

[Motherboard Asus PRIME H310M-DASH R2.0 Manual](#)

(26 pages)

[Motherboard Asus H310M-IM-A Manual](#)

(66 pages)

Related Content for Asus PRIME H310M-CS R2.0

[ROG RAMPAGE V EDITION 10 Motherboard Overview](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Motherboard Overview](#)

Asus Z13PE-D16

[WS X299 SAGE Motherboard Overview](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Motherboard Overview](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Motherboard Overview](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Motherboard Overview](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Motherboard Overview](#)

Asus H110M-P/DVI

[PRIME X570-PRO Motherboard Overview](#)

Asus PRIME X570-PRO