

TOSHIBA

Toshiba MM-EM20P(WH) Instruction Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



Microwave Oven

INSTRUCTION MANUAL

Model

TOSHIBA MM-EM20P(WH)

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

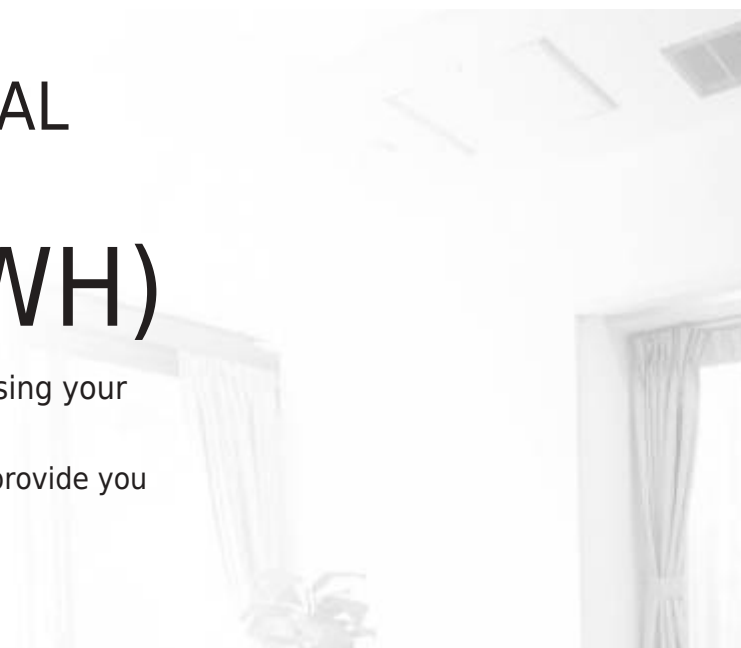


Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba MM-EM20P(WH)

[Microwave Oven Toshiba MM-EM20P Manual](#)

(160 pages)

[Microwave Oven Toshiba MM-EM20P Instruction Manual](#)

(23 pages)

[Microwave Oven Toshiba MM-EM25PE\(BM\) Instruction Manual](#)

(72 pages)

[Microwave Oven Toshiba MM-EM25P\(WH\) Instruction Manual](#)

(24 pages)

[Microwave Oven Toshiba MM-EM25PF Instruction Manual](#)

(72 pages)

[Microwave Oven Toshiba AC028A2CA Instruction](#)

Microwave convection oven (33 pages)

[Microwave Oven Toshiba MW2-MM20P Instructions Manual](#)

(98 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba ER-ND300C Instruction Manual](#)

(156 pages)

[Microwave Oven Toshiba ML2-EC09SAIT Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba ML2-TC10SAIT Instruction Manual](#)

(40 pages)

[Microwave Oven Toshiba MV-SAM20T Instruction Manual](#)

(234 pages)

[Microwave Oven Toshiba MV-TC25T Manual](#)

(128 pages)

[Microwave Oven Toshiba MM2-AM23PF Instruction Manual](#)

(102 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

Summary of Contents for Toshiba MM-EM20P(WH)

[Page 1](#) Microwave Oven INSTRUCTION MANUAL Model: MM-EM20P(WH) Read these instructions carefully before using your microwave oven, and keep it carefully. If you follow the instructions, your oven will provide you with many years of good service. SAVE THESE INSTRUCTIONS CAREFULLY...

[Page 3: Table Of Contents](#)

CONTENTS CONTENTS 1 PRECAUTIONS2 SPECIFICATIONS
..... 2 IMPORTANT SAFETY INSTRUCTIONS3-4 CLEANING
..... 5 UTENSILS 5-6 SET UP & INSTALLATION 7-8
CONTROL PANEL9 OPERATION MICROWAVE POWER LEVEL

[Page 4: Precautions](#)

PRECAUTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS WARNING To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following: 1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY". 2.

[Page 6](#) 22. The appliance is intended to be used freestanding. 23. The rear surface of appliances shall be placed against a wall. 24. The appliances are not intended to be operated by means of an external timer or separate remote-control system. READ CAREFULLY AND KEEP FOR FUTURE REFERENCE To Reduce the Risk of Injury to Persons Grounding Installation...

[Page 7: Cleaning](#)

CLEANING Be sure to unplug the appliance from the power supply. 1. Clean the cavity of the oven after using with a slightly damp cloth. 2. Clean the accessories in the usual way in soapy water. 3. The door frame and seal and neighboring parts must be cleaned carefully with a damp cloth when they are dirty.

[Page 8: Utensils](#)

Materials you can use in microwave oven Utensils Remarks Browning dish Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. Dinnerware Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

[Page 9: Set Up & Installation](#)

SET UP & INSTALLATION SETTING UP YOUR OVEN Names of Oven Parts and Accessories Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: Glass tray 1 Turntable ring assembly 1 Turntable Shaft 1 Instruction Manual 1 A) Control panel...

[Page 10](#) Countertop Installation Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

[Page 11: Control Panel](#)

CONTROL PANEL 1. DIGITAL DISPLAY 2. TIME COOK Press to set Cooking time. 3. TIME DEFROST 4. WEIGHT DEFROST 5. POWER Press to select Microwave power level. 6. CLOCK Press to set Clock. 7. KITCHEN TIMER 8. Auto Menu • POPCORN •...

[Page 12: Operation](#)

OPERATION MICROWAVE POWER LEVEL* 11 power levels are available. Press "POWER" to select Level 10. Press the digit on the Control Panel to select Level 9 to 0. When you select "PL0", there is no power, only FAN will work to remove odor in the cabinet. Level Power 100%...

[Page 13: Express Cook](#)

EXPRESS COOK (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press "START/+30SEC." to increase the cooking time. The maximum cooking time is 99 minutes and 99 seconds.

[Page 14: Multi-Stage Cooking](#)

- FROZEN VEGETABLE (a) Press "FROZEN VEGETABLE" repeatedly until the number you wish appears in the display, "150", "350", "500" grams will display in order. For example, press "FROZEN VEGETABLE" once, "150" appears. (b) Press "START/+30SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

[Page 15: Lock Function For Children](#)

LOCK FUNCTION FOR CHILDREN Lock: In waiting state, press "STOP/CANCEL" for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state; meanwhile, screen will display " ". Lock quitting: In locked state, press "STOP/CANCEL" for 3 seconds, there will be a long "beep" denoting that lock is released.

[Page 16: Trouble Shooting](#)

TROUBLE SHOOTING Normal Radio and TV reception may be interfered when microwave oven operating. Microwave oven interfering TV It is similar to the interference of small electrical appliance, like mixer, vacuum reception cleaner, and electric fan. It is normal. Dim oven light In low power microwave cooking, oven light may become dim.