

Toshiba RAV-SM564MUT-E Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



AIR CONDITIONER (SPLIT TYPE)

Owner's Manual

Indoor Unit

Model name:

Compact type: RAV-SM304MUT-E

TOSHIBA
Leading Innovation >>>


RAV-SM404MUT-E

RAV-SM454MUT-E

RAV-SM564MUT-E



Owner's Manual

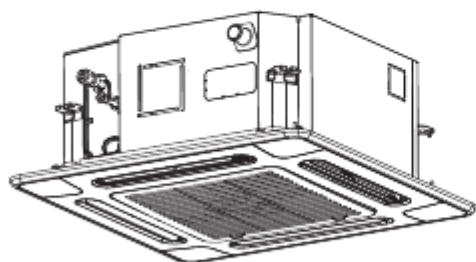

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAV-SM564MUT-E

[Air Conditioner Toshiba RAV-SM304MUT-E Installation Manual](#)

(288 pages)

[Air Conditioner Toshiba RAV-SM304MUT-E Service Manual](#)

Indoor unit digital inverter: compact 4-way cassette type; concealed duct type; ceiling type (121 pages)

[Air Conditioner Toshiba RAV-SM404MUT-E Service Manual](#)

Split type (120 pages)

[Air Conditioner Toshiba RAV-SM454MUT-E Installation Manual](#)

(24 pages)

[Air conditioners Toshiba RAV-SM404MUT-E Owner's Manual](#)

Toshiba compact 4-way type split type air conditioners (16 pages)

[Air Conditioner Toshiba RAV-SM564UT-E Owner's Manual](#)

Air conditioner (split type) (20 pages)

[Air Conditioner Toshiba RAV-SM404SDT-E Service Manual](#)

Split type (226 pages)

[Air Conditioner Toshiba RAV-SM564UT-E Service Manual](#)

(226 pages)

[Air Conditioner Toshiba RAV-SM1104UT-E Data Book](#)

4 series, digital inverter 8-10hp (44 pages)

[Air Conditioner Toshiba RAV-SM304SDT-E Owner's Manual](#)

(17 pages)

[Air Conditioner Toshiba RAV-SM564CT-E Owner's Manual](#)

Air conditioner (split type) (16 pages)

[Air Conditioner Toshiba RAV-SM564CT-E Installation Manual](#)

Air conditioner split type indoor unit (22 pages)

[Air Conditioner Toshiba RAV-SM564UTP-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAV-SM564UTP-E \(TR\) Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAV-SM564KRT-E Service Manual](#)

Hi wall type (indoor unit) (91 pages)

[Air Conditioner Toshiba RAV-SM564UTP Series Owner's Manual](#)

Indoor unit (36 pages)

Summary of Contents for Toshiba RAV-SM564MUT-E

[Page 1](#) AIR CONDITIONER (SPLIT TYPE) Owner's Manual Indoor Unit Model name: Compact 4-way Type RAVSM304MUTE RAV-SM404MUT-E RAV-SM454MUT-E RAV-SM564MUT-E English Owner's Manual...

[Page 2: Table Of Contents](#)

- The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air 1 Precautions for Safety2...

[Page 3: Precautions For Safety](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Warning indications on the air conditioner unit Precautions for Safety The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual. Warning indication Description WARNING WARNING...

[Page 4](#) Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 3 - • Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise CAUTION it may cause imperfect combustion. •...

[Page 5: Part Names](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Information on the transportation, handling and storage of the Part Names carton Indoor unit Examples of indication on the carton Horizontal louver / Symbol Description Symbol Description Vertical grille / Air discharge The air discharge direction can be changed.

[Page 6: Wired Remote Controller](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 5 - Wired Remote Controller This remote controller can control the operation of up to 8 indoor units. Display section In the display illustration below all the icons are shown. When the unit is in operation, only relevant icons will be displayed.

[Page 7: Correct Usage](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Operation section Correct Usage Push each button to select a desired operation. When the air conditioner is used for the first time or when the setting is changed, follow the steps below. Settings are saved in The control saves commands in memory and after the initial setting, there is no need for any additional •...

[Page 8: Timer Operation](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 7 - Timer Operation NOTE Auto Changeover • Three timer modes are available: (Setting of up to 168 hours is enabled.) • When in Auto Mode, the unit selects the operating mode (cooling, heating or fan only) based on the user set point Off timer : The unit stops when the set time is reached.

[Page 9: Adjustment Of Wind Direction](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Adjustment of Wind Direction For best cooling and heating performance, adjust the louvers (adjustment plates of up / down wind direction) appropriately. Cold air descends and warm air rises, so to heat a room tilt the louvers downward, and to cool a Unit select button room tilt them horizontally.

[Page 10: Power Saving Mode](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 9 - Display when stopping the swing Power Saving Mode The power saving mode saves energy by limiting the maximum current which will effect heating or cooling capacity that the unit can generate.

[Page 11: Self Clean Mode](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Push TIME buttons, to adjust the power saving mode setting. Self Clean Mode • Each push of the button changes the power level by 1 % within the range from 100 % to 50 %. •...

[Page 12: Maintenance](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 11 - Maintenance Check periodically • If the unit is used for a long time, parts may deteriorate and cause malfunction or bad drainage of dehumidified water depending on the heat, humidity, or dust. WARNING •...

[Page 13: Troubleshooting](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type Troubleshooting Confirmation and check Confirmation of error log When an error occurred in the air conditioner,

an error code When an error occurred on the air conditioner, the error log Check the points described below before requesting repair.

[Page 14: Operations And Performance](#)

Owner's Manual Owner's Manual Compact 4-way Type Compact 4-way Type - 13 - Operations and Performance Installation ▼ Check before running ▼ Protective device Do not install the air conditioner in the following places • Check whether the earth wire is cut or disconnected. •...

[Page 15: Specifications](#)

Cooling Heating RAV-SM404MUT-E 16(3) Authorized Nick Ball RAV-SM454MUT-E 16(3) Representative / Toshiba EMEA Engineering Director RAV-SM564MUT-E 16(3) TCF holder: Toshiba Carrier UK Ltd. * Under 70 dBA Porsham Close, Belliver Industrial Estate, PLYMOUTH, Devon, PL6 7DB. United Kingdom Hereby declares that the machinery described below:...

[Page 16](#) (Name of the manufacturer) TOSHIBA CARRIER CORPORATION 336 Tadehara, Fuji-shi, Shizuoka-ken (Address, city, country) 416-8521 Japan (Name of the Importer/Distributor in EU) Toshiba Carrier UK Ltd. Porsham Close, Belliver Industrial Estate, PLYMOUTH, (Address, city, country) Devon, PL6 7DB. United Kingdom...

This manual is also suitable for:

[Rav-sm404mut-eRav-sm454mut-eRav-sm304mut-e](#)