

TOSHIBA

Toshiba IC-R19RH User Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

| |
|-------------------|
| 19 |
| 20 |
| 21 |
| 22 |
| 23 |
| 24 |
| 25 |
| Table Of Contents |
| 26 |

| |
|--|
| |
|--|

•

-

Troubleshooting


•

Bookmarks

| |
|--|
| |
|--|

[Download this manual](#)

Quick Links

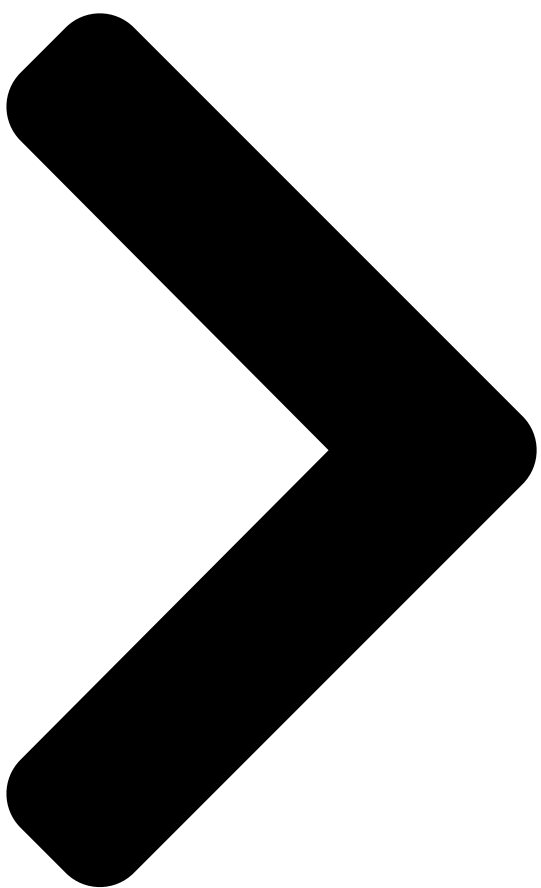

USER MANUAL

INDUCTION COOKER
IC-R19RH

KEEP WARM
BOIL
CHILD LOCK
TIMER

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba IC-R19RH

[Cookers Toshiba IC-S19RH User Manual](#)

(26 pages)

[Cookers Toshiba IC-20R1THK User Manual](#)

(28 pages)

Summary of Contents for Toshiba IC-R19RH

[Page 1](#) USER MANUAL INDUCTION COOKER IC-R19RH KEEP WARM BOIL CHILD LOCK TIMER...

[Page 2: Safety Instructions](#)

I.SAFETY INSTRUCTIONS Warning • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

[Page 3](#) Power Cord/Outlet Related • If the supply cord is damaged, it must be replaced by the manufacturer- hazard. • nance or relocation and whenever it is not in use. • Make sure to insert the power plug steady to the base. •...

[Page 4](#) Caution, hot surface, The surfaces are liable to get hot during use. • • When frying food with induction cooker, the following precautions caused by overheating of oil temperature. Please do not leave away when frying food in an induction cooker. Frying food with the "frying" menu.

[Page 5: Other Matters](#)

- Do not put the IH cooker near water leakage, stove, gas stove and other heat sources. Otherwise, electric shock, electric leakage, furnace deformation and fire may be caused. Other matters • This appliance is intended to be used in household and similar applications such as: •...

[Page 6: Product Introduction](#)

Performance Parameters Applied Rated Dimension Model Weight(kg) voltage/frequency power (mm) IC-R19RH 220-240V 50/60Hz 1900W 360x290x45 2.65 Air vent Power cord Ceramic plate Cooking zone BOOST KEEP WARM BOIL CHILD LOCK...

[Page 7: Using The Touch Controls](#)

III. OPERATION INSTRUCTIONS Before using New Induction cooker Read this guide, taking special note of the "Safety Warnings" section. Remove any protective film that may still be on your ceramic plate. Using the Touch Controls The controls respond to touch, so you don't need to apply any pressure. Use the ball of your finger, not its tip You will hear a beep each time a touch is registered.

[Page 8](#) III. OPERATION INSTRUCTIONS Function After switching on the induction cooker, press the corresponding function button to select the desired cooking mode. Function cooking mode instructions Note: Power in each cooking mode is restricted complying with the cooking requirement and you can use power mode if higher wattage is required. Default Adjustable Default...

[Page 9: How To Lock](#)

III. OPERATION INSTRUCTIONS Timer To use the timer, press the "Timer" button. The digital screen will indicate "0:00". During the several seconds, press the "+/-" buttons to adjust the cooking time. Each pressure increase or decrease the time of 1 minute. If you maintain the

Page 24 VII. • • VIII.