



Sanyo RMT-U230 - 6-Function Backlit Multimedia Remote Control Manual

Contents

1 TO THE OWNER

2 BEFORE YOU BEGIN

3 PROGRAMMING THE REMOTE CONTROL

4 OPERATING KEYS LOCATIONS, QUICKTIPS AND PROGRAMMING CODES

5 Code List

6 OPERATING TIPS AND TROUBLESHOOTING HINTS

7 Documents / Resources

7.1 References

7.2 Download manual

TO THE OWNER

Welcome to the World of Sanyo

You made an excellent choice for *Performance, Reliability, Value,* and *Styling.*

BEFORE YOU BEGIN

Installing The Batteries

1. Remove the battery cover by pressing the tab and tilting the

cover upward.

2. Step 2. Install two "AA" batteries as shown. Be sure to Press tab to release cover. match the / signs on the batteries with the / marks inside the case.

Note: Do Not mix new and used batteries or mix different types of batteries together.

NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

1. Find your VCR, TV, DVD, Cable Box, and Satellite Receiver brand codes in the charts on pages 4 ~ 7.
2. Press and hold the VCR, TV, CABLE, DVD, SAT (Satellite), or AUX (Auxiliary) mode key while entering a three-digit code number. Then release the mode key.

If the code was accepted, the mode key will flash *5 times* after it is released. If you entered an invalid code, the mode key *will not* flash. Check the code number and repeat Step 2.

The *VCR, TV, Cable Box, DVD, and Satellite* modes will accept only each mode's specific code type.

The *AUX* mode will accept all code types, but only one code at a

time.

Perform Steps 1 and 2 for each piece of equipment you have. After entering each code number check the unit's operation by pressing the Power and/or Channel keys. If these keys operate your equipment, you have probably entered the correct code number for that device. If not, follow Steps 1 and 2 and enter another code, if available.

After you have programmed the remote control and confirmed its operation, enter your codes in the spaces provided below for easy reference.

OPERATING KEYS LOCATIONS, QUICKTIPS AND PROGRAMMING CODES

QuickTips

1. The CHANNEL () and VOLUME (-/+) keys become CURSOR keys when the M ENU key is pressed. This operating state remains active for 10 seconds after pressing the M ENU key or either of the CHANNEL or VOLUME keys. After 10 seconds, these keys will revert to normal channel and volume operation.
2. Some equipment manufacturers use the CHANNEL and VOLUME keys instead of CURSOR keys to navigate through their menu systems. If after pressing the M ENU key the CHANNEL and VOLUME keys do not move the cursor, wait 10 seconds then try them again. If the menu leaves the screen, press the M ENU key again, then wait 10 seconds before

pressing the CHANNEL and VOLUME keys.

3. Operations in the chart that are marked with an asterisk (*) work when the menu is displayed (after pressing the MENU key).
4. The AUX mode can be programmed to operate a VCR, TV, DVD, Cable Box, or Satellite Receiver, but only one device at a time.
5. Many of the keys on this remote control are multifunctional. Please refer to the chart for a generic description of the keys and their functions. Refer to your original operating manuals for specific feature operation.

Code List

OPERATING TIPS AND TROUBLESHOOTING HINTS

- To operate each device (*VCR, TV, Cable Box, DVD Player, or Satellite Receiver*), you must first program the remote control;

then press the proper mode key (VCR, TV, CABLE, DVD, SAT, or AUX) to select an operating mode. The VCR, TV, and DVD modes are preprogrammed with Sanyo codes.

- Some manufacturers use many different codes. If your brand of equipment has several codes listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be VCRs, TVs, DVDs, Cable Converter Boxes, and Satellite Receivers that this remote control cannot operate. Some models may operate only partially.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control *cannot* add keys or features to your equipment. Your equipment's manufacturer must have originally provided them.
- When switching from the VCR or DVD mode, the VCR/DVD specific control keys will continue to operate the last device (mode) selected. For example, when switching from DVD to TV mode, the VCR/DVD control keys will continue to function as

DVD keys.

- If the remote control fails to operate any of your equipment replace the batteries. Be sure batteries are installed correctly.

Visit our website at www.sanyoctv.com if you need assistance.

Documents / Resources

References

[sanyoctv.com - This website is for sale! - sanyoctv Resources and Information.](#)

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Sanyo RMT-U230 - 6-Function Backlit Multimedia Remote Control Manual](#)

Need Assistance?

Do you have a question about the RMT-U230 that isn't answered in the manual? Leave

your question here.



Stay updated with the latest solutions

Submit your question

Related Manuals for Sanyo RMT-U230

[Sanyo Moonlight RMT-U100 Manual and Code List](#)

(article)

[Sanyo Moonlight RMT-U110 - Multimedia Remote Control Manual](#)

(article)

[Remote Control SANYO RMT-U230 Owner's Manual](#)

6-function backlit multimedia remote control (2 pages)

[Remote Control Sanyo RMT-U100 Moonlight Owner's Manual](#)

Sanyo universal remote owner's manual (2 pages)

[Remote Control Sanyo RMT-U340 Owner's Manual](#)

6-function multimedia remote control (2 pages)

[Remote Control SANYO RMT-U340 Owner's Manual](#)

6-function multimedia remote control (2 pages)

[Remote Control Sanyo RMT-U340A Owner's Manual](#)

6-function multimedia remote control (2 pages)

[Remote Control SANYO Moonlight RMT-U110 Owner's Manual](#)

Multimedia remote control (2 pages)

[Remote Control SANYO Glow Keys RMT-U130 Owner's Manual](#)

3-function multimedia remote control (2 pages)

[Remote Control SANYO Starlight RMT-U220 Owner's Manual](#)

Multimedia remote control (2 pages)

[Remote Control Sanyo RMT-U200 Owner's Manual](#)

(5 pages)

[Remote Control Sanyo RCS-TM80BG Instruction Manual](#)

(17 pages)

[Remote Control Sanyo RCS KR1 EG Instruction Manual](#)

Control system for spw air conditioner system's (8 pages)

[Remote Control Sanyo ECO-i RCS-TM80BG Datasheet](#)

Standard wired remote: for use on all eco-i indoor units (1 page)

[Remote Control Sanyo RCS-KR1EG Instruction Manual](#)

Simplified remote controller for split system air conditioner (2 pages)

[Remote Control Sanyo RCS-KR1EG Instruction Manual](#)

Simplified remote controller for split system air conditioner (2 pages)

[Remote Control Sanyo RCS-KR1EG Installation Manual](#)

Sanyo remote controller installation manual (2 pages)

[Remote Control Sanyo VSP-8500 Instruction Manual](#)

System controller (56 pages)

[Remote Control Sanyo STK-RCS-7TWSUA Technical & Service Manual](#)

Sanyo wired remote controller technical & service manual (29 pages)

[Save Article as PDF](#)