

Central Processing Unit (Cpu) - Asus PRIME H610M-A WIFI D4 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks



1.3

Central Processing Unit (CPU)

The motherboard comes with an Intel

Core™, Pentium

Unplug all power cables before installing the CPU.

•

Installing the CPU

1-8

®

Gold and Celeron



Processors.

®

®

Ensure that you install the correct CPU designed for LGA1700 socket only. DO NOT install a CPU designed for LGA1155, LGA1156, LGA1151, and LGA1200 sockets on the LGA1700 socket.

ASUS will not cover damages resulting from incorrect CPU installation/removal, incorrect CPU orientation/placement, or other damages resulting from negligence by the user.

Socket LGA1700 for 12

LGA1700

Gen Intel

th

®

Take caution when lifting the load lever, ensure to hold onto the load lever when releasing the load lever. Letting go of the load lever immediately after releasing it may cause the load lever to spring back and cause damage to your motherboard.

Chapter 1: Product Introduction

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
15
16
17
18
19
20
21
22

Quick Links:

[Motherboard Overview](#)

Related Manuals for Asus PRIME H610M-A WIFI D4

[Motherboard Asus PRIME H610M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-A D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

Related Content for Asus PRIME H610M-A WIFI D4

[WS X299 SAGE Central Processing Unit \(Cpu\)](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Central Processing Unit \(Cpu\)](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Central Processing Unit \(Cpu\)](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Central Processing Unit \(Cpu\)](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Central Processing Unit \(Cpu\)](#)

Asus H110M-P/DVI

[PRIME X570-PRO Central Processing Unit \(Cpu\)](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Central Processing Unit \(Cpu\)](#)

Asus M3N-H/HDMI

[EX-B660M-V5 D4 Central Processing Unit \(Cpu\)](#)

Asus EX-B660M-V5 D4