

Asus Ez Flash 3 - Asus PRIME H610M-A WIFI D4 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks



2.3

ASUS EZ Flash 3

The ASUS EZ Flash 3 feature allows you to update the BIOS without using an OS-based utility.

Ensure to load the BIOS default settings to ensure system compatibility and stability. Select the Load Optimized Defaults item under the Exit menu or press hotkey <F5>.

To update the BIOS:

- This function can support devices such as a USB flash disk with FAT 32/16 format and single partition only.

DO NOT shut down or reset the system while updating the BIOS to prevent system



boot failure!

1.

Insert the USB flash disk that contains the latest BIOS file to the USB port.

Enter the Advanced Mode of the BIOS setup program. Go to the Tool menu to select

2.

ASUS EZ Flash 3 Utility and press <Enter>.

3.

Press the Left/Right arrow keys to switch to the Drive field.

4.



Press the Up/Down arrow keys to find the USB flash disk that contains the latest BIOS, and then press <Enter>.

Press the Left/Right arrow keys to switch to the Folder field.

5.



6.

Press the Up/Down arrow keys to find the BIOS file, and then press <Enter> to perform the BIOS update process. Reboot the system when the update process is done.

ASUS PRIME H610M-A WIFI D4

2-3

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
22
23
24
25
26
27
28
29

Quick Links:

[Motherboard Overview](#)

Related Manuals for Asus PRIME H610M-A WIFI D4

[Motherboard Asus PRIME H610M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-A D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

Related Content for Asus PRIME H610M-A WIFI D4

[Z790 GAMING WIFI7 Asus Ez Flash 3](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Asus Ez Flash 3 Utility](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Asus Ez Flash 3](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Asus Ez Flash 3](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Asus Ez Flash 3 Utility](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Asus Ez Flash Utility](#)

Asus Z13PE-D16

[WS X299 SAGE Asus Ez Flash 3 Utility](#)

Asus WS X299 SAGE

[PRIME A520M-R Asus Ez Flash 3](#)

Asus PRIME A520M-R