



# Asus Crashfree Bios 3 - Asus PRIME H610M-A WIFI D4 Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36

--

---

•

[Table of Contents](#)

•

## Bookmarks







## 2.4

### ASUS CrashFree BIOS 3

The ASUS CrashFree BIOS 3 utility is an auto recovery tool that allows you to restore the BIOS file when it fails or gets corrupted during the updating process. You can restore a corrupted BIOS file using a USB flash drive that contains the BIOS file.

#### Recovering the BIOS

1.

Download the latest BIOS version for this motherboard from <https://www.asus.com/support/>.

---

Rename the BIOS file as ASUS.CAP or

2.

BIOS file to a USB flash drive.

3.

Turn on the system.

4.

Insert the USB flash drive containing the BIOS file to a USB port.

5.

The utility automatically checks the devices for the BIOS file. When found, the utility reads the BIOS file and enters ASUS EZ Flash 3 automatically.

6.

The system requires you to enter BIOS Setup to recover the BIOS setting. To ensure system compatibility and stability, we recommend that you press <F5> to load default BIOS values.

DO NOT shut down or reset the system while updating the BIOS! Doing so can cause system boot failure!

2-4

**PH610MAW.CAP**

and copy the renamed

Chapter 2: BIOS Information

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
23  
24  
25  
26  
27  
28  
29  
30

Quick Links:

[Motherboard Overview](#)

## Related Manuals for Asus PRIME H610M-A WIFI D4

[Motherboard Asus PRIME H610M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-A D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

## Related Content for Asus PRIME H610M-A WIFI D4

[Z790 GAMING WIFI7 Asus Crashfree Bios 3](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Asus Crashfree Bios 3](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Asus Crashfree Bios 3](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 Asus Crashfree Bios 3](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 Asus Crashfree Bios 3](#)

Asus ROG RAMPAGE V EDITION 10

[Z13PE-D16 Asus Crashfree Bios 3 Utility](#)

Asus Z13PE-D16

[WS X299 SAGE Asus Crashfree Bios 3](#)

Asus WS X299 SAGE

[PRIME A520M-R Asus Crashfree Bios 3](#)

Asus PRIME A520M-R