

Dimensions Of Wind Ducting - Sanyo XM18AAB Installation Instructions Manual

W-2way system air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

--

•

[Table of Contents](#)

•

Bookmarks



2-5. Dimensions of Wind Ducting

Reference diagram for air-discharge chamber (field supply)

Ceiling panel

33-3/16

35

(Ceiling panel dimensions)

35-1/4

(Maximum bracket dimensions)

Front view

Note: Can be installed so that the air direction is to the front, right, left or rear direction.

3-unit installation

74-1/4

(2-unit installation: maximum dimensions)

33-3/16

31-1/8





(Installation hole pitch)

Air direction: Front direction

35

(Ceiling panel dimensions)

2

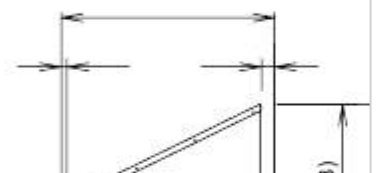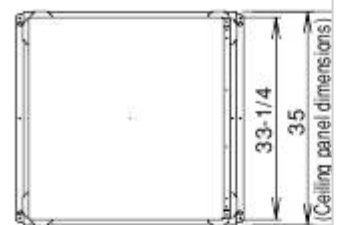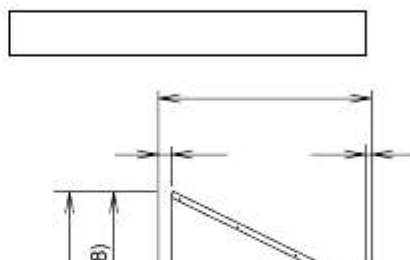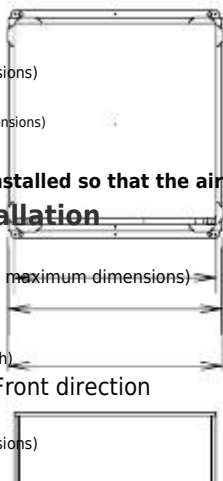

1

Right side view

113 (3-unit installation: maximum dimensions)

5-3/4

5-3/4

33-3/16

33-3/16

31-1/8

31-1/8

(Installation hole pitch)

(Installation hole pitch)

7-7/8

7-7/8

Front view

35

(Ceiling panel dimensions)

1

2

Front view

Top view

(Ceiling panel dimensions)

18

unit: in.

Ceiling panel

Air direction: Right direction

Right side view




 


unit: in.

35

2

1

Right side view

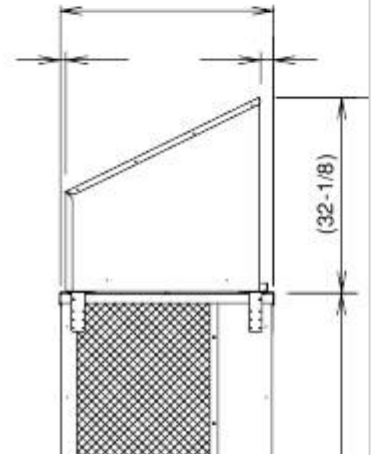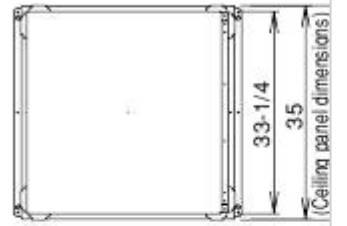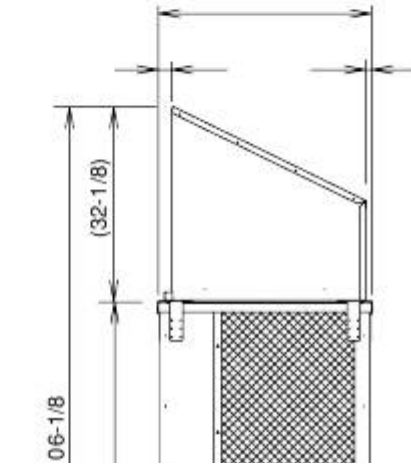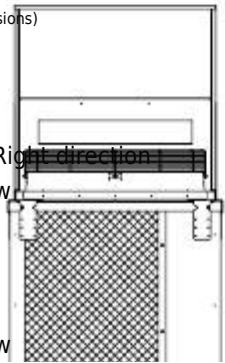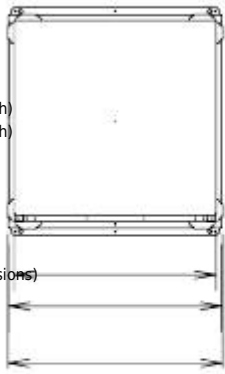

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
15
16
17
18
19
20
21
22

Related Manuals for Sanyo XM18AAB

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo XM18AAB

[Mini ECO-i 85464359981002 Dimensions Of Snow Ducting](#)

Sanyo Mini ECO-i 85464359981002

[C2432A Wind Shield For "CI" Model](#)

Sanyo C2432A

[SAP-CMRV1426EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-CMRV1426EH

[SAP-KMRV74EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-KMRV74EH

[SPW-C0705DZH8 Dimensions Of Wind Ducting](#)

Sanyo SPW-C0705DZH8

[C4272R Dimensions Of Wind Ducting](#)

Sanyo C4272R

[SPW-C256VH Dimensions Of Wind-Proof Duct](#)

Sanyo SPW-C256VH

[SPW-CR365GXH56 Dimensions Of Snow Ducting Reference Diagram](#)

[For Snow-Proof Vents \(Field Supply\) Stk-Bdr140U For Spw-](#)

[Cr365/485/605Gx\(H\)56\(A/B\)](#)

Sanyo SPW-CR365GXH56

This manual is also suitable for:

[Xhx1252Xhx1852Xhx3652Xmhx1252Xmhx1852Ahx0752](#) ... [Show all](#)