



Toshiba RC-10IRPH Instruction Manual

Microcomputer induction rice cooker

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



1.0L

RC-10IRPH
TOSHIBA

微電腦電磁飯煲
使用說明書

家用

型號 型

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RC-10IRPH

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Toshiba RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF - Toshiba Electric Rice Cooker/Warmer Manual](#)

(article)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (17 pages)

[Rice Cooker Toshiba RC-10RHI Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10JR1NP Instruction Manual](#)

Mechanical rice cooker / warmer, 1.0l/1.8l type (8 pages)

[Rice Cooker Toshiba RC-18DR1NMY Instruction Manual](#)

Electric rice cooker (23 pages)

[Toshiba RC-18DR1NMY, RC-10DH1NMY, RC-18DH1NMY - ELECTRIC RICE COOKER Manual](#)

(article)

[Rice Cooker Toshiba RC-10JRNH Instruction Manual](#)

Toshiba mechanical rice cooker / warmer (16 pages)

[Rice Cooker Toshiba RC-10NAF Series Instruction Manual](#)

Electric rice cooker/warmer (24 pages)

[Rice Cooker Toshiba RC-10IRPMY Instruction Manual](#)

(14 pages)

[Toshiba RC-10IRPMY - 1.0L Microcomputer Induction Rice Cooker Manual](#)

(article)

[Rice Cooker Toshiba RC-10ISSHK User Manual](#)

Electric rice cooker (58 pages)

[Rice Cooker Toshiba RC-10IH1TAU\(N\) User Manual](#)

Electric rice cooker (23 pages)

[Rice Cooker Toshiba RC-18DH1NP Instruction Manual](#)

Electric rice cooker/warmer (20 pages)

[Rice Cooker Toshiba RC-18SPH Manual](#)

(28 pages)

Summary of Contents for Toshiba RC-10IRPH

Page 1	1.0L RC-10IRPH	6
.....8	9	9
.....9	10	10
.....11	12	12

.....12	14	15
.....16		18
.....20		
.....21		
.....22		23
.....25		
.....25		
.....25		
.....26...		

[Page 7](#) RC-10IRPH...

[Page 12](#) 1- 3 0- 0(0 1- 3 1- 3 1- 3 (1 1- 60 - 1 0 0 - 1 0 - 1...

[Page 14](#) RC-10IRPH...

[Page 15](#) HEAL...

[Page 20](#) KEEP WARM REHEAT...

[Page 26](#) 220-240V~ RC-10IRPH 1000 50/60Hz...

[Page 29: Table Of Contents](#)

Special purpose for AC 220V Please do not apply to power sockets other than AC 220V. Method of presetting cooking time15 Thank you for buying the Toshiba Microcomputer Induction Rice Method of adjusting the current time (clock)16 Cooker. Dishesy18 Keep Warm20...

[Page 30: Important Safety Instructions](#)

It may cause fire, burns, injury, or electric shock Toshiba doesn't assume any responsibility for the consequences of improper use of this product or use for purposes other than those described in the instruction manual.

[Page 31](#) In case of cord damage, the cord should be replaced with a special cord or specialized component purchased from the Manufacturer or the Maintenance Department. For the purpose of preventing fire, scald, electric shock, electric Warning leakage, short circuit, etc. Please correctly use the power plug, power cord and power socket.

[Page 32](#) Important Safety Instructions Please observe for security. For the purpose of preventing injury, scald, electric shock, Note electric leakage, fire and home loss. Please do not use device in these places. Easy to splash water Near walls or furniture. or near fire. When using on the kitchen shelves, please pay attention to ventilation.

[Page 33: Attention](#)

For the purpose of preventing injury, scald, electric shock, Note electric leakage, fire and home loss. To prevent overheating For products equipped with a metal Only use the original inner pot for the steamer, the steamer should not be used rice cooker.

[Page 34: Parts Name](#)

Parts name Please clean the inner cooking pot, inner cover, steam vent and accessories before using for the first time. When starting to use, there may be an odor of plastic, which will gradually disappear with the use. The configuration of accessories varies depending on the product model. Due to the difference in appearance and function of different models, please refer to the actual product and read the corresponding function description.

[Page 35](#) Power plug (power supply side) Please exactly plug the power plug into the bottom. Display part (The clock is of 24-hour display mode) Operation part Status of whole display RC-10IRPH TIMER CANCEL COOK MIXED RICE/BROWN RICE/GABA BROWN/QUICK COOK/WHITE RICE/ STEAM/CONGEE/SOUP...

[Page 36: Disassembly & Assembly Of Removable Cover Plate And Steam Valve](#)

Disassembly & assembly of removable cover plate and steam valve Remove the removable cover plate. Inner cover slider Push the inner cover slider to the right according to the arrow (the removable cover plate leans forward). Grab the handle and pull up the removable cover plate.

[Page 37: Method Of Opening And Closing Upper Housing](#)

Method of opening and closing upper housing Open the upper housing Please do not press the upper housing from above. You should just press the button before hearing the "clatter" sound of unlocking, and the upper housing will be opened. Please do not press the upper housing from above.

[Page 38: Rice Cooking Method](#)

Basic procedures Rice cooking method Connect to power cord Preparation Rice Use the attached measuring cup 1 plain cup = about 180ml measurement Small 1 plain cup = about 90ml [Correct case] [Wrong case] Using measuring cup for cooking (200ml) may cause errors. Wash rice quickly Until water gets clean Add adequate water and fully mix and then promptly...

[Page 39: Key Points To Cook Delicious Rice](#)

Key points to cook delicious rice Add rice horizontal to measuring Rice cup opening Use fresh white rice with the volume that can be eaten up within two weeks to one month every time. Please do not shake the measuring cup Please place rice into a closed container, and place in a More rice will be filled after dark place.

[Page 40: Cooking Mode](#)

Cooking mode Cooking capacity and corresponding cooking Select "cooking mode" and "water level scale" based on type time estimation of cooking rice. Estimation of cooking time Cooking TIMER Unit: min Cooking mode Taste Water level scale capacity (□: Valid, X: Invalid) () First cooking time MIXED RICE MIXED RICE...

[Page 41](#) The minimum capacity, maximum capacity and available cooking capacity of the water level scale of inner cooking pot differ from each other. The actual cooking time will change based on rice volume, water temperature, water volume and others for about 10 minutes. Please take the cooking time as the estimated time. (When cooking conditions include 220V voltage and 23°C room temperature and water temperature and water volume is adjusted to the standard value) Please reduce rice volume to cook porridge.

[Page 42: Setting Method Of Rice Cooking](#)

Usage and setting of MENU Function selection method Press Each time when you press the RC-10IRPH MENU button, the option light will flash and change in the order of <MIXED RICE> <GABA BROWN> <QUICK COOK> <WHITE RICE> <STEAM> <CONGEE> <SOUP> .

[Page 43](#) Usage and setting of HEALTHY RICE Press Press this shortcut button to enter the cooking process. There is no need to press the COOK button. The cooking time is automatically adjusted according to the rice amount (default is 40 minutes). Preparation steps: 1.

[Page 44: Method Of Presetting Cooking Time](#)

Method of presetting cooking time Complete cooking within the preset time. If it does not fit with the current time, Confirm whether it fits with the current time it is impossible to finish cooking within the preset time. Wash rice, add or reduce water, place inner cooking It is impossible to pre-set without pot in the body and place on the upper housing inner cooking pot in.

[Page 45](#) Pay attention that "X" indicates on cooking appointment does not work during cooking appointment (It may cause rice deterioration or corrosion to inner cooking pot) M IXED RIC E BRO W N RIC E GA BA BRO W N Q U IC K C O O K W HITE RIC E STEA M C O NGEE...

[Page 46: Dishesy](#)

Recipes GABA brown rice Wash the sproutable rice (organic sugar rice, etc.) and put it into the inner pot, add water to the corresponding level (recommended maximum amount of rice is 5

cups of organic brown rice). Select GABA BROWN and press COOK to enter the cooking state.

[Page 47](#) Mixed rice Ingredients (2~3 servings) White rice 150g Black rice, oat, millet 150g Water, appropriate amount Wash the prepared white rice and the coarse grain and add them to the inner pot. Add water to mark 2 of the MIXED RICE according to the amount of rice Select MIXED RICE and press COOK to enter the cooking state.

[Page 48: Keep Warm](#)

Keep Warm It will automatically change to the heat To keep the rice tasty during heat preservation, it will preservation mode after cooking. automatically control the heat preservation temperature based on using conditions. Press down CANCEL button to stop the heat preservation.

[Page 49: Maintenance](#)

Maintenance Please Failing to wash clean will send out unpleasant odor. Therefore, please note keep it clean. Note Please do not use the following items (Otherwise, it will cause deformation, corrosion, discoloration, crack or scratch) During maintenance, the power plug Tableware washing dryer and tableware dryer should be unplugged.

[Page 50: Cleaned By Boiling](#)

If any unpleasant odor detected, please use this method Cleaned by boiling (about once a week) for cleaning Place water in inner cooking pot and close the outer cover. (To 1 in the water level scale of "White Rice") Please do not place in any items Select <...

[Page 51: How To Deal With Cooking Failure](#)

How to deal with cooking failure Please check before applying for repair. If the reason cannot be found out after investigation, please consult with the store where you buy the electric cooker. This time Investigate the reasons (reference page) Soft Please reduce water volume for cooking.

[Page 52](#) This time Investigate the reasons (reference page) Whether the removable cover plate has been installed well? If the removable cover Difficult to close plate is not installed, the upper housing cannot be closed to prevent forgetting the Impossible to close installation of the removable cover plate.

[Page 53: Error Display](#)

How to deal with cooking failure Please check before applying for repair. This time Investigate the reasons (reference page) It sends out sound during Please refer to the "Sound in use" on Page 9. When starting to use, there may be an odor, which will gradually disappear with the With scent of plastic use. Eliminate the unpleasant odor by ventilating and cleaning by boiling.

[Page 54: Specifications](#)

(Keep (rice volume) frequency length Warm) Length Width Height 220-240V~ Average RC-10IRPH 1000W 3.0L 31.5 24.2 22.0 5.1kg 50/60Hz Please use under regularly confirming of "Important Safety Instructions" and "Notes". Check electric cookers Wrong using method and long-time use will deteriorate spare parts due to...