



# Sanyo DRW-1000 Quick Start Manual

Sanyo drw-1000: user guide



1  
2

--

•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [Instruction Manual](#)







## STEP 4

### Initialize & Finalize

#### Disc Initialize

If you load a completely blank DVD-RW disc, Disc initialize menu will appear, to select a desired Recording Mode to initialize the disc.

a Press SETUP.

The Setup menu appears.

b Use v / V to select the DISC option.

c While the DISC option is selected, press B to move to the second level.

d Use v / V to select the DISC Initialize option.

e Press B to move to the third level.

Start icon is highlighted.

f Press ENTER.

Disc Initialize menu appears.

g Use b / B to select a desired DISC Initialize Mode (VR Mode or Video Mode), then press ENTER.

h Use b / B to select OK, and press ENTER.

It takes a few moments to initialize the disc.

i Press ENTER.

#### Disc Finalize

If you want your recorded discs to be compatible with other DVD players, you MUST finalize them:

a

a Press SETUP on the remote control.

b Use the v / V V buttons to select DISC option,

b

then press B B .

c Use the v v / V V buttons to select DISC Finalize

c

option, then press B B .

d

d Use the v v / V V buttons to select "Finalize", then press ENTER.

e

e Use the b b / B B buttons to select "OK", then press ENTER.

Disc Finalization may take a few minutes to complete.

f Press ENTER.

P/N: (8)3840R-Q003X-(1E1/04)

Disc Initialize

Start

Disc Initialize

Disc Mode

Disc Protect

Prev.

Select

Disc Initialize

Select Mode

Video Mode

Disc Initialize

Remain: 02 M 30 S

Disc Initialize

Initialization is completed.

Disc Initialize

Disc Finalize

Finalize

Disc Name

Disc Mode

Disc Protect

Prev.

Select

Finalize

Do you want to finalize the disc?

Cancel

Finalize

Remain: 02 M 30 S

Finalize

Finalization complete.



# SANYO

ManualsLib.com



Need help? Call  
1-800-813-3435  
Weekdays 7:30AM - 4:00 PM Central Time

## STEP 1

### Connection

#### Connecting VCR/DVD Recorder

a Connect the "Antenna" or "Cable TV" to the "ANT. IN" jack on the VCR/DVD Recorder using a coaxial RF cable.

b Connect the RF.OUT jack on the VCR/DVD Recorder to the Antenna Input jack on the TV using the RF Cable supplied.

And/Or

Connect the "A/V OUT" jacks on the VCR/DVD Recorder to the "VIDEO IN" and "AUDIO IN" jacks on the TV using the supplied video and audio cables.

c Turn the TV on and select the video input source connected to the VCR/DVD Recorder.

*RF Connection: Tune the TV to channel 3 or 4.*

*Audio/Video Connection: Tune the TV to the video input.*



# SANYO

ManualsLib.com

### Connecting Optional Equipment

a Connect the AV 1 IN jacks on the rear panel or AV INPUT jacks on the front panel to the Audio/Video out jacks on your external component using optional audio/video cables.

b Use a DV cable (not supplied) to connect the DV in/out jack of your DV camcorder/video deck to the front panel DV IN jack of this VCR/DVD Recorder.

Note: See the Instruction Manual for advanced connections.

DRW-1000

Printed in Korea



# SANYO

1

2

## Related Manuals for Sanyo DRW-1000

[DVD Recorder Sanyo DRW-1000 Instruction Manual](#)

Dvd video recorder & 4 head hi-fi stereo vcr (59 pages)

[DVD Player Sanyo DVD-SL33 Service Manual](#)

(20 pages)

[DVD Player Sanyo DWM-450 Quick Manual](#)

Sanyo dwm-450: quick start (8 pages)

[DVD Player Sanyo DWM-450 Instruction Manual](#)

Sanyo dwm-450: instruction manual (38 pages)

[DVD Player Sanyo DVD-DX405 Instruction Manual](#)

Sanyo dvd player user manual (41 pages)

[DVD Player Sanyo DVD-DX405 Service Manual](#)

(11 pages)

[DVD Player Sanyo DVD-SL22 Service Manual](#)

(38 pages)

[DVD Player Sanyo DWM-390 Instruction Manual](#)

Dvd video player (40 pages)

[DVD Player Sanyo DVD-DX500 Service Manual](#)

(26 pages)

[DVD Player Sanyo DVD-DX500 Service Manual](#)

(14 pages)

[DVD Player SANYO DVD-DX518 Instruction Manual](#)

(23 pages)

[DVD Player Sanyo DWM-370 Instruction Manual](#)

Dvd video player (34 pages)

[DVD Player Sanyo DVD-SL20V Service Manual](#)

(46 pages)

[DVD Player Sanyo DVD-DX516 Instruction Manual](#)

(45 pages)

[DVD Player Sanyo DVD-7201 Instruction Manual](#)

(20 pages)

[DVD Player Sanyo DVP2902 User Manual](#)

(26 pages)

## Summary of Contents for Sanyo DRW-1000

[Page 1](#) It takes a few moments to initialize the disc. i Press ENTER. Disc Finalize If you want your recorded discs to be compatible with other DVD players, you MUST finalize them: a Press SETUP on the remote control. b Use the v / V V buttons to select DISC option, then press B B .

[Page 2](#) Video Mode • Limited editing features • Extensive editing features (e.g., add chapters, or combine chapters, etc.) • Widely compatible with older DVD players as well as DVD-RAM recorders • Compatible with newer DVD players only Record Modes Quality Setting •...