



# Disc Name - Sanyo DRW-1000 Instruction Manual

Dvd video recorder & 4 head hi-fi stereo vcr



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Before Operating (Continued)

### Disc Name

Use this to enter a name for the disc. This name appears when you load the disc and when you display disc information on-screen.

- The disc name can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.

DISC Initialize  
DISC Finalize  
DISC Name  
DISC Protect  
1 1

Follow steps 1-3 as shown in **DISC Initialize** on page 24.

- For discs formatted on a different DVD Recorder, you will see only a limited character set.

Use **v / V** to select the **DISC Name** option.

## Before Operating (Continued)

### Disc Name

Use this to enter a name for the disc. This name appears when you load the disc and when you display disc information on-screen.

- The disc name can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.

### Tip on Remote control name

**▶ (PLAY):** Inserts a space

**|| (PAUSE/STILL):** Deletes cursor position.

**■ (STOP), CLEAR:** Deletes cursor position.

**◀◀ / ▶▶:** Moves the cursor

Press B to move to the third level.

The Edit icon is highlighted.

Press ENTER.

The Keyboard menu appears.


DVD-VR  
Language  
English/Latin Capital

## Before Operating (Continued)

### Disc Name

Use this to enter a name for the disc. This name appears when you load the disc and when you display disc information on-screen.

- The disc name can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.

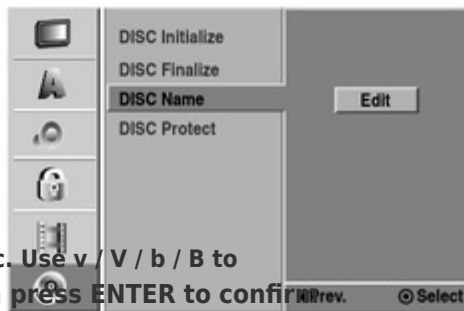

Enter a name for the disc. Use v / V / b / B to select a character then press ENTER to confirm your selection.

- 1 Follow steps 1-3 as shown in DISC Initialize on page 24.
  - 2 English/Latin Capital: Switches the keyboard to upper case characters.
  - 3 English/Latin Lowercase: Switches the keyboard to lower case characters.
  - 4 Symbols: Switches the keyboard to symbols.
- Press the key to move to the third level.
- The Edit icon is highlighted.
- Press ENTER.
- The keyboard menu appears.
- b / B: Moves the cursor left and right.



5 Enter a name for the disc. Use ▲ / ▼ / ◀ / ▶ to select a character then press ENTER to confirm your selection.

- English/Latin Capital: Switches the keyboard to upper case characters.
- English/Latin Lowercase: Switches the keyboard to lower case characters.
- Symbols: Switches the keyboard to symbols.
- OK: Selects to finish.

### Tip on Remote control name

- ▶ (PLAY): Inserts a space
- ⏸ (PAUSE/STILL): Deletes cursor position.
- (STOP), CLEAR: Deletes cursor position.
- ⏪ / ⏩: Moves the cursor
- Numbers (0~9): Enters the of the selected column.
- DISC MENU/LIST, DISPLAY type (English/Latin Capital, Lowercase, Symbols).

6 Choose OK then press and return to the DISC

7 Press SETUP to exit the



Edit  
Prev.  
Select

OK  
Cancel

Tip on Remote control buttons for entering a

## name

N (PLAY): Inserts a space at the cursor position.

X (PAUSE/STILL): Deletes the character after the cursor position.

x (STOP), CLEAR: Deletes the character before the cursor position.

. / >: Moves the cursor left or right.

## Before Operating (Continued)

Numbers (0~9): Enters the corresponding character

of the selected disc.

### Disc Name

**DISC MENU/LIST, DISPLAY:** Switches the keyboard

type (English/Latin Capital, English/Latin Lowercase, Symbols). Use this to enter a name for the disc. This name appears when you load the disc and when you display disc information on-screen.

6 6

Choose OK then press ENTER to set the name and return to the DISC menu.

- The disc name can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.

7 7

Press SETUP to exit the menu.

### Tip on Remote control name

▶ (PLAY): Inserts a space

|| (PAUSE/STILL): Deletes cursor position.

■ (STOP), CLEAR: Deletes cursor position.

◀◀ / ▶▶: Moves the cursor

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
23  
24  
25  
26  
27  
28  
29  
30

Quick Links:

[Recordable Discs](#)

[Disc Record Mode](#)

[Copying from Vcr to DVD](#)

## Troubleshooting

[Timer Recording 41](#)

[What is DV 43](#)

[Troubleshooting 54](#)



## Related Manuals for Sanyo DRW-1000

[DVD Player Sanyo DRW-1000 Quick Start Manual](#)

Sanyo drw-1000: user guide (2 pages)

[DVD Recorder Sanyo DVR-S120 Instruction Manual](#)

Sanyo dvd recorder instruction manual (40 pages)

[DVD Recorder Sanyo DVR-500 Instruction Manual](#)

Dvd video recorder (63 pages)

[DVD Recorder Sanyo DRW-500 Instruction Manual](#)

Dvd video recorder (64 pages)

[DVD Recorder Sanyo DRW-500 Quick Manual](#)

Dvd video recorder (4 pages)

[DVD Recorder Sanyo DVR-SD450 Operating Instructions Manual](#)

(52 pages)

[DVD Recorder Sanyo DVR-DX600 Service Manual](#)

(26 pages)

[DVD Recorder Sanyo DVR-DX600 Instruction Manual](#)

(58 pages)

[DVD Recorder Sanyo HVR-DX625H Instruction Manual](#)

Dvd recorder+vcr (61 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (20 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (62 pages)

[DVD Recorder Sanyo VA-EXD1B Instruction Manual](#)

(36 pages)

[DVD Recorder Sanyo FWZH776F Owner's Manual](#)

Hd dvr & dvd recorder with digital tuner (84 pages)

[DVD Recorder Sanyo HVR-DX700 Instruction Manual](#)

Hdd/dvd recorder (61 pages)

## Related Content for Sanyo DRW-1000

[HVR-DX700 Disc Editing In Dvd+Rw Disc](#)

Sanyo HVR-DX700

[DVR-SD450 Disc Menu Language](#)

Sanyo DVR-SD450

[DVR-500 Setting "Disc Menu](#)

Sanyo DVR-500

[DRW-500 Setting "Disc Menu](#)

Sanyo DRW-500