



# Time Search; Zoom; Marker Search - Sanyo DRW-1000 Instruction Manual

Dvd video recorder & 4 head hi-fi stereo vcr



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Operations with DVD (Continued)

### Playing a DVD (continued)

#### Time Search

DVD-Video

DVD-RW Video

DVD-R

The Time Search function allows you to start playing at any chosen time on the disc.

**1** Press **DISPLAY** to start playing. The on-screen display appears on the TV screen.

The Time Search box shows the elapsed playing time of the current disc.

**2** Within 7 seconds, use **y / Y** to select the Time Search icon in the on-screen display.

**1** Press **DISPLAY** twice during playback. The on-screen display appears on the TV screen.

## Operations with DVD (Continued)

### Playing a DVD (continued)

#### Time Search

The Time Search box shows the elapsed playing time of the current disc.

**2** Within 7 seconds, use **y / Y** to select the Time Search icon in the on-screen display.

**1** Press **DISPLAY** twice during playback. The on-screen display appears on the TV screen.

#### Marker Search

DVD-Video

DVD-RW Video

DVD-R

You can start playback from a six points can be memorized. To enter a mark, follow these

**1** During disc playback, press playback reaches the spot to memorize

**3 Within 7 seconds, use the number buttons to enter the required start time.** Enter hours, minutes, and seconds from left to right in the box.

You cannot enter an invalid time.

If you enter the wrong numbers, press b / B to move the under bar ( ) to the wrong number. Then enter the correct numbers.

**4 Within 7 seconds, press ENTER to confirm the start time.**

Playback starts from the selected time on the disc.

## Operations with DVD (Continued)

### Playing a DVD (continued)

#### Zoom

DVD-Video

DVD-RW VR

DVD-RW Video

DVD-R

The Zoom function allows you to enlarge the video image and to move to different areas within it.

**1 Press ZOOM during playback or still playback to activate the Zoom function.**

**2 Within 7 seconds, use ▲ / ▼ to select the Time Search box in the on-screen display.**

The "appear,--" appears in the Time Search box.

**3 Within 7 seconds, use the number buttons to enter the required start time.** Enter hours, minutes, and seconds from left to right in the box.

**2 Use the b / B / v / V buttons to move to different areas within the picture.**

**3 To resume normal playback, press CLEAR or ZOOM repeatedly until the normal picture appears.**

**4 Within 7 seconds, press ENTER to confirm the start time.**

The Zoom function may not work for some DVDs.

32 Playback starts from the selected time on the disc.

#### Time Search

DVD-Video

DVD-RW VR

DVD-RW Video

DVD-R



The Time Search function allows you to start playing at any chosen time on the disc.

**1 Press DISPLAY twice during playback.** The on-screen display appears on the TV screen.

The Time Search box shows the elapsed playing time of the current disc.

**2 Within 7 seconds, use ▲ / ▼ to select the Time Search box in the on-screen display.**

The "appear,--" appears in the Time Search box.

**3 Within 7 seconds, use the number buttons to enter the required start time.** Enter hours, minutes, and seconds from left to right in the box.

**2 Use the b / B / v / V buttons to move to different areas within the picture.**

**3 To resume normal playback, press CLEAR or ZOOM repeatedly until the normal picture appears.**

**4 Within 7 seconds, press ENTER to confirm the start time.**

The Zoom function may not work for some DVDs.

32 Playback starts from the selected time on the disc.

### Marker Search DVD-Video

DVD-RW Video

DVD-R

You can start playback from a six points can be memorized. To enter a mark, follow these steps:

**1 During disc playback, press MARKER when playback reaches the spot to memorize.**

The Marker icon will appear on the screen.

**2 Repeat step 1 to enter up to six marks on the disc.**

#### To Recall a Marked Scene

**1 During disc playback, press MARKER.**

The Marker Search menu will appear.



**2 Use the ◀ / ▶ / ▲ / ▼ button to select the scene that you want to recall.**

**3 Press ENTER.**

Playback will start from the marked scene.

**4 To remove the Marker Search menu, press CLEAR.**

#### To clear a Marked Scene

**1 During disc playback, press MARKER.**

The Marker Search menu will appear.

**2 Use ◀ / ▶ / ▲ / ▼ to select the scene that you want to erase.**

**3 Press CLEAR.**

"Delete selected marker. Continue?"

**4 Use ◀ / ▶ to select "Yes", then press ENTER.**

**5 Repeat steps 2-4 to erase additional marked scenes.**

**6 To remove the Marker Search menu, press RETURN (↵).**

### Marker Search

DVD-RW VR

DVD-Video

DVD-RW Video

DVD-R

You can start playback from a memorized point. Up to six points can be memorized.

To enter a mark, follow these steps:

**1 During disc playback, press MARKER when playback reaches the spot to memorize.**

**2 Repeat step 1 to enter up to six marks on the disc.**

#### To Recall a Marked Scene

**1 During disc playback, press MARKER.**

The Marker Search menu will appear.

**2 Use the ◀ / ▶ / ▲ / ▼ button to select the scene that you want to recall.**

**3 Press ENTER.**

Playback will start from the marked scene.

**4 To remove the Marker Search menu, press CLEAR.**

#### To clear a Marked Scene

**1 During disc playback, press MARKER.**

The Marker Search menu will appear.

**2 Use the ◀ / ▶ / ▲ / ▼ button to select the scene that you want to erase.**

**3 Press CLEAR.**

"Delete selected marker. Continue?"

**4 Use ◀ / ▶ to select "Yes", then press ENTER.**

**5 Repeat steps 2-4 to erase additional marked scenes.**

**6 To remove the Marker Search menu, press RETURN (↵).**

#### Zoom

DVD-Video

DVD-RW VR

DVD-RW Video

DVD-R

The Zoom function allows you to enlarge the video image and to move to different areas within it.

**1 Press ZOOM during playback or still playback to activate the Zoom function.**

**2 Within 7 seconds, use ▲ / ▼ to select the Time Search box in the on-screen display.**

The "appear,--" appears in the Time Search box.

**3 Within 7 seconds, use the number buttons to enter the required start time.** Enter hours, minutes, and seconds from left to right in the box.

**2 Use the b / B / v / V buttons to move to different areas within the picture.**

**3 To resume normal playback, press CLEAR or ZOOM repeatedly until the normal picture appears.**

**4 Within 7 seconds, press ENTER to confirm the start time.**

The Zoom function may not work for some DVDs.



The Zoom function may not work for some DVDs.

Memorized marker points are deleted when the VCR/DVD Recorder is turned off.

### DVD-Video

### DVD-RW Video

### DVD-R

playback reaches the spot that you want to memorize.

The Marker icon will appear on the TV screen briefly.

disc.

The Marker Search menu will appear on the TV screen.

Marker Search

Marker Search

Move

Select

CLEAR

scene that you want to recall.

Playback will start from the marked scene.

The Marker Search menu will appear on the TV screen.

any chosen time on the disc.

you want to erase.

"Delete selected marker. Continue?" message appears.

press RETURN (O).

ote

### DVD-RW VR

MAKER

1 / 6

Delete

Close

## Operations with DVD (Continued)

### Playing a DVD (continued)

#### Time Search **DVD-Video** **DVD-RW VR**



The Time Search function allows you to start playing at any chosen time on the disc.

1 Press DISPLAY twice during playback. The on-screen display appears on the TV screen.

The Time Search box shows the elapsed playing time of the current disc.

2 Within 7 seconds, use ▲ / ▼ to select the Time Search icon in the on-screen display.

The "-:--:--" appears in the Time Search box.

### Marker Search **DVD-V**

#### **DVD-RW Video** **DVD-R**

You can start playback from a six points can be memorized.

To enter a mark, follow these

1 During disc playback, press playback reaches the spot to memorize.

The Marker icon will appear on

2 Repeat step 1 to enter up to disc.

#### To Recall a Marked Scene

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
29  
30  
31  
32  
33  
34  
35  
36

Quick Links:

[Recordable Discs](#)

[Disc Record Mode](#)

[Copying from Vcr to DVD](#)

## Troubleshooting

[Timer Recording 41](#)

[What is DV 43](#)

[Troubleshooting 54](#)



## Related Manuals for Sanyo DRW-1000

[DVD Player Sanyo DRW-1000 Quick Start Manual](#)

Sanyo drw-1000: user guide (2 pages)

[DVD Recorder Sanyo DVR-S120 Instruction Manual](#)

Sanyo dvd recorder instruction manual (40 pages)

[DVD Recorder Sanyo DVR-500 Instruction Manual](#)

Dvd video recorder (63 pages)

[DVD Recorder Sanyo DRW-500 Instruction Manual](#)

Dvd video recorder (64 pages)

[DVD Recorder Sanyo DRW-500 Quick Manual](#)

Dvd video recorder (4 pages)

[DVD Recorder Sanyo DVR-SD450 Operating Instructions Manual](#)

(52 pages)

[DVD Recorder Sanyo DVR-DX600 Service Manual](#)

(26 pages)

[DVD Recorder Sanyo DVR-DX600 Instruction Manual](#)

(58 pages)

[DVD Recorder Sanyo HVR-DX625H Instruction Manual](#)

Dvd recorder+vcr (61 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (20 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (62 pages)

[DVD Recorder Sanyo VA-EXD1B Instruction Manual](#)

(36 pages)

[DVD Recorder Sanyo FWZH776F Owner's Manual](#)

Hd dvr & dvd recorder with digital tuner (84 pages)

[DVD Recorder Sanyo HVR-DX700 Instruction Manual](#)

Hdd/dvd recorder (61 pages)

## Related Content for Sanyo DRW-1000

[DVR-DX600 Checking The Recording Time](#)

Sanyo DVR-DX600

[HVR-DX625H Checking The Recording Time](#)

Sanyo HVR-DX625H

[HVR-DX700 Time Shifting & Saving](#)

Sanyo HVR-DX700

[DVR-SD450 Date / Time](#)

Sanyo DVR-SD450