



# Naming A Title; Deleting An Original Or Playlist Title/Chapter - Sanyo DRW-1000 Instruction Manual

Dvd video recorder & 4 head hi-fi stereo vcr



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## VR Mode: Original and Playlist Editing (Continued)

### Naming a Title

#### DVD-RW VR

You can name Original and Playlist titles independently.

Names can be up to 32 characters long.

1 1

Press DISC MENU/LIST repeatedly to display

Original-Title or Playlist-Title **DVD-RW VR**

2 2

Use v / V / b / B to choose the title you want to name and press ENTER.

Names can be up to 32 characters long.

Options appears on the left side of the menu.

Play

View Chap.

Rename

Delete

Playlist Add

**1** Press DISC MENU/LIST repeatedly to display  
Original-Title or Playlist-Title menu.

**2** Use ▲ / ▼ / ◀ / ▶ to choose the title you want to  
name and press ENTER.

### Deleting an Original Title/Chapter **DVD-RW**

When you erase a title or chapter menu, you only remove it from the menu. The title/chapter remains in the Original menu.

If you choose to delete a title or chapter menu, the title/chapter menu, the

Delete Part  
Copy to VCR

## Original-Title

3 3

Use v/V to select "Rename" option, then press ENTER.

The Keyboard menu appears.


TITLE 2  
Language  
English/Latin Capital

# VR Mode: Original and Playlist Editing (Continued)

## Naming a Title **DVD-RW VR**

You can name Original and Playlist titles independently. Names can be up to 32 characters long.

 - 1 Press DISC MENU/LIST repeatedly to display Original-Title or Playlist-Title menu.
- 2 Use ▲ / ▼ / ◀ / ▶ to choose the title you want to name and press ENTER.  
Options appears on the left side of the menu.

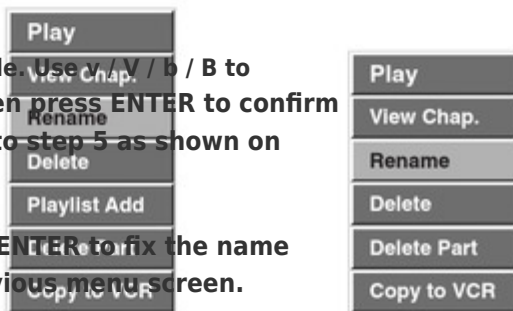

Space Delete

4 4  
Enter a name for the title. Use v/V / b / B to select a character, then press ENTER to confirm your selection. Refer to step 5 as shown on page 26 (Disc Name).

5 5  
Choose OK and press ENTER to fix the name and return to the previous menu screen.

6 6

Press RETURN (O) repeatedly to exit the Original-Title menu. Press RETURN (O) repeatedly to exit the Playlist-Title menu.

### Note

For discs formatted on a different DVD Recorder, you will see only a limited character set.

Play  
View Chap.  
Rename  
Delete  
Delete Part  
Copy to VCR

- 3 Use ▲ / ▼ to select "Rename" option, then press ENTER.  
The Keyboard menu appears.



## Playlist-Title

6

7

8

9

0

F

G

H

I

J

P

Q

R

S

T

Z

OK

Cancel

- 4 Enter a name for the title. Use ▲ / ▼ / ◀ / ▶ to select a character, then press ENTER to confirm your selection. Refer to step 5 as shown on page 26 (Disc Name).

- 5 Choose OK and press ENTER to fix the name and return to the previous menu screen.

Deleting an Original or Playlist Title/Chapter  
Press RETURN (↵) repeatedly to exit the menu.

When you erase a title or chapter from the Playlist

## Deleting an Original Title/Chapter **DVD-RW**

When you erase a title or chapter from the Original (title/chapter) menu, you only remove it from the disc and the title/chapter remains in the Original menu.

If you choose to delete a title or chapter from the Original (title/chapter) menu, the title/chapter is permanently deleted from the disc and the available recording time for recording increases. Titles and chapters deleted from the Original are also removed from the Playlist.

 
### Note

It may not be possible to delete titles or chapters longer than 5 seconds.

- 1 Press DISC MENU/LIST repeatedly to display the Original-Title or Playlist-Chapter menu. If you want to display the Playlist-Chapter menu, refer to "Using the Chapter Menu" or "Using the Playlist Menu" on pages 45-46.

- 2 Use ▲ / ▼ / ◀ / ▶ to choose the title or chapter you want to delete, then press ENTER.  
Options appear on the left side of the menu.

- 3 Select "Delete".

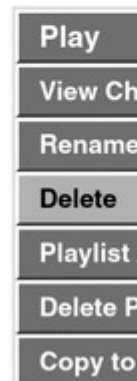

- 4 Press ENTER to confirm your selection. The confirm message for deleting appears.

- 5 Use ◀ / ▶ to select "Yes" or "No".  
After pressing ENTER, the title or chapter is deleted from the disc.

menu, you only remove it from the Playlist; the title/chapter remains in the Original menu.  
 If you choose to delete a title or chapter from the Original (title/chapter) menu, the title or chapter is actually deleted from the disc and the remaining time available for recording increases. Titles/chapters deleted from the Original are also removed from the Playlist.

## VR Mode: Original and Playlist Editing (Continued)

It may not be possible to delete chapters that are less than 5 seconds long.

### Naming a Title DVD-RW VR

**1** Press DISC MENU/LIST repeatedly to display the Original-Title or Playlist-Title menu.

If you want to display the Original-Title or Playlist-Chapter menu, refer to "Using Original-Chapter Menu" or "Using Playlist-Chapter Menu" on pages 45-46.

 
**2** Use ▲ / ▼ / ◀ / ▶ to choose the title you want to name and press ENTER.

Options appear on the left side of the menu.  
 Use v / V / b / B to choose a chapter or title you want to delete, then press ENTER.

Options appear on the left side of the screen.

**3** Select "Delete".

- Play
- View Chap.
- Rename
- Delete
- Playlist Add
- Delete Part
- Copy to VCR

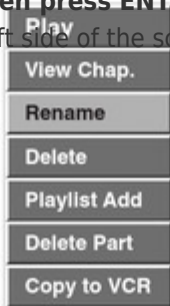

Original-Title



Playlist-Title

**4** Press ENTER to confirm. Use ▲ / ▼ to select "Rename" option, then press ENTER.

The confirm message for deleting will appear.  
 The Keyboard menu appears.  
 Use b / B to select "Yes", then press ENTER.

The selected chapter or title is deleted.  
 After pressing ENTER, the new, updated menu is displayed.

**6** Repeat steps 2 - 5 to delete more from the menu.

**7** Press RETURN (O) repeatedly to exit the menu.



47

### Deleting an Original Title/Chapter DVD-RW

When you erase a title or chapter menu, you only remove it from the Original menu; the title/chapter remains in the Original menu.

If you choose to delete a title or chapter from the Original (title/chapter) menu, the title or chapter is actually deleted from the disc and the remaining time available for recording increases. Titles/chapters deleted from the Original are also removed from the Playlist.

#### Note

It may not be possible to delete chapters that are less than 5 seconds long.

**1** Press DISC MENU/LIST repeatedly to display the Original-Title or Playlist-Title menu.  
 If you want to display the Playlist-Chapter menu, refer to "Using Original-Chapter Menu" or "Using Playlist-Chapter Menu" on pages 45-46.

**2** Use ▲ / ▼ / ◀ / ▶ to choose the title you want to delete, then press ENTER.  
 Options appear on the left side of the menu.

**3** Select "Delete".



[Previous Page](#)  
[Next Page](#)

1  
...  
44  
45  
46  
47  
48  
49  
50  
51

Quick Links:

[Recordable Discs](#)

[Disc Record Mode](#)

[Copying from Vcr to DVD](#)

## Troubleshooting

[Timer Recording 41](#)

[What is DV 43](#)

[Troubleshooting 54](#)



## Related Manuals for Sanyo DRW-1000

[DVD Player Sanyo DRW-1000 Quick Start Manual](#)

Sanyo drw-1000: user guide (2 pages)

[DVD Recorder Sanyo DVR-S120 Instruction Manual](#)

Sanyo dvd recorder instruction manual (40 pages)

[DVD Recorder Sanyo DVR-500 Instruction Manual](#)

Dvd video recorder (63 pages)

[DVD Recorder Sanyo DRW-500 Instruction Manual](#)

Dvd video recorder (64 pages)

[DVD Recorder Sanyo DRW-500 Quick Manual](#)

Dvd video recorder (4 pages)

[DVD Recorder Sanyo DVR-SD450 Operating Instructions Manual](#)

(52 pages)

[DVD Recorder Sanyo DVR-DX600 Service Manual](#)

(26 pages)

[DVD Recorder Sanyo DVR-DX600 Instruction Manual](#)

(58 pages)

[DVD Recorder Sanyo HVR-DX625H Instruction Manual](#)

Dvd recorder+vcr (61 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (20 pages)

[DVD Recorder Sanyo HVR-DX610 Service Manual](#)

Dvd recorder + vcr (62 pages)

[DVD Recorder Sanyo VA-EXD1B Instruction Manual](#)

(36 pages)

[DVD Recorder Sanyo FWZH776F Owner's Manual](#)

Hd dvr & dvd recorder with digital tuner (84 pages)

[DVD Recorder Sanyo HVR-DX700 Instruction Manual](#)

Hdd/dvd recorder (61 pages)

## Related Content for Sanyo DRW-1000

[DVR-SD450 Locating A Specific Title Or Chapter, Using The Menu Or Title Button \(Dvd\)](#)

Sanyo DVR-SD450

[DVR-500 Setting "Title](#)

Sanyo DVR-500

[DVR-S120 Playback Title](#)

Sanyo DVR-S120

[DRW-500 Setting "Title](#)

Sanyo DRW-500