



 
# **TOSHIBA**

Toshiba TWD-BK90S2 Series Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29



•

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[1 Operations](#)

[2 Detergent Dispenser](#)

[3 Control Panel](#)

[4 Programmes](#)

[5 Cleaning and Care](#)

[Download this manual](#)





FRONT LOADING

WASHER DRYER  
**TOSHIBA**

OWNER'S MANUAL

MODEL

# TWD-BK90S2 Series

Read This Manual

Read and follow the instructions carefully.

Keep the operation instructions handy for

future

use .

# TOSHIBA

CAUTION: HOT SURFACE!

CAUTION: RISK OF FIRE!

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba TWD-BK90S2 Series

[Washer/Dryer Toshiba TW-G520L User Manual](#)

(6 pages)

[Washer/Dryer Toshiba TWD-BH90W4H Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BK90S2H Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BL160D4 Series Owner's Manual](#)

Dual drum washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BJ120M4M Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BH90W4M Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BM105GF4 Series Owner's Manual](#)

(36 pages)

[Washer/Dryer Toshiba TWD-BH90W4PH Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BN90GF4H Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU105MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T27BZP115MW Series Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWM Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWT Owner's Manual](#)

Front loading washer dryer (36 pages)

## Summary of Contents for Toshiba TWD-BK90S2 Series

[Page 1](#) FRONT LOADING WASHER DRYER OWNER'S MANUAL MODEL TWD-BK90S2 Series Read This Manual Read and follow the instructions carefully. Keep the operation instructions handy for future use . CAUTION: HOT SURFACE! CAUTION: RISK OF FIRE!

### [Page 2: Table Of Contents](#)

CONTENTS SAFETY INSTRUCTIONS Safety Instructions.....	
INSTALLATION Product Description .....	
Installation OPERATIONS Quick Start.....	Before Each
Washing.....	Detergent Dispenser..... Control
Panel.....	Option .....
.....	Programmes
.....	MAINTENANCES Cleaning And Care .....
Trouble Shooting .....	Technical Specifications .....

### [Page 3: Safety Instructions](#)

SAFETY INSTRUCTIONS Safety Instructions • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. •...

[Page 4](#) SAFETY INSTRUCTIONS Safety Instructions For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life. Explanation of the symbols: Warning! This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

[Page 5](#) SAFETY INSTRUCTIONS • The new hose-sets supplied with the appliance must be used and the old hose-sets must not be used. • Before maintenance, unplug the appliance. • Always unplug the machine and turn off the water supply after use. The standard inlet water pressure: 0.05MPa~1MPa.

[Page 6](#) SAFETY INSTRUCTIONS • Pull out its plug from the power socket before cleaning or maintenance. • Do not use any socket with rated current less than that of appliance. Never pull out power plug with wet hand. • Please remember to disconnect water and power supply immediately after the clothes are washed.

[Page 7](#) SAFETY INSTRUCTIONS Risk of explosion! • Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) This may result in fire or explosion.

[Page 8](#) SAFETY INSTRUCTIONS • Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result. Risk of damaging appliance! • Your product is only for home use and is only designed for the textiles suitable for machine washing. •...

[Page 9](#) SAFETY INSTRUCTIONS • Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine. • Please check whether the water inside the drum has been drained before opening its door. Please do not open the door if there is any water visible.

[Page 10](#) SAFETY INSTRUCTIONS • Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. • The final part of a washer dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

### [Page 11: Product Description](#)

INSTALLATION Product Description Top cover Water supply hose Control panel Detergent Power supply cord dispenser Drum Door Drain pump filter Drain hose Note! • The product line chart is for reference only, please refer to real product as standard. Accessories Screw(optional) Transport Supply hose...

### [Page 12: Installation](#)

INSTALLATION Installation Installation area Warning! • Stability is important to prevent the product from wandering! • Make sure that the product should not stand on the power cord. W 20mm > Before installing the machine, the location characterized as follows shall be selected: 1. Rigid, dry, and level surface 2. Avoid direct sunlight 3. Sufficient ventilation...

[Page 13](#) INSTALLATION Levelling the washing machine Warning! • Check with the gradienter if the machine placement is balanced and steady. • If there is no gradienter, check the balance as per the following method. 1. If it's balanced from left to right. •...

[Page 14](#) INSTALLATION Levelling the washing machine Warning! • The lock nut on all four feet must be screwed tightly against the housing. Check if the legs are closely attached to the cabinet. If not, please turn them to their original positions tighten the nuts. 2. Loosen the lock nut turn the feet until it closely contacts with the floor. 3. Adjust the legs and lock them with a spanner, make sure the machine is steady.

[Page 15](#) **INSTALLATION** Connect the other end of inlet pipe to the inlet valve at the backside of product and fasten the pipe tightly clockwise. water supply hose water Inlet valve Drain Hose Warning! • Do not kink or protract the drain hose. •...

### [Page 16: Operations](#)

**OPERATIONS Quick Start Caution!** • Before washing, please make sure it's installed properly. • Before washing at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows. The suggested program is "DRUM CLEAN". 1.

### [Page 17: Before Each Washing](#)

**OPERATIONS Before Each Washing** • The working condition of the washer should be(0-40)°C.If used under 0°C,the inlet valve and draining system may be damaged. If the machine is placed under condition of 0°C or less, then it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose are not frozen before use.

### [Page 18: Detergent Dispenser](#)

**OPERATIONS Detergent Dispenser** Detergent Dispenser Pre wash detergent Main wash detergent Softener Dam-board Dam-board Liquid detergent Powder detergent Pull out the dispenser Programme Programme COTTON COTTON ECO SYNTHETIC COLORALIVE 15' QUICK TIME DRY WOOL AUTO DRY SPIN ONLY 1 HOUR W/D RINSE&SPIN BABY CARE SPORTWEAR...

### [Page 19: Control Panel](#)

**OPERATIONS Control Panel Note!** • The chart is for reference only, Please refer to real product as standard. Start/Pause On/Off Product is switched on or off. Press the button to start or pause the washing cycle. Programmes Option Available according to the laundry type. This allows you to select an additional function and will light when selected.

[Page 20](#) **OPERATIONS Option** It is suitable for different level of drying . For [AUTO DRY] , The default level is 6:00 ,when touch drying button, drying level will be changed (6:00 → 6:20 → 5:40 For [TIME DRY] , The default is 0:40 ,when touch drying button, the drying time will be changed (0:40→1:10→1:40→2:10) Note! □...

[Page 21](#) **OPERATIONS Child Lock** To avoid mis operation by children. SPIN Start/Pause Press SPIN] and [DRY] On/Off 3 sec. till buzzer beep. Caution! • Press the two button 3sec. also to be released the function. • The "Child Lock" will lock all buttons except On/Off •...

[Page 22](#) **OPERATIONS DELAY END** Set the Delay function: 1. Select a programme 2.Press the [TEMP.]&[SPIN] button to choose the time(the delaying end time is 1-24 H.) 3.Press [START/PAUSE] to commence the delay operation [TEMP.] and [SPIN] ON/OFF Choose the Programme Setting time Start Cancel the Delay function: Press the [TEMP.]and[SPIN] button until the display be 0H.It should be pressed...

### [Page 23: Programmes](#)

**OPERATIONS Programmes** Programmes are available according to the laundry type. Washing the baby's clothes,it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin. Press [DRY] for 3sec. to set the memory program, the default memory is COTTON For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts).

[Page 24](#) **OPERATIONS Washing Programmes Table** Programme °C Load(kg) Temp. Default Time Default COTTON ECO 2:36 COLORALIVE 3:47 15' QUICK Cold 0:15 WOOL 1:07 SPIN ONLY 0:12 RINSE&SPIN 0:20 SPORTWEAR 0:45 DRUM CLEAN 1:10 BABY CARE 1:45 1 HOUR W/D 0:59 AUTO DRY 6:00 TIME DRY 0:40...

### [Page 25: Maintenances](#)

**MAINTENANCES Cleaning And Care Warning!** • Before your maintenance starts, please unplug the machine and close the tap. Cleaning The Cabinet Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the dry cloth to wipe it off...

[Page 26](#) **MAINTENANCES Cleaning The Inlet Filter Note!** • Inlet filter must be cleaned if there is less water. Washing the filter in the water supply hose 1.Close the tap. 2.Remove water

supply hose from the tap. 3.Clean the filter. 4.Reconnect the water supply hose. Washing the filter in washing machine: Screw off...

[Page 27](#) MAINTENANCES Cleaning The Drain Pump Filter Warning! • Be careful of the hot water! • Allow the water to cool down. • Unplug the machine to avoid electrical shock before maintenance. • Drain pump filter can filter the lints and small foreign matters from the washing.

### [Page 28: Trouble Shooting](#)

MAINTENANCES Trouble Shooting The start of the appliance does not work or it stops during operation. First try to find a solution to the problem, If not, contact the service centre.  
Description Reason Solution Washing machine Restart after the door is closed Door is not closed properly cannot start up Check if the clothes is stuck...

### [Page 29: Technical Specifications](#)

MAINTENANCES Technical Specifications Power Supply 220-240V~,50Hz MAX.Current  
0.05MPa~1MPa Standard Water Pressure Washing Dimension Rated Model Capacity Capacity  
(W\*D\*H mm) Weight Power Power TWD-BK90S2 Series 2000W 1300W 8.0kg 5.0kg 595\*600\*850  
72kg...