

 
Console Redirection Settings (Com0) - Asus AAEON BOXER-6406-ADN User Manual

Fanless embedded box pc

1
2
3
4
5
6
7
8
9
10
Table Of Contents
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110



•

[Table of Contents](#)

•

Bookmarks



3.5.5.1

Console Redirection Settings (COM0)

Options

Terminal Type

Emulation:

ANSI: Extended ASCII char set.

VT100: ASCII char set.

VT100Plus: Extends VT100 to support color, function keys, etc.

VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.

Bits per second

Selects serial port transmission speed. The speed must be matched on the other

Emulation
ASCII char set.

side.

Long or noisy lines may require lower speeds.

Chapter 3 - AMI BIOS Setup

VT100

VT100Plus

VT-UTF8

ANSI

9600

19200

38400

57600

115200

Optimal Default, Failsafe Default

Optimal Default, Failsafe Default

70

Aptio Setup - AMI		
Main		
COM0		Emulation
Console Redirection Settings		ASCII cha
Terminal Type	[ANSI]	char set.
Bits	[115200]	VT100 to
Data Bits	[8]	function
Parity	[None]	Uses UTF8

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
80
81
82
83
84
85
86
87

Related Manuals for Asus AAEON BOXER-6406-ADN

[Computer Hardware Asus Aaeon BOXER-6641 User Manual](#)

Fanless embedded box pc (134 pages)

[Computer Hardware Asus Aaeon BOXER-6451-ADP User Manual](#)

Fanless embedded box pc (104 pages)

[Computer Hardware Asus Aaeon BOXER-6646-ADP User Manual](#)

(113 pages)

[Computer Hardware Asus AAEON BOXER-6751-ADP User Manual](#)

Fanless embedded box pc (124 pages)

[Computer Hardware Asus AAEON BOXER-6652 User Manual](#)

Fanless embedded box pc (118 pages)

[Computer Hardware Asus AAEON BOXER-6616 User Manual](#)

Fanless embedded box pc (105 pages)

[Computer Hardware Asus AAEON BOXER-6617-ADN User Manual](#)

Fanless embedded box pc (113 pages)

[Computer Hardware Asus AAEON BOXER-6711-ADN User Manual](#)

Din rail fanless box pc (107 pages)

[Computer Hardware Asus AAEON BOXER-8233AI Installation & User Manual](#)

Nvidia jetson tx2 nx platform nvidia jetpack 4.5 (6 pages)

[Computer Hardware Asus Aaeon BOXER-8641AI User Manual](#)

Ai@edge compact fanless embedded ai system with nvidia agx orin (54 pages)

[Computer Hardware Asus BOXER-8222AI-B Installation & User Manual](#)

Nvidia jetson nano platform aclinux 4.9 (6 pages)

[Computer Hardware Asus AAEON BOXER-8640AI User Manual](#)

Ai@edge fanless embedded ai system with nvidia® agx orin™ (51 pages)

[Computer Hardware Asus AAEON BOXER-8224AI User Manual](#)

Ai@edge embedded system with nvidia® jetson nano™ (58 pages)

[Computer Hardware Asus AAEON BOXER-8622AI User Manual](#)

Ai@edge compact fanless embedded ai system with nvidia jetson orin nano (52 pages)

[Computer Hardware Asus AAEON BOXER-8652AI User Manual](#)

Ai@edge compact fanless embedded ai system with nvidia jetson orin nx (51 pages)

[Computer Hardware Asus AAEON BOXER-8645AI User Manual](#)

Ai@edge fanless embedded ai system with nvidia jetson agx orin (101 pages)

Related Content for Asus AAEON BOXER-6406-ADN

[AAEON GENE-CML5 Com0 Console Redirection Settings](#)

Asus AAEON GENE-CML5

[AAEON AQ7-ADN Legacy Console Redirection Settings](#)

Asus AAEON AQ7-ADN

[AAEON uCOM-ADN Legacy Console Redirection Settings](#)

Asus AAEON uCOM-ADN

[AAEON PICO-TGU4-SEMI Console Redirection Settings](#)

Asus AAEON PICO-TGU4-SEMI

[AAEON EPIC-TGH7 Console Redirection Settings](#)

Asus AAEON EPIC-TGH7

[AAEON GENESYSM-TGU6 Console Redirection Settings](#)

Asus AAEON GENESYSM-TGU6

[Aaeon GENE-ADP6 Legacy Console Redirection Settings](#)

Asus Aaeon GENE-ADP6

[AAEON GENE-TGU6 Console Redirection Settings](#)

Asus AAEON GENE-TGU6