



# **TOSHIBA**

Toshiba 2358 9721 Quick Setup Manual



1  
2

--

•

## Bookmarks

[Download this manual](#)

## Quick Links



2358 9721  
2358 9721

# TOSHIBA

## Simple at-a-glance reference of your remote control

To bring up on-screen information and for the text initial/index function

## Simple at-a-glance reference of your remote control

To return to the previous programme

Selectable picture preferences

On-screen Menus

Stereo/Bilingual reception

When using TOSHIBA VCR or DVD

**m** To bring up on-screen information and for the text initial/index function

press  
to PAUSE



To disp

For Or



## Simple at-a-glance reference of your remote

press  
to EJECT  
press I

Q  
to SKIP-REWIND  
press

S  
I to SKIP-FORWARD  
press

r  
to PLAY  
press

p  
to STOP  
press  
to REWIND

q  
press  
to FAST FORWARD  
S

## Quick Set Up Guide and Remote Control

# TOSHIBA

Number buttons  
To select mode

Remove the back cover to insert the batteries, make sure they are inserted the right way round. Suitable battery types for this remote are: AAA, IEC R03 1.5V.

Get other manuals <https://www.bkmanuals.com>

To display text services

For On/Standby mode

To select input from external sources

To access sub-pages when in text mode

Widescreen viewing

To exit Menus

To change programme positions and teletext pages

To alter the volume

When using menus the arrows move the cursor on the screen up, down, left or right. OK to confirm your selection

Text control buttons

Bass Boost/Super Woofers

To mute the sound

When in TV mode:

Time display

8  
9

When in text mode:

**When using a TOSHIBA VCR or DVD:**

- press **||** to PAUSE
- press **▲** to EJECT
- press **◀◀** to SKIP-REWIND
- press **▶▶** to SKIP-FORWARD
- press **▶** to PLAY
- press **■** to STOP



To bring up on-screen information and for the text initial/index function

Number buttons

To return to the previous programme

Selectable picture preferences

On-screen Menus

Stereo/Bilingual reception

To select mode

To disp

For Or

To sele  
To acc

Widesc

To exit

To cha  
teletex  
To alte  
When  
the cur  
or righ

Text co

Bass B

To mut

**When**  
[Icon] / [Icon]  
**When**  
[Icon]  
[Icon]  
[Icon] / [Icon]

To reveal concealed text

2358 9721

# TOSHIBA

To hold a wanted page

Q

To enlarge text display size

S

To select a page whilst viewing a

/

8

9

normal picture

Printed on recycled paper.

100% Chlorine free.

## Simple at-a-glance reference of your re



To disp

[Next Page](#)

1  
2

## Related Manuals for Toshiba 2358 9721

[Remote Control Toshiba RBC-AMT32E Operation Manual](#)

Wired remote controller (5 pages)

[Remote Control Toshiba RBC-AS41E Owner's Manual](#)

Air conditioner remote controller (2 pages)

[Remote Control Toshiba TCB-SC642TLE Owner's Manual](#)

Central remote controller for split system air conditione (65 pages)

[Remote Control Toshiba CT-8002 At-A-Glance Reference Manual](#)

(2 pages)

[Remote Control Toshiba RBC-AMS51E-EN Owner's Manual](#)

Lite-vision plus remote controller (42 pages)

[Remote Control TOSHIBA VCR remote Programming Manual](#)

(5 pages)

[Remote Control Toshiba RBC-AMS51E-ES Installation Manual](#)

Lite-vision plus remote controller (30 pages)

[Remote Control Toshiba RBC-AMS54E Installation Manual](#)

Wired remote controller (32 pages)

[Remote Control Toshiba RBC-AMS41E Owner's Manual](#)

With weekly timer (164 pages)

[Remote Control Toshiba CT-8003 At-A-Glance Manual](#)

(2 pages)

[Remote Control Toshiba RBC-AMT32E Pocket Quick Reference Manual](#)

(8 pages)

[Remote Control Toshiba RBC-AMT32-E Owner's Manual](#)

Standard hard wired remote controller (17 pages)

[Remote Control Toshiba RBC-ASC11E Owner's Manual](#)

Compact wired remote controller (172 pages)

[Remote Control Toshiba TCB-SC642TLE2 Installation Manual](#)

Central remote controller for split system air conditioner (22 pages)

[Remote Control Toshiba RBC-AMT31E Owner's Manual](#)

Wired standard remote controller (15 pages)

## Summary of Contents for Toshiba 2358 9721

[Page 1](#) OK to confirm your selection Text control buttons Stereo/Bilingual reception Bass Boost/Super Woofer To select mode To mute the sound When in TV mode: When using a TOSHIBA VCR or DVD: Time display press to PAUSE When in text mode: press to EJECT...

[Page 2](#) TOSHIBA Auto Tune - LCD WL58 Series Plug the aerial directly into the AERIAL INPUT on the television set. Ensure all other products are in standby before continuing. Connect the television to the mains, the red LED will light up.