



# Toshiba TY-SBX1020 - Bluetooth Soundbar Manual

# Contents

## 1 Placement and mounting

### 1.1 Wall mounting

## 2 Power Supply

## 3 Identifying the Parts

## 4 Remote Control

## 5 Basic Operation

### 5.1 Turning on/off the power

### 5.2 Adjusting the volume

### 5.3 Select a Mode

### 5.4 Select a Preset Sound Effect

## 6 AUX / HDMI ARC / OPTICAL / COAXIAL Operation

[7 Bluetooth Operation](#)

[8 Specifications](#)

[9 Documents / Resources](#)

[9.1 Download manual](#)

Placement and mounting

## Wall mounting

### Note

- Installation must be carried out by qualified personnel. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Main Unit and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this operation manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

1. Remove the screws from the Main Unit.
2. Attach the wall brackets to the Main Unit with the screws removed from the Main Unit.
3. Drill 2 parallel holes (Ø 3 - 8 mm each according to wall type) in the wall.  
The distance between the holes should be 640 mm.
4. Firmly fix 1 dowel into each hole in the wall if necessary.
5. Leave a 5 mm gap between the wall and the screw's head.

Lift the Main Unit with the attached wall brackets over the heads of the screws and slot into place.

## Power Supply

### When using AC power supply

1. Insert the supply plug of the attached power cord fully into AC Power Plug on the back.
2. Insert the power plug into an AC outlet.

## Identifying the Parts

### Terminal

AC~	AC Power Plug	Connect a power cord.
OPTICAL	OPTICAL socket	Connect a digital optical cable.
COAXIAL	COAXIAL socket	Connect a digital coaxial cable.
SERVICE ONLY	SERVICE ONLY socket	The USB socket is for service only. It is not listen to music and designed to charge smartphones, tablets or similar devices.
AUX	AUX socket	Connect an AUX cable.
HDMI ARC	HDMI socket	Connect a HDMI cable.

### Buttons and indicators

LED indicators		Indicates the current mode. Indicator color: STANDBY: Red AUX: Green BT: Blue OPTICAL: Orange COAXIAL: Orange (flash) HDMI ARC: White
----------------	--	--



	Power button	Switch the unit between ON and STANDBY mode.
	Function button	Select the play function.
EQ	Equalizer button	Select a preset sound effect.
- / +	- / + Volume / button	Increase/decrease the volume level.

## Remote Control

Power button	Switch the unit between ON and STANDBY mode.
Mute button	Mute or resume the sound.
Function buttons	Select the play function.
Volume+/- button	Increase/decrease the volume level.
EQ buttons	Select a preset sound effect.
Play/Pause/ Pairing button	Play/pause playback in Bluetooth mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
Fast forward/ backward button	Skip to previous/next track in Bluetooth mode.

### Information:

- Remove the protective tab to activate the remote control battery before use.
- Use a CR2025 lithium battery for the remote control. When replacing the battery, remove it and place a CR2025 lithium battery into the battery tray with correct polarity (+/-) as engraved on the remote control rear panel. There is a risk of injury due to fire, explosion or leakage if the battery is not replaced, used, handled or disposed of properly. Dispose of the used battery immediately as required by local regulations. Do not disassemble, charge, crush the battery or expose it to fire or high temperature.

## Basic Operation

### Turning on/off the power

Press Power button.

When the power is on, the standby indicator (red) will go off and one of the function indicators will light up.

When the power is off, the standby indicator (red) will light up.

### Information:

- Auto power on

The unit turns on automatically under the following conditions:

- if you turn on the TV and its HDMI ARC port connected to the unit with a HDMI cable.
- if you start playing a music on the audio player connected to the unit with a 3.5mm to 3.5mm audio cable.

- Auto power off

The unit turns off automatically under the following conditions:

- if you turn off the TV connected to the unit with a HDMI cable.
- if no operation is done or no signal comes from the connected device for 15 minutes.

## Adjusting the volume

Press Volume+/- button.

Press Mute button only for remote control.

## Select a Mode

Press the Function button repeatedly on the unit or the AUX, HDMI ARC, OPTICAL, COAXIAL or BT(Bluetooth) button on the remote control to select the desired mode.

## Select a Preset Sound Effect

While playing, press the EQ button on the unit or the NEWS, MOVIE or MUSIC button on the remote control to select the desired sound effect.

## AUX / HDMI ARC / OPTICAL / COAXIAL Operation

1. Ensure that the unit is connected to the TV or audio device.
2. Press the Function button repeatedly on the unit or the AUX, HDMI ARC, COAXIAL or OPTICAL button on the remote control to select the desired mode.

## Information:

- Operate your audio device directly for playback features.

# Bluetooth® Operation

## Pairing:

1. Press the Function button repeatedly on the unit or the BT button on the remote control to select Bluetooth mode. The Blue indicator will light flash.
2. The system has entered pairing mode. Press and hold the "/PAIR" button on the remote control. The Blue indicator will flash rapidly and the unit has entered pairing mode.
3. Activate your Bluetooth® device and select the search mode. "TY-SBX1020" will appear on your Bluetooth device list.
4. Select "TY-SBX1020" in the pairing list. After the "Pairing sound" prompt, the unit is successfully connected and the Blue indicator will light up solidly.

## Information:

- Enter "0000" for the password if necessary.

## Playing Bluetooth® Music:

1. Pair your device with the player.
2. Play music via your device (by pressing the /PAIR, , or button.

# Specifications

## Bluetooth® section

Bluetooth® spec.	Version 4.2
Wireless equipment Classification	Class 2
Supported profile	A2DP, AVRCP
Frequency range	2.402-2.480 GHz (2.4 GHz ISM Segment)
Service distance	Up to 10 m

## General

Power Supply	AC100-240V ~ 50/60 Hz
Power Consumption	30 W
Power output	15 W x 2 + 30 W
Dimension	815 x 89 x 56 mm (W x H x D)
Weight	Approx. 2.3 Kg
Speaker	8Ω x 2 + 4Ω
Accessories	Power cord x 1, Remote control x 1, AUX cable x 1, Operation manual x 1

The specifications may be changed without prior notice to improve product performance. The images included in this guide may differ from the actual image and may change without notice.

## Documents / Resources

### Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Toshiba TY-SBX1020 - Bluetooth Soundbar](#)

### Need Assistance?

Do you have a question about the TY-SBX1020 that isn't answered in the manual?  
Leave your question here.



Stay updated with the latest solutions  
Submit your question

## Related Manuals for Toshiba TY-SBX1020

[Toshiba TY-ASC402 - Wireless Sound System Manual](#)

(article)

[Speaker System Toshiba SB3950E1 User Manual](#)

40w soundbar speaker system (176 pages)

[Speaker System Toshiba SBM1W User Manual](#)

Mini 3d sound bar & subwoofer (402 pages)

[Speaker System Toshiba SB93719S-SW User Manual](#)

Sound bar speaker system (16 pages)

[Speaker System Toshiba SBX4250KN User Manual](#)

Soundbar sbx4250kn (20 pages)

[Speaker System Toshiba SoundStrip SBX5065KU User Manual](#)

Sound bar speaker system (20 pages)

[Speaker System Toshiba ABX3250KN User Manual](#)

Audio base speaker system (20 pages)

[Speaker System Toshiba SBK1 User Manual](#)

3d sound bar (352 pages)

[Speaker System Toshiba SBX4250 Brochure](#)

Sound bar speaker system (2 pages)

[Speaker System Toshiba SBX5065KC User Manual](#)

Sound bar speaker system (20 pages)

[Speaker System Toshiba SBX4250KN Specification](#)

Sound bar speaker system (2 pages)

[Speaker System Toshiba SSW1020 Owner's Manual](#)

Toshiba ssw1020: user guide (7 pages)

[Speaker System Toshiba SSC5300 Owner's Manual](#)

Toshiba sst6200, ssc5300 speaker svstems owner's manual (7 pages)

[Save Article as PDF](#)