



# Toshiba 32BV801B User Manual

Digital series



1	
2	
3	
4	
5	
Table Of Contents	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45

•

[Table of Contents](#)

•

Bookmarks


--

## Quick Links

[1 User Manual](#)

[2 Connecting External Equipment](#)

[Download this manual](#)

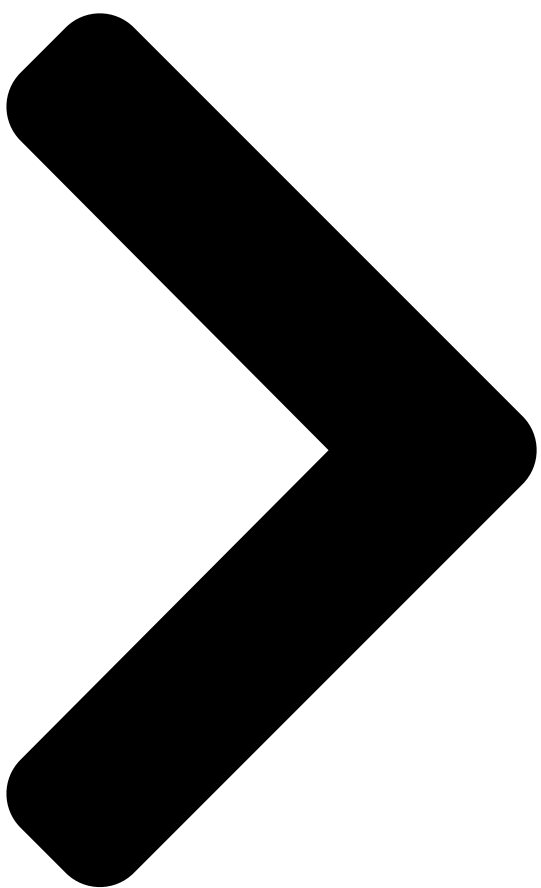

"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 1

32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 1

# User Manual

## DIGITAL Series



English - 1 -

03.10.2011 18:52:35

03.10.2011 18:52:35

**TOSHIBA**  
Leading Innovation >>>

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 32BV801B

### [Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

### [All in One Printer Toshiba e-STUDIO6540C Management Manual](#)

Multifunctional digital color systems / multifunctional digital systems (192 pages)

### [LCD TV Toshiba DIGITAL Series User Manual](#)

(57 pages)

### [Flat Panel TV Toshiba 40BL702B Owner's Manual](#)

Digital series (50 pages)

### [TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

### [LCD TV Toshiba 40BV701B User Manual](#)

(48 pages)

### [TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

### [LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

### [Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

### [Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

### [Storage Toshiba MK1031 Installation Notes](#)

(4 pages)

### [TV Toshiba COLORSTREAM 32A35 Owner's Manual](#)

(36 pages)

### [TV Toshiba 32HFX72 Owner's Manual](#)

Colorstream color television (58 pages)

### [TV Toshiba 32HFX71 Owner's Manual](#)

Colorstream color television (56 pages)

### [TV Toshiba 32SL738G Service Manual](#)

Lcd color television (82 pages)

### [TV Toshiba 32ZD26P Service Manual](#)

Chassis zd26 (39 pages)

## Summary of Contents for Toshiba 32BV801B

### [Page 1: User Manual](#)

"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 1  
32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 1 User  
Manual DIGITAL Series English - 1 - 03.10.2011 18:52:35 03.10.2011 18:52:35...

### [Page 2: Digital Switchover](#)

Television in the UK is going digital, bringing us all more choice and new services. Starting in late 2007 and ending in 2012, television services in the UK will go completely digital, TV region

by TV region. Please see above to find out when your area switches to digital.

### [Page 3: Re-Tuning: Toshiba Freeview Products](#)

\* This process may affect any saved information stored on your product. Please consult your instruction manual or contact the manufacturer using the details above. TOSHIBA Customer Helpline: 0844 856 0730 TOSHIBA Online Support: [www.toshiba.co.uk/tv-dvd-support](http://www.toshiba.co.uk/tv-dvd-support)  
32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 3  
32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 3...

### [Page 4: Manual Re-Tuning](#)

If your Freeview TV or box picks up a different regional service to your preferred service (e.g. BBC England instead of BBC Scotland, or ITV Central instead of ITV Anglia), you can use this manual re-tune. If you are missing some services you may find...

[Page 5](#) 4 ) Write down the "RF Channel" numbers for your transmitter using the Group boxes here: 5 ) While in DTV mode, press MENU and use Up or Down to select Installation. 6 ) Select Manual Channel Scan from the Installation menu and press OK. 7 ) Use Up or Down to change the channel number.

### [Page 6: Table Of Contents](#)

Contents Digital Switchover ... 2 Re-tuning: TOSHIBA Freeview Products ... 3 Manual Re-tuning ... 4 Safety Precautions ... 8 Air Circulation ... 8 Heat Damage... 8 Mains Supply ... 8 Warning ... 8 Do ... 8 Do not ... 8 Installation and Important Information ...

[Page 7](#) Appendix D: PIN Information ... 40 Specifications and Accessories ... 41 License Information ... 42 Questions and Answers ... 43 Toshiba One (1) Year Limited Warranty For TV's (the "Products")... 45 32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 7 32&40BV801B\_MB38\_[GB]\_(IB\_INTERNET)\_DVB-T2\_(3910UK)\_10073217\_10073218.indd 7 English - 7 - 03.10.2011 18:52:40...

### [Page 8: Safety Precautions](#)

**Safety Precautions** This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

### [Page 9: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

### [Page 10: Important Safety Information](#)

Important safety information USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL. Headphone Warning Loud music can damage your hearing irreversibly. Do not set the volume to a high level when listening through headphones, particularly for extended listening periods.

[Page 11](#) Important safety information (continued) • This set should only be connected to an 220-240V AC 50Hz mains power supply. Do not attempt to connect it to any other type of supply. • The socket outlet must be installed near the equipment and is easily accessible.

### [Page 12: Removing The Pedestal Stand](#)

Removing the pedestal stand (1) Carefully lay the front of the TV face down on a flat, cushioned surface such as a quilt or blanket. Leave the stand protruding over the edge of the surface. Note: Extreme care should always be taken when removing the pedestal stand to avoid damage to the LCD panel.

### [Page 13: The Remote Control](#)

Simple at-a-glance reference of your remote control. Inserting Batteries and Effective Range of the Remote Control Remove the back cover to reveal the battery compartment and make sure

the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.

## [Page 14: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. Aerial cable:... Connect the aerial to the ANT. socket on the rear of the television. SCART lead:... If you use a decoder\* or a media recorder, it is essential that the scart cable is connected to the television.

## [Page 15: Connecting An Hdmi® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI® or DVI Device to the HDMI Input The HDMI input on your television receives digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic...

## [Page 16: Connecting A Computer](#)

Connecting a Computer To Connect a Computer With either an RGB/PC or an HDMI connection, you can watch your computer's display on the television and hear the sound from the television's speakers. When connecting a PC to the VGA input on television, use an analogue RGB (15-pin) com- puter cable and for audio connection, use Component Audio Input sockets'...

## [Page 17: Power Save Mode](#)

• This television is designed to consume less energy to save environment. • You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: •...

## [Page 18: Controlling The Tv](#)

• Press + - buttons at the same to view main menu and use - P/CH + to navigate and + NOTE: The USB socket has limited functionality, and Toshiba can take no responsibility for damage to other connected equipment.

## [Page 19: Initial Installation](#)

Before switching on the television put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote IMPORTANT: Ensure that the aerial is connected and a Common Interface module is not inserted before switching on the TV for the fi...

## [Page 20: Auto Tuning](#)

The television can be tuned-in automatically using automatic channel scan feature. Auto Tuning As new services are broadcast, it will be necessary to retune the television in order to view them. • Auto Tuning will completely retune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added.

## [Page 21: Digital Manual Tuning, Analogue Fine Tuning](#)

Digital Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Manual Tuning The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. •...

## [Page 22: Analogue Aps And Programme Sorting](#)

Analogue APS and Programme Sorting Before switching on the television put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your television. APS (Automatic Programming System) When the APS feature is selected all channels and settings will be lost, the television will return to factory settings and then re-tune.

## [Page 23: General Operation](#)

General Operation Stereo and Bilingual Transmissions For ATV programmes If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time positions are changed, disappearing after a few seconds. If the broadcast is not in stereo,

the word Mono will appear.

### [Page 24: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List The channel order may be changed to suit your personal preference. • Select Channel List from the main DTV menu and press OK.

### [Page 25: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner - DTV Mode • Press INFO button the information screen will appear giving details of the channel and programme currently being viewed. • When info banner is on screen, you can use Down cursor buttons to browse channels.

### [Page 26: Displaying Subtitles And Language Selection](#)

Displaying Subtitles and Language Selection Displaying Subtitles In digital mode, this feature will show subtitles on the screen in the selected language provided they are being broadcast. • Press SUBTTL button to activate available subtitles. • Press SUBTTL button again to turn off subtitles. Note: •...

### [Page 27: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu • While in DTV mode, press MENU to view main menu. Select Setup from the list and press OK button.

### [Page 28: Digital Settings - Confi Guration](#)

Digital Settings - Confi guration You can confi gure DTV settings of your TV by using digital Confi guration menu. Viewing Confi guration Menu You can confi gure the settings of your TV. Select Confi guration from Setup menu and press OK to view this menu.

### [Page 29: Digital Settings - Confi Guration, Continued](#)

Digital Settings - Confi guration, You can confi gure DTV settings of your TV by using digital Confi guration menu. Receiver Upgrade This feature helps to keep your TV updated. It works automatically and searches for new information when available. Note that this setting is inactive to be modifi...

### [Page 30: Changing Picture Format](#)

Changing Picture Format Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press SCREEN repeatedly to select between Auto, 16:9, Subtitle, 14:9, 14:9 zoom, 4:3, Panoramic or Cinema. When Auto is selected the format being displayed is determined by the picture being broadcast. "Note: Using the special functions to change the size of the displayed image (i.e.

### [Page 31: General Picture Controls](#)

General Picture Controls You can set picture preferences of your TV. Confi guring Picture Settings You can use different picture settings in detail. You can customize current picture mode settings as desired. For example you change items such as, Brightness, Contrast, Colour, Sharpness and Hue.

### [Page 32: General Picture Controls](#)

General Picture Controls You can set picture preferences of your TV. Film Mode Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching fi lms to see the fast motion scenes clearly.

### [Page 33: Confi Guring Pc Picture Settings](#)

Confi guring PC Picture Settings You can set PC Mode picture settings when using the TV as a PC monitor. Autoposition If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

## [Page 34: Other Controls](#)

Your television has a list of other controls that function in accordance with your preferences. Child Lock Panel Lock disables the buttons on the television. All buttons on the remote control can still be used. • In the FEATURE menu, select Child Lock and choose On or Off using Left or Right button.

## [Page 35: Conditional Access](#)

Conditional Access Conditional Access The Common Interface Slot, situated on the side of the television, enables the insertion of a CAM (Conditional Access Module) and card. These are purchased from a service provider and allow additional subscription broadcasts to be viewed. For more information, see a service provider.

## [Page 36: Usb Media Browser](#)

USB Media Browser This TV allows you to enjoy photo or music files stored on a USB device. Starting Media Browser If you plug a valid USB flash drive to the TV set, the following menu will be displayed on the screen if the plugged USB unit is compatible with this TV set.

## [Page 37: Digital And Analogue Text Services](#)

Digital and Analogue Text Services This television has a multi-page text memory, which takes a few moments to load. Digital Text and Interactive Services The digital text and interactive services are the up-to-date way of viewing service information, using computer-style formats, incorporating pictures and interactive views.

## [Page 38: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The display has a maximum resolution of 1920 x 1200. The following table is an illustration of some of the typical video display modes. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

## [Page 39: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Source EXT 1 EXT 2 SIDE AV S-VIDEO YPbPr HDMI1 HDMI2 HDMI3 Note: In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.).

## [Page 40: Appendix C: Supported File Formats For Usb Mode](#)

Appendix C: Supported File Formats for USB Mode File Media Extension Video Music .mp3 Photo Baseline .jpg JPEG Appendix D: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket.

## [Page 41: Specifications And Accessories](#)

Specifications and Accessories Broadcast Systems/Channels DVB-T, DVB-T2 Video Input External Connections 1-SCART 1 Input 2-SCART 2 Input 3-YPbPr Input 4-SIDE AV Input 5- S-VHS Input (Side) 6-HDMI 1/2/3 Input 7-PC Input 8-Digital Audio Output 9-Analogue Audio Output 10-Subwoofer Output USB Port Media Browser Interface Version: USB 2.0 USB Class: Mass Storage...

## [Page 42: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-defi...

## [Page 43: Questions And Answers](#)

Questions and Answers Questions Below are the answers to some of the most common queries. For more information, go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why is there no sound or picture? Check the television is not in standby mode. Check the mains plug and all mains connections.

[Page 44](#) Questions Below are the answers to some of the most common queries. For more information go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why doesn't the Media Browser feature operate? Make sure that USB is connected correctly. Incorrect behaviour may occur with a USB Hub connection.

#### [Page 45: Toshiba One \(1\) Year Limited Warranty For Tv's \(The "Products"\)](#)

(1) year from the date of original purchase when brand new ("Warranty Period"). 3. If a failure or defect covered by the warranty arises and a valid claim is received by Toshiba within the Warranty Period, Toshiba shall at its option and to the extent permitted by law, repair or replace the machine or any components free of charge or refund the purchase price of the Product.

This manual is also suitable for:

[40bv801bDigital series](#)