



# Toshiba 32BV501B User Manual

Digital series



1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49

---

•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 User Manual](#)

[2 Using the Control Buttons of the Tv](#)

[Download this manual](#)





"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 1

32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 1

# User Manual

## DIGITAL Series



- 1 -

03.10.2011 18:45:45

03.10.2011 18:45:45

**TOSHIBA**  
Leading Innovation >>>

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 32BV501B

### [Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

### [All in One Printer Toshiba e-STUDIO6540C Management Manual](#)

Multifunctional digital color systems / multifunctional digital systems (192 pages)

### [LCD TV Toshiba DIGITAL Series User Manual](#)

(57 pages)

### [Flat Panel TV Toshiba 40BL702B Owner's Manual](#)

Digital series (50 pages)

### [LCD TV Toshiba 40BV701B User Manual](#)

(48 pages)

### [TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

### [TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

### [LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

### [Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

### [Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

### [Storage Toshiba MK1031 Installation Notes](#)

(4 pages)

### [TV Toshiba 32A14 Service Manual](#)

Color television (30 pages)

### [TV Toshiba 42RV635DB Owner's Manual](#)

Rv digital series (49 pages)

### [TV Toshiba 28L110U Instruction Manual](#)

28"/32" 720p 60hz led tv (89 pages)

### [TV Toshiba 32Z13B Service Manual](#)

(40 pages)

### [TV Toshiba 28 Series Owner's Manual](#)

(20 pages)

## Summary of Contents for Toshiba 32BV501B

### [Page 1: User Manual](#)

"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 1

32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 1 User

Manual DIGITAL Series - 1 - 03.10.2011 18:45:45 03.10.2011 18:45:45...

### [Page 2: Digital Switchover](#)

Television in the UK is going digital, bringing us all more choice and new services. Starting in late 2007 and ending in 2012, television services in the UK will go completely digital, TV region

by TV region. Please see above to find out when your area switches to digital.

### [Page 3: Re-Tuning: Toshiba Freeview Products](#)

You must allow the television to complete the search. \* This process may affect any saved information stored on your product. Please consult your instruction manual or contact the manufacturer using the details above. TOSHIBA Customer Helpline: 0844 856 0730 TOSHIBA Online Support: [www.toshiba.co.uk/tv-dvd-support](http://www.toshiba.co.uk/tv-dvd-support) 32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 3 32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 3...

### [Page 4: Manual Re-Tuning](#)

If your Freeview TV or box picks up a different regional service to your preferred service (e.g. BBC England instead of BBC Scotland, or ITV Central instead of ITV Anglia), you can use this manual re-tune if you are missing some services you may fi...

[Page 5](#) 4 ) Write down the "RF Channel" numbers for your transmitter using the Group boxes here: 5 ) Press MENU and use ◀ or ▶ to select Install and Retune. 6 ) Select Manual Channel Scan from the Installation menu and press OK. 7 ) Select Search Type as Digital by using ◀...

### [Page 6: Table Of Contents](#)

Contents Digital Switchover ... 2 Re-tuning: TOSHIBA Freeview Products ... 3 Manual Re-tuning ... 4 Safety Precautions ... 8 Air Circulation ... 8 Heat Damage... 8 Mains Supply ... 8 Warning ... 8 Do ... 8 Do not ... 8 Installation and Important Information ...

[Page 7](#) Mode... 44 Appendix D: PIN Information ... 44 Specifications and Accessories ... 45 License Information ... 46 Questions and Answers ... 47 Toshiba One (1) Year Limited Warranty For TV's (the "Products")... 49 32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 7 32BV501B\_MB60\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910uk)\_10072937\_10074859.indd 7 - 7 - 03.10.2011 18:45:50...

### [Page 8: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equip- ment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

### [Page 9: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal opera- tion or misuse of the product.

### [Page 10: Important Safety Information](#)

Important safety information USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL. Headphone Warning Loud music can damage your hearing irreversibly. Do not set the volume to a high level when listening through headphones, particularly for extended listening periods.

[Page 11](#) Important safety information (continued) • This set should only be connected to an 220-240V AC 50Hz mains power supply. Do not attempt to connect it to any other type of supply. • The socket outlet must be installed near the equipment and is easily accessible.

### [Page 12: Removing The Pedestal Stand](#)

Removing the pedestal stand (1) Carefully lay the front of the TV face down on a flat, cushioned surface such as a quilt or blanket. Leave the stand protruding over the edge of the surface. Note: Extreme care should always be taken when removing the pedestal stand to avoid damage to the LCD panel.

### [Page 13: The Remote Control](#)

Simple at-a-glance reference of your remote control. Inserting Batteries and Effective Range of the Remote Control Remove the back cover to reveal the battery compartment and make sure

the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V. Do not combine a used, old battery with a new one or mix battery types.

## [Page 14: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. Aerial cable:... Connect the aerial to the ANT. socket on the rear of the TV. SCART lead:... If you use a decoder\* or a media recorder, it is essential that the scart cable is connected to the TV.

## [Page 15: Connecting An Hdmi® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI® or DVI Device to the HDMI Input The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic...

## [Page 16: Connecting A Computer](#)

Connecting a Computer To Connect a Computer With either an RGB/PC or an HDMI connection, you can watch your computer's display on the television and hear the sound from the television's speakers. When connecting a PC to the VGA input on television, use an analogue RGB (15-pin) computer cable and use the SIDE AV socket with a PC audio cable (not supplied) for audio connection, using the supplied SIDE AV connection cable's...

## [Page 17: Connecting A Usb Memory](#)

Connecting a USB Memory Connect a USB Memory • You can connect a USB memory to your TV by using the USB input of the TV. This feature allows you to display/play music, photo or video files stored in a USB memory.

## [Page 18: Power Save Mode](#)

• This television is designed to consume less energy to save environment. • You not only help to save the environment but also can save money by reducing electricity bills, thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: •...

## [Page 19: Controlling The Tv](#)

• Press + - buttons at the same to view main menu and use - P/CH + to navigate and + NOTE: The USB socket has limited functionality, and Toshiba can take no responsibility for damage to other connected equipment.

## [Page 20: Initial Installation](#)

Before switching on the television put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote IMPORTANT: Ensure that the aerial is connected and a Common Interface module is not inserted before switching on the TV for the fi...

## [Page 21: Auto Tuning](#)

Auto Tuning As new services are broadcast, it will be necessary to retune the television in order to view them. • Auto Tuning will completely retune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added.

## [Page 22: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Manual Search The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. • Select Manual Search from the Installation menu and press OK.

## [Page 23: General Operation](#)

Stereo and Bilingual Transmissions If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time positions are changed, disappearing

after a few seconds. If the broadcast is not in stereo, the word Mono will appear. Stereo.....

### [Page 24: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List The channel order may be changed to suit your personal preference. • Select Channel List from the main menu and press OK button.

### [Page 25: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press INFO button. The information screen will appear giving details of the channel and programme currently being viewed. • Whenever you change channel, the TV displays the broadcast picture along with an information banner at the bottom of the screen (available only in DTV mode).

### [Page 26: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Select Language from Setup menu and press to view this menu. Press the BACK button on the remote control to exit. Preferred These settings will be used if available. Otherwise the current settings will be used.

### [Page 27: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Press MENU button and select the Settings by using Left or Right button. Press OK button to view Settings menu.

### [Page 28: Confi Guring Picture Settings](#)

Confi guring Picture Settings You can confi gure picture settings of your TV by using Picture Settings menu. Confi guring Picture Settings You can use different picture settings in detail. You can customize current picture mode settings as desired. For example you change items such as, Brightness, Contrast, Colour, Sharpness and Hue.

### [Page 29: Noise Reduction](#)

Confi guring Picture Settings - Noise Reduction Press MENU button and select picture by using Left or Right button. Press Up or Down to select noise reduction. Sometimes some words or picture elements to become distorted or pixelated. Using the Noise Reduction feature reduces this effect by smoothing out the edges.

### [Page 30: Changing Picture Format](#)

Changing Picture Format Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press SCREEN button repeatedly to select between Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic or Cinema. When auto is selected the format being displayed is determined by the picture being broadcast. "Note: Using the special functions to change the size of the displayed image (i.e.

### [Page 31: Confi Guring Pc Picture Settings](#)

Confi guring PC Picture Settings You can set PC Mode picture settings when using the TV as a PC monitor. PC Picture Settings (\*) (\*) While in VGA/PC mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in VGA/ PC mode.

### [Page 32: Confi Guring Sound Settings](#)

Confi guring Sound Settings You can confi gure sound settings of your TV by using Sound Settings menu. Confi guring Sound Settings Sound settings can be confi gured according to your personal preferences. Press MENU button and select the Sound icon by using Left or Right button.

### [Page 33: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Confi guring Your TV's Settings Detailed settings can be configured to suit your personal preferences. Viewing Settings Menu Press MENU button and select Settings icon by using Left or Right button. Press OK button to view Settings menu.



## [Page 34: Setting Timers, Setting Date/Time](#)

Setting Timers, Setting Date/Time • The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted. Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.

## [Page 35: Source Settings, Other Controls](#)

Source Settings, Other Controls Configuring Source Settings You can enable or disable selected source options. The TV will not switch to the disabled source options when SOURCE button is pressed. • Select Sources in the Settings menu and press OK button.

## [Page 36: Other Controls](#)

Backlight Press MENU button and select settings by using Left or Right button. Press OK to continue. Use Up or Down to select others settings and then press OK. Select Backlight using Up or Down buttons and use Left or Right to set. This setting controls the backlight level.

## [Page 37: Txt Language](#)

Other Controls - TXT Language Press MENU button and select settings by using Left or Right button. Press OK to continue. Use Up or Down to select others settings and then press OK. Select TXT Language using Up or Down buttons and use Left or Right to set.

## [Page 38: Usb Media Browser](#)

USB Media Browser This TV allows you to enjoy photo, video or music files stored on a USB device. Manual Start • To display Media Browser window, you can press MENU button on the remote control and then select Media Browser by pressing Left or Right button.

## [Page 39: Viewing Jpg Files](#)

USB Media Browser - This TV allows you to enjoy photo, video or music files stored on a USB device. Viewing JPG Files To view photo files from a USB disk, you can use this menu screen. When you select Photos from Media Browser, available image files...

## [Page 40: Video Playback](#)

USB Media Browser - This TV allows you to enjoy photo, video or music files stored on a USB device. Video Playback When you select Videos from Media Browser, available video files will be filtered and listed on this screen.

## [Page 41: Analogue Text Services](#)

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press and enter the sub-page numbers 01,02,03 etc.

## [Page 42: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The display has a maximum resolution of 1360 x 768. The following table is an illustration of some of the typical video display modes. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

## [Page 43: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) (SCART) SIDE AV Note: In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## [Page 44: Appendix C: Supported File Formats For Usb Mode](#)

Appendix C: Supported File Formats for USB Mode file extension containers .mpg .mpeg .mpe .avi File Media Extension Video Music .mp3 Baseline JPEG Photo .jpg Progressive JPEG Appendix

D: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket.

### [Page 45: Specifications And Accessories](#)

Specifications and Accessories Broadcast Systems/Channels DVB-T, MPEG2 Video Input Stereo Nicam External Connections 1-SCART 1 Input 2-SCART-S (via SCART 1) Input 3-YPbPr (via VGA) Input 4-SIDE AV Input 5-HDMI 1/2 Input 6-PC Input 7-Digital Audio Output 8-YPbPr Input USB Port Media Browser Interface Version: USB 2.0 USB Class: Mass Storage File System: FAT32...

### [Page 46: License Information](#)

License Information • • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • • DVB is a registered trademark of the DVB Project. •...

### [Page 47: Questions And Answers](#)

Questions and Answers Questions Why is there no sound or picture? Check the TV is not in standby mode. Check the mains plug and all mains connections. Why is there a picture but no sound? Check the volume has not been turned down or that sound mute has not been selected.

[Page 48](#) Questions Below are the answers to some of the most common queries. For more information go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why doesn't the Media Browser feature operate? Make sure that USB is connected correctly. Incorrect behaviour may occur with a USB Hub connection.

### [Page 49: Toshiba One \(1\) Year Limited Warranty For Tv's \(The "Products"\)](#)

(1) year from the date of original purchase when brand new ("Warranty Period"). 3. If a failure or defect covered by the warranty arises and a valid claim is received by Toshiba within the Warranty Period, Toshiba shall at its option and to the extent permitted by law, repair or replace the machine or any components free of charge or refund the purchase price of the Product.

This manual is also suitable for:

[Digital series](#)