



Toshiba SD4010KB Owner's Manual

Upscaling dvd player with divx

1

2

3

4

5

6

7

Table Of Contents

8

9

10

11

12

13


14

15

16

17

18
19
20
21
22
23
24
25
26
27
28

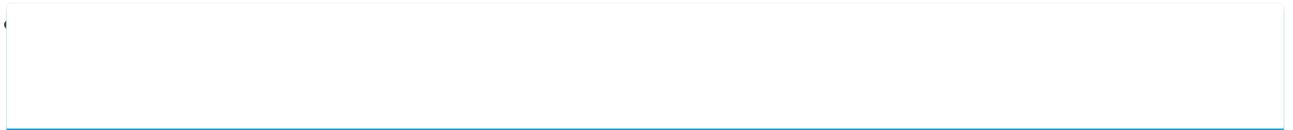

•


•

Bookmarks

Quick Links

[1 Connecting to a Display](#)

[Download this manual](#)

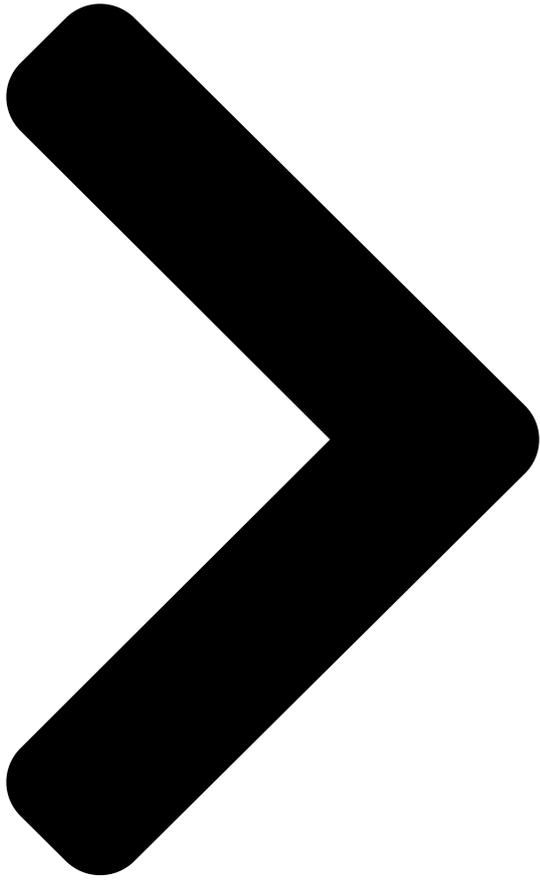

DVD PLAYER

TOSHIBA
SD4010KB

OWNER'S MANUAL

© 2010 Toshiba Corporation
DIGITAL VIDEO
Introduction



Connections

Basic playback

Function setup

Others

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD4010KB

[DVD Player Toshiba SD-4010 Owner's Manual](#)

(28 pages)

[DVD Player Toshiba SD-4000KU Owner's Manual](#)

Sd-4000ku user's guide (36 pages)

[DVD Player Toshiba SD-400V Owner's Manual](#)

Toshiba dvd video player owner's manual sd-400v, sd-k600 (51 pages)

[DVD Player Toshiba portege SD-4000 Specification Sheet](#)

Toshiba progressive scan dvd player specification sheet (2 pages)

[DVD Player Toshiba SD-4000KU Owner's Manual](#)

(44 pages)

[DVD Player Toshiba SD-6000KU Owner's Manual](#)

(44 pages)

[DVD Player Toshiba SD-K600 Owner's Manual](#)

(51 pages)

[DVD Player Toshiba SD-K600KR Owner's Manual](#)

(51 pages)

[DVD Player Toshiba SD-400V Owner's Manual](#)

Dvd video player (51 pages)

[DVD Player Toshiba SD4015KE Owner's Manual](#)

Toshib dvd player (28 pages)

[DVD Player Toshiba SD-4990SU Owner's Manual](#)

Sd-4990su user's guide (52 pages)

[DVD Player Toshiba SD-4990SU Owner's Manual](#)

Dvd video player (52 pages)

[DVD Player Toshiba SD4300 Owner's Manual](#)

Sd4300 user's guide (28 pages)

[DVD Player Toshiba SD-480EKE Owner's Manual](#)

Dvd player (40 pages)

[DVD Player Toshiba SD4200KC Owner's Manual](#)

(28 pages)

[DVD Player Toshiba SD-470EKE Service Manual](#)

(34 pages)

Summary of Contents for Toshiba SD4010KB

[Page 1: Dvd Player](#)

DVD PLAYER SD4010KB OWNER'S MANUAL © 2010 Toshiba Corporation DIGITAL VIDEO
Introduction Connections Basic playback Function setup Others...

[Page 2: Introduction](#)

"This product is marked with "CE" and complies therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC." Responsible for CE-marking is TOSHIBA INFORMATION SYSTEMS (U.K.) LTD, Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge,...

[Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS Read these instructions. Keep these instructions. Read all warnings. Follow all instructions. Do not use this appliance near water. Clean only with a dry cloth. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifi...

[Page 4: General Information](#)

Introduction IMPORTANT SAFETY INSTRUCTIONS SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. So, please read the points below for your own safety.

[Page 5: Precautions](#)

IMPORTANT The wires in this mains lead are coloured in accordance with the following code: BLUE: NEUTRAL BROWN: LIVE As the colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.

[Page 6: Notes On Discs](#)

Introduction PRECAUTIONS Notes on moisture condensation Moisture condensation damages the DVD player. Please read the following carefully. Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.

[Page 7: Notes On Region Numbers](#)

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this DVD player will successfully play every disc bearing the DVD and CD logos. If you happen to experience any difficulty playing a DVD and/or CD disc on this DVD player, please contact Toshiba Customer Service.

[Page 8: Table Of Contents](#)

Introduction Table of Contents Introduction SAFETY PRECAUTIONS ... 2 IMPORTANT SAFETY INSTRUCTIONS ... 3 PRECAUTIONS ... 5 NOTES ON DISCS ... 6 Notes on region numbers ... 7 Table of Contents ... 8 Identification of Controls ... 9 Front panel ...9 Rear panel ...9 DVD display ...9 Using the Remote Control ...

[Page 9: Identification Of Controls](#)

Identification of Controls See the page in for details. Front panel Rear panel Power Cord AV (SCART) socket DVD display The indicators vary depending on the kinds of discs you play. No disc Bad disc DVD VIDEO VIDEO CD •...

[Page 10: Using The Remote Control](#)

Introduction Using the Remote control Loading batteries Open the cover. Insert batteries (R03/AAA size). Make sure to match the + and - on the batteries to the marks inside the battery compartment. Caution • Never throw batteries into a fire. Notes •...

[Page 11: Remote Control](#)

Remote control The instructions in this manual describe the functions on the remote control. See the page in VIDEO OUT button 13 * RETURN button Return to menu display for VCD (2.0) discs with menu (PBC should be ON). MUTE VIDEO OUT * MENU button Use the MENU button to display the menu included on...

[Page 12: Names And Functions](#)

Introduction Names and functions 1. OPEN/CLOSE button • Press the button to open/close the disc tray. • The function is the same as the OPEN/CLOSE button on the front panel. 2. ON/STANDBY button Turn the unit on or set the unit to standby mode. 3.

[Page 13](#) To change the programmed selections, use to move the highlighted bar to the item you want to change and press CLEAR, then input the new number. • Press to move the highlighted bar to then press PLAY or ENTER to start playback. •...

[Page 14](#) Introduction 25.DISPLAY button Press to view the operational status. DVD Information display e.g. 1) Press DISPLAY while a disc is playing, the first banner shows the title, chapter information and the elapsed time display of the current chapter. 2) Press DISPLAY again for Audio language, Subtitles and Camera angle information.

[Page 15: Connections](#)

Connecting to a TV Connect the DVD player to your TV. Connecting to a TV (Using the SCART socket) Normal TV SCART cable (not supplied) Connecting to a TV (Using the phono type jacks) Normal TV T o audio T o video input input (yellow)

[Page 16: Connecting To A Display](#)

Connections About HDMI HDMI (High Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD players, DTV, set-top boxes, and other AV devices. HDMI was developed to provide the technologies of High Bandwidth Digital Content Protection (HDCP) as well as Digital Visual Interface (DVI) in one specifi...

[Page 17: Connecting To Optional Equipment](#)

Content of the output for each output jack is shown in the following table and differ depending on the On-Screen Display Setting: On-Screen Display Setting "Video" HDMI Output Setting Setting Invalid 576p/480p 576p/480p 720p HDMI 1080i 1080p * Settings for HDMI output format are performed using the HDMI button on the remote control or HDMI SELECT button on the front panel.

[Page 18: Connecting To An Amplifier Equipped With A Dolby](#)

Connections Connecting to Optional Equipment (continued) Connecting to an amplifier equipped with a Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVDs with this dynamic realistic sound by connecting the DVD player to a 6 channel amplifier...

[Page 19: Dts Decoder](#)

Connecting to an amplifier equipped with a DTS ® DTS is a high quality surround technology used in theaters and now available for home use, on DVDs or audio CDs. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVDs or audio CDs.

[Page 20: Basic Playback](#)

Basic playback Playing a Disc This section shows you the basics on how to play a disc. Basic playback Preparations • When you want to view a disc, turn on the TV and select the video input connected to the DVD player. •...

[Page 21: Playing Mp3/Divx /Jpeg Files](#)

C0005 C0006 content, including music files, in any format, including the C0007 MP3 formats, prior to the downloading thereof. Toshiba RETURN ENTER MENU has no right to grant and does not grant permission to download any copyrighted content.

[Page 22](#) Basic playback Playing MP3/DivX ® Playing MP3/DivX /JPEG Files (continued) ABOUT DIVX VIDEO : DivX ® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your fi...

[Page 23: Customizing The Function Settings](#)

Customizing the Function Settings You can change the default settings to customize performance to your preference. Using the Language setup menu 1. Press SETUP during stop, the system setup menu appears. 2. Press button to select the setting item: Language, Subtitle, Audio, DVD Menu or DivX Subtitle.

[Page 24: Function Setup](#)

Function setup Customizing the Function Settings (continued) Notes • The displayable picture size is preset on the DVD. Therefore, the playback picture of some DVDs may not conform to the picture size you select. • When you play DVDs recorded in the 4:3 picture size only, and you own a 16:9 TV set, Video output picture will be 16:9 only when you select the TV picture setting on the TV.

[Page 25: Using The Tv System Setup Menu](#)

1) Press button to select the Parental lock option, then press button. 2) Press button to select parental lock level and then press the ENTER button. 3) Press button to select the Password option, then press button. Enter your 4-digit security code and then press the ENTER button.

[Page 26: Others](#)

Others Before Calling Service Personnel Check the following guide for the possible cause of a problem before contacting service. Symptoms and correction Symptom Cause No power. • The power plug is disconnected. The DVD player turned off • The automatic power off function turned the unit off.

[Page 27: Specifications](#)

Others Specifications DVD player / outputs / supplied accessories DVD Player Power supply Power consumption Mass External dimensions Signal system Laser Frequency range Signal-to-noise ratio Audio dynamic range Harmonic distortion Wow and flutter Operating conditions Outputs Video output (SCART with RGB) Video output Audio output (SCART) Audio output (COAXIAL DIGITAL)

[Page 28](#) Following information is only for EU-member states: The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This manual is also suitable for:

[Co60pm](#)