

Base Frequency - Toshiba VFNC3-2001P Instruction Manual

Industrial inverter

1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243



•

[Table of Contents](#)

•

Bookmarks





5.10 Base frequency

□□ : Base frequency 1

□□□ : Base frequency voltage 1

- Function

Sets the base frequency and the base frequency voltage in conformance with load specifications or the Base frequency.

Note: This is an important parameter that determines the constant torque control area.

Title

□□



□□□

* Depends upon the setup menu settings. 50.0 or 60.0 (Hz) is selected for □□, and 200, 220, or 230 (V) is selected for □□□.

TOSHIBA

Base frequency voltage

□□□

0

Function

Base frequency 1

Base frequency voltage1

□□

Adjustment range

20.0-400.0 (Hz)

50-330 (V)

E-16

E6581595

Output frequency (Hz)

Factory default setting

*

*



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
95
96
97
98
99
100
101
102

Related Manuals for Toshiba VFNC3-2001P

[Inverter Toshiba TOSVERT VF-nC3 Instruction Manual](#)

(254 pages)

[Inverter Toshiba TOSVERT VF-nC3 Instruction Manual](#)

Industrial inverter for 3-phase induction motors (243 pages)

[Media Converter Toshiba TOSVERT VF-nC3 Instruction Manual](#)

(66 pages)

[Inverter Toshiba TOSVERT VF-nC3 Manual](#)

Variable speed drive (11 pages)

[Inverter Toshiba TOSVERT VF-nC1 Instruction Manual](#)

Industrial inverter (for three-phase inductive motors) (143 pages)

[Inverter Toshiba TOSVERT VF-nC3E Instruction Manual](#)

Industrial inverter (for 3-phase induction motors) (253 pages)

[Inverter Toshiba VF-NC3C Instruction Manual](#)

(212 pages)

[Inverter Toshiba Tosvert VF-S11 Instruction Manual Supplement](#)

Toshiba tosvert vf-s11 totally-enclosed box type inverter (8 pages)

[Inverter Toshiba TOSVERT VF-S11 Instruction Manual](#)

Industrial inverter (for 3-phase induction motors) (87 pages)

[Inverter Toshiba TOSVERT VF-AS1 Instruction Manual](#)

(326 pages)

[Inverter TOSHIBA TOSVERT VF-AS1 Instruction Manual](#)

The new high-performance inverter tosvert (313 pages)

[Inverter Toshiba VF-PS1 Instruction Manual](#)

Variable torque inverter (307 pages)

[Inverter Toshiba TOSVERT VF-AS3 Manual](#)

(69 pages)

[Inverter Toshiba TOSVERT VF-S15 Function Manual](#)

(80 pages)

[Inverter Toshiba VF-S15 Instruction Manual](#)

Industrial inverter for 3-phase induction motors (217 pages)

[Inverter Toshiba TOSVERT VF-AS3 Instruction Manual](#)

High-performance industrial inverter for 3-phase motors 280/480v class 0.4 to 55/280kw (242 pages)

Related Content for Toshiba VFNC3-2001P

[TOSVERT VF-PS1 Base Frequency](#)

[Toshiba TOSVERT VF-PS1](#)

[VF-S15 Base Frequency](#)

[Toshiba VF-S15](#)

[VF-S15 Base Frequency](#)

Toshiba VF-S15

[TOSVERT VF-AS1 Base Frequency](#)

Toshiba TOSVERT VF-AS1

[VF-PS1 Base Frequency](#)

Toshiba VF-PS1

[TOSVERT VF-MB1 Base Frequency](#)

Toshiba TOSVERT VF-MB1

[Tosvert VF-AS1 Base Frequency](#)

Toshiba Tosvert VF-AS1

[TOSVERT VF-AS1 Base Frequency](#)

Toshiba TOSVERT VF-AS1

This manual is also suitable for:

[Tosvert vf-nc3Vfnc3-2007pVfnc3-2015pVfnc3-2037pVfnc3s-1001pFnc3s-1004p](#) ... [Show all](#)