



Asus XG-U2008 - 2-Port 10GBASE-T+8-Port Gigabit Unmanaged Switch Quick Start Guide

Contents

- 1 Getting to Know Your Switch
- 2 Connecting Devices to Your Switch
- 3 Mounting Your Switch on a 19-inch Rack (Optional)
- 4 Documents / Resources
 - 4.1 Download manual

Getting to Know Your Switch

1. Power LED. This LED lights white when the switch is receiving power.
2. Status LED (1G). This LED blinks white when the port is activating and data is being transmitted or received.
3. Status LED (10G). This LED blinks blue when the port is activating and data is being transmitted or received at 10Gbps. This LED blinks white when the port is activating and data is being transmitted or received at 1Gbps.
4. Status LED (10G - left). This LED lights green when the RJ45 port is connected and enabled. This LED blinks green when

the data is transmitted or received.

5. Status LED (10G - right). This LED lights green when the 10 Gbps link is available and the RJ45 port is enabled. This LED lights amber when the cable is not good for 10G-BaseT access.
6. Status LED (1G - left). This LED lights green when the RJ45 port is connected and enabled. This LED blinks green when the data is transmitted or received.
7. Status LED (1G - right). This LED lights green when the 1 Gbps link is available and the RJ45 port is enabled.
8. Power Button. Press this button to power on or off the system.
9. Power (DC-IN) port. Insert the bundled AC adapter into this port and connect your switch to a power source.

Connecting Devices to Your Switch

1. Connect the power cord.
2. Connect your devices.
3. Check the LED indicators for the status of the switch and the network.

Mounting Your Switch on a 19-inch Rack (Optional)

1. Attach the mounting bracket to the bottom side of the switch with the screws that came with the package.
2. Secure the bracket to a 19-inch rack with suitable screws, which are not included in the package.

NOTE: Contact local Customer Service for more information about the optional mounting bracket.

Documents / Resources

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus XG-U2008 - 2-Port 10GBASE-T+8-Port Gigabit Unmanaged Switch Quick Start Guide](#)

Need Assistance?

Do you have a question about the XG-U2008 that isn't answered in the manual? Leave your question here.



Stay updated with the latest solutions
Submit your question

Related Manuals for Asus XG-U2008

[Switch Asus EBP15 Quick Setup Manual](#)

5-port gbe managed poe+ switch (2 pages)

[Switch Asus GX1026i User Manual](#)

Smart ethernet switch (26 pages)

[Switch Asus GX-D1081 Specification](#)

8-portgigabit ethernet unmanaged switch (4 pages)

[Switch Asus GigaX2124X User Manual](#)

Gigax series layer 2 managed switch (116 pages)

[Switch Asus GX2024B - GigaX Switch User Manual](#)

Layer 2 managed switch (102 pages)

[Switch Asus GigaX1008 Quick Installation Manual](#)

(5 pages)

[Switch Asus GigaX User Manual](#)

Layer 3 managed switch (137 pages)

[Switch Asus GX1108B Quick Installation Manual](#)

10/100/1000mbps gigabit ethernet switch (146 pages)

[Switch Asus GX1105N Quick Start Manual](#)

(146 pages)

[Switch Asus GIGAX1005 Quick Installation Manual](#)

Quick installation guide (6 pages)

[Switch Asus GigaX1005N User Manual](#)

(60 pages)

[Switch Asus GigaX 2008EX User Manual](#)

Layer 2 managed switch (71 pages)

[Switch Asus GigaX1024i+ User Manual](#)

Layer 2 smart plus switch (68 pages)

[Switch Asus GigaX1008 Quick Installation Manual](#)

Asus networking switch quick installation guide (6 pages)

[Save Article as PDF](#)