

 
Louver Position - Toshiba RAS-B22PKVSG-TR Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134



•

[Table of Contents](#)

•

Bookmarks



FILE NO. SVM-18033

Item

Operation flow and applicable data, etc.

Description

8. Louver control

Louver position in heating operation

Heating operation/

AUTO (HEAT)

Initial setting of "Heating storage position"


Louver : Directs downward (80.5°)

Wide air direction

Wide-angle

Right wide

Left wide

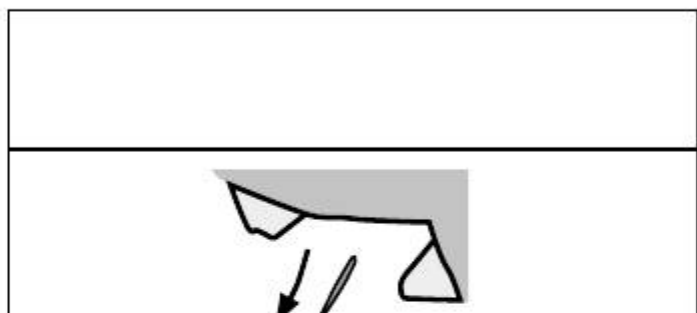

Spot air direction
Spot front
Spot right
Spot left
- 41 -

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
38
39
40
41
42
43
44
45

Chapters

Related Manuals for Toshiba RAS-B22PKVSG-TR

[Air Conditioner Toshiba RAS-18PAVSG-E Owner's Manual](#)

(168 pages)

[Air Conditioner Toshiba RAS-18PKVSG-E Service Manual](#)

(137 pages)

[Air Conditioner Toshiba RAS-B22PKVSG-E Installation Manual](#)

(22 pages)

[Air Conditioner Toshiba RAS-24PAVSG-E Installation Manual](#)

(18 pages)

[Air Conditioner Toshiba RAS-24PKVSG-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-5M34UAV-E1 Owner's Manual](#)

Toshiba split type air conditioners owner's manual (8 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-B22N3KV2-E1 Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-18J2KVSG-E Service Manual](#)

Indoor/outdoor unit, r32 inverter (144 pages)

[Air Conditioner Toshiba RAS-18J2KVSG-E Installation Manual](#)

(478 pages)

[Air Conditioner Toshiba RAS-24J2AVSG-E Owner's Manual](#)

(192 pages)

[Air Conditioner Toshiba RAS-B18G3KVSG-E Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24J2AVSG-E1 Owner's Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-24E2KVG-E Owner's Manual](#)

Inverter r32 or r410a, for general public use, indoor/outdoor unit (7 pages)

Related Content for Toshiba RAS-B22PKVSG-TR

[RAS-18S3KV-E Louver Position](#)

Toshiba RAS-18S3KV-E

[RAS-M07N4KVRG-E Louver Position](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Louver Position](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Louver Position](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Louver Position](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E Louver Position](#)

Toshiba RAS-B05BKVG-E

[RAS-B05E2KVG-E Louver Position](#)

Toshiba RAS-B05E2KVG-E

[RAS-M05J2KVSG-E Louver Position](#)

Toshiba RAS-M05J2KVSG-E

This manual is also suitable for:

[Ras-b24pkvsg-e](#)[Ras-22pavsg-e](#)[Ras-24pavsg-e](#)[Ras-b22pkvsg-e](#)[Ras-b24pkvsg-tr](#)[Ras-22pavsg-tr](#) ... [Show all](#)